



POWER SOURCE LOCATION

6801Z-01

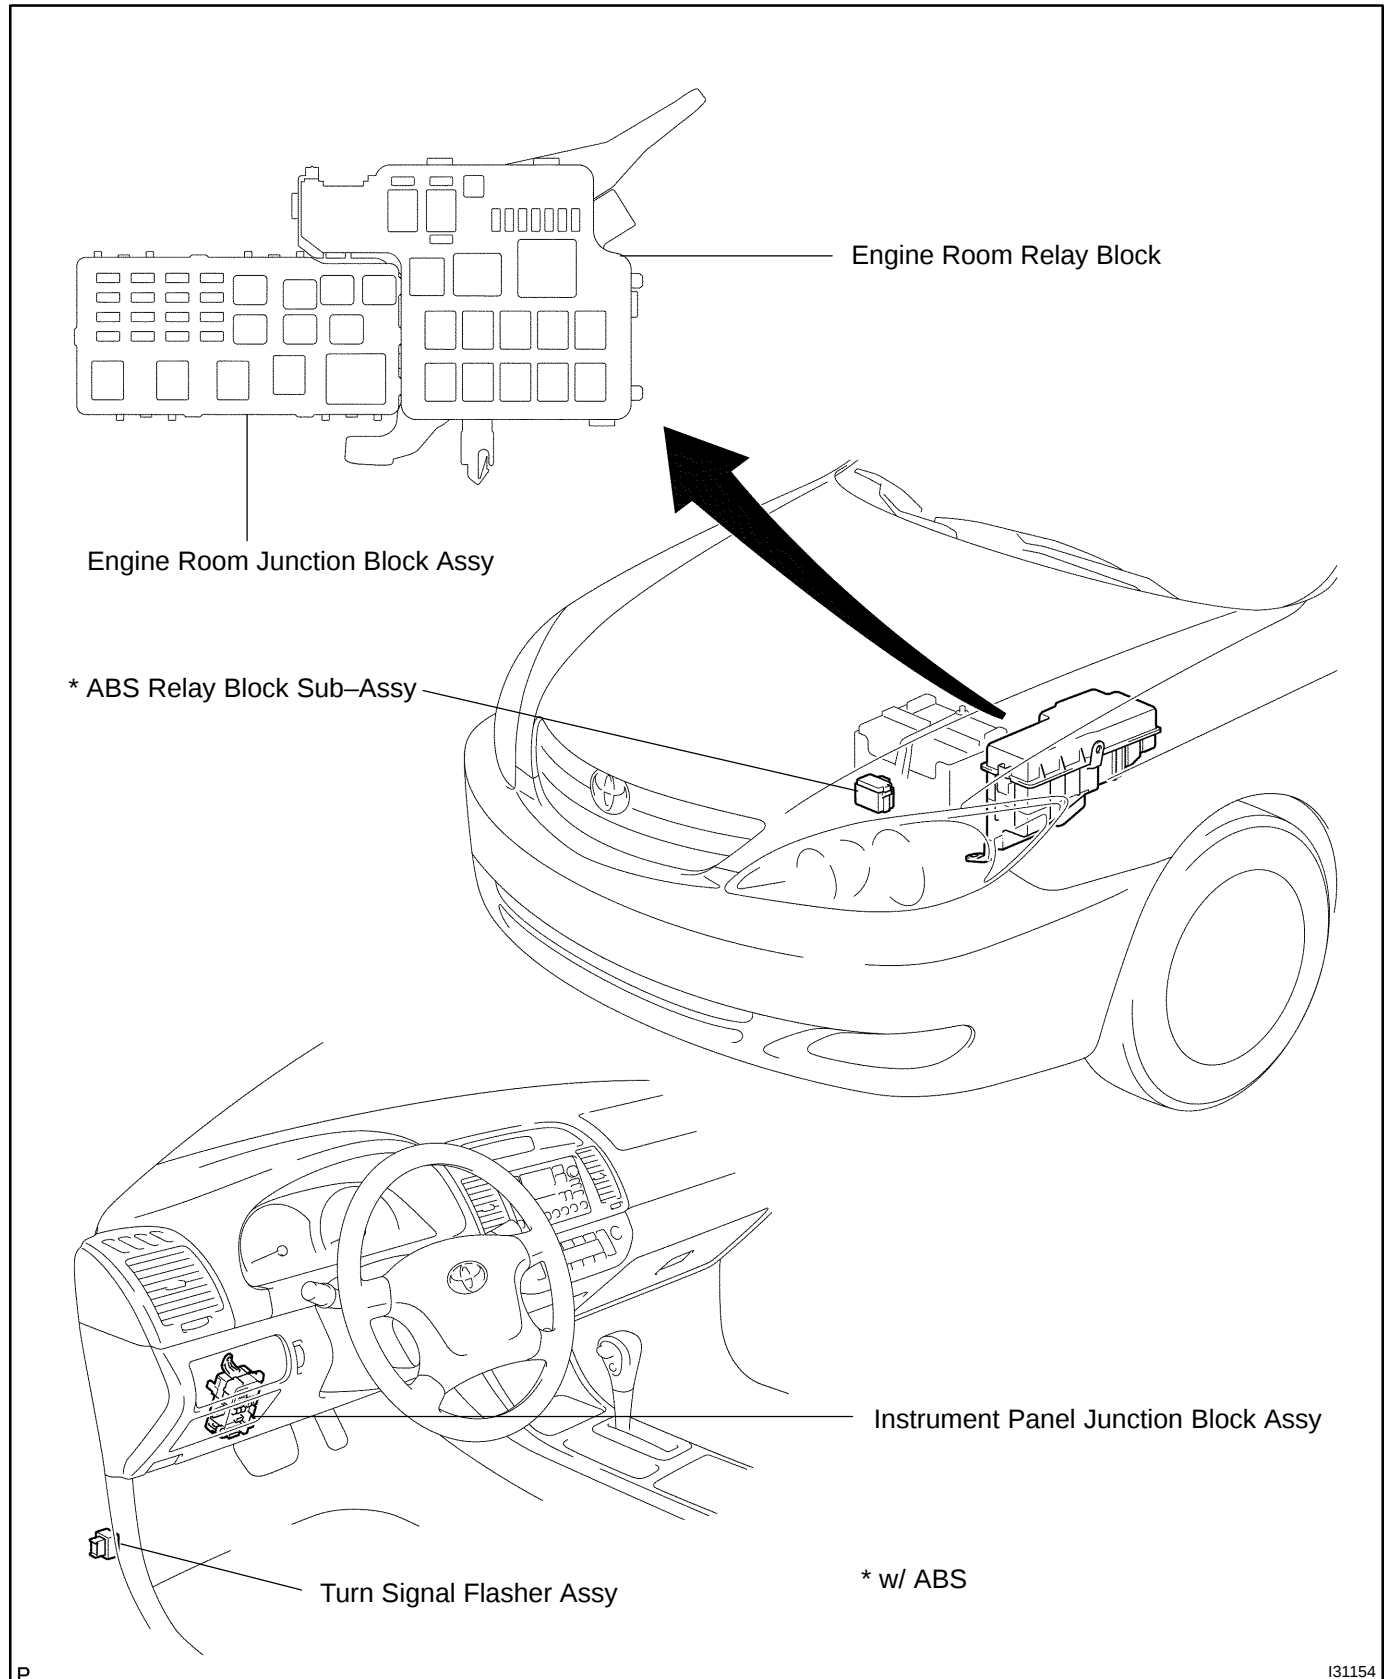

Engine Room Junction Block Assy

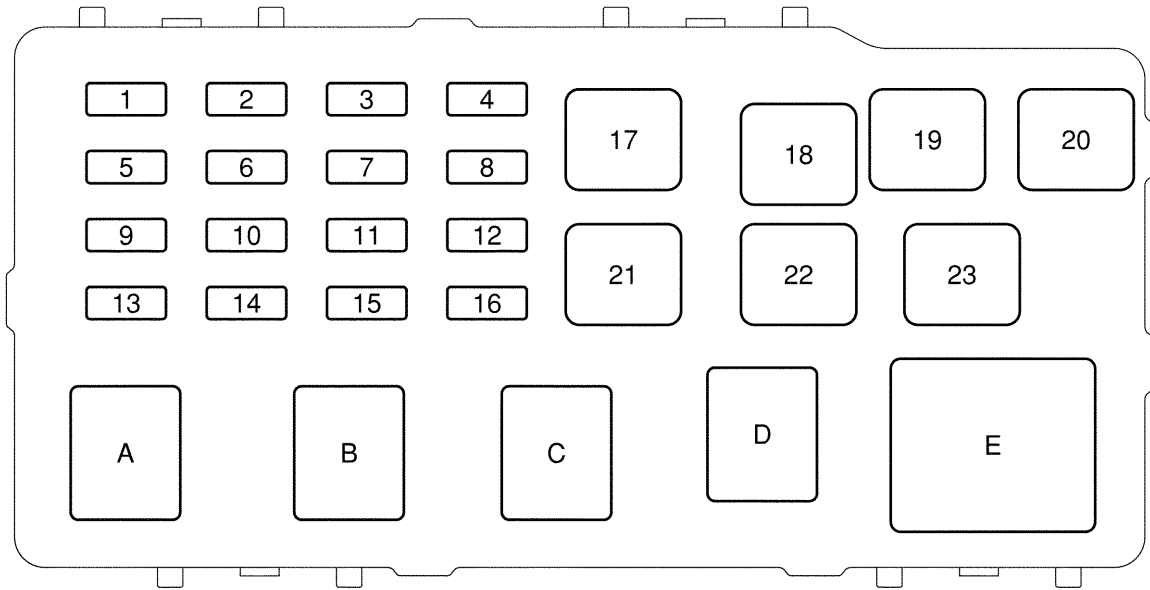


RELAY

- A EFI
- B HORN
- C C/OPN
- D FAN No. 1
- E HEAD

FUSE

1 A/ F	25 A	14 D.C.C	30 A
2 DOOR 1	25 A	15 IG 2	10 A
3 TEL	5 A	16 ST	5 A
4 AM 2	30 A	17 ADJ PDL	30 A
5 –		18 CDS	30 A
6 EFI	20 A	19 ABS No. 2	40 A
7 ALT-S	5 A	20 MAIN	40 A
8 HEAD LH UPR	10 A	21 ABS No. 3	40 A
9 ETCS	10 A	22 HTR	50 A
10 HORN	10 A	23 RDI	30 A
11 IGN	15 A		
12 HEAD RH UPR	10 A		
13 HAZ	15 A		

Engine Room Relay Block

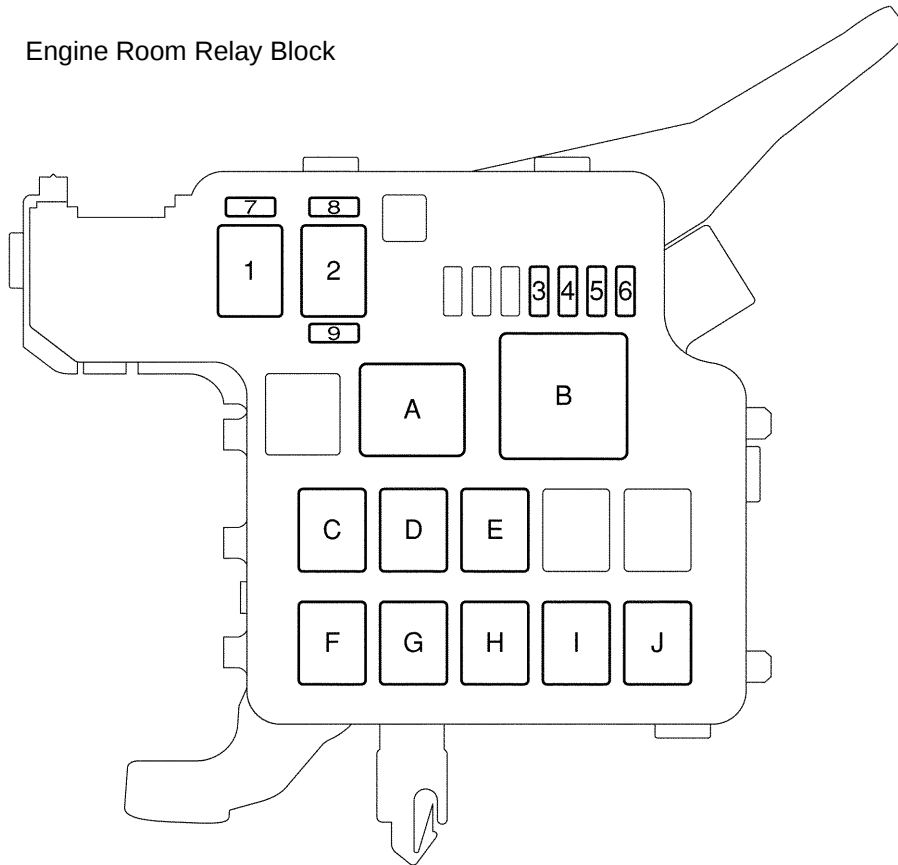

RELAY


A ST
B HTR
C FAN No. 2
D DRL No. 3
E DRL No. 2
F A/ F HTR (1MZ)
G MG CLT

H FAN No. 3
I ADJ PDL
J DRL No. 4

FUSE

1 ABS No.1 60 A
2 ALT 100 A (2AZ)
120 A (1MZ)
3 A/C 10 A
4 DRL 5 A
5 HEAD RH LWR 15 A
6 HEAD LH LWR 15 A
7 SPARE 5 A
8 SPARE 10 A
9 SPARE 15 A

ABS Relay Block Sub-Assy

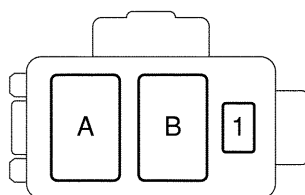


RELAY

A ABS MTR
B ABS SOL

FUSE

1 ABS No. 4 7.5 A

Instrument Panel Junction Block Assy

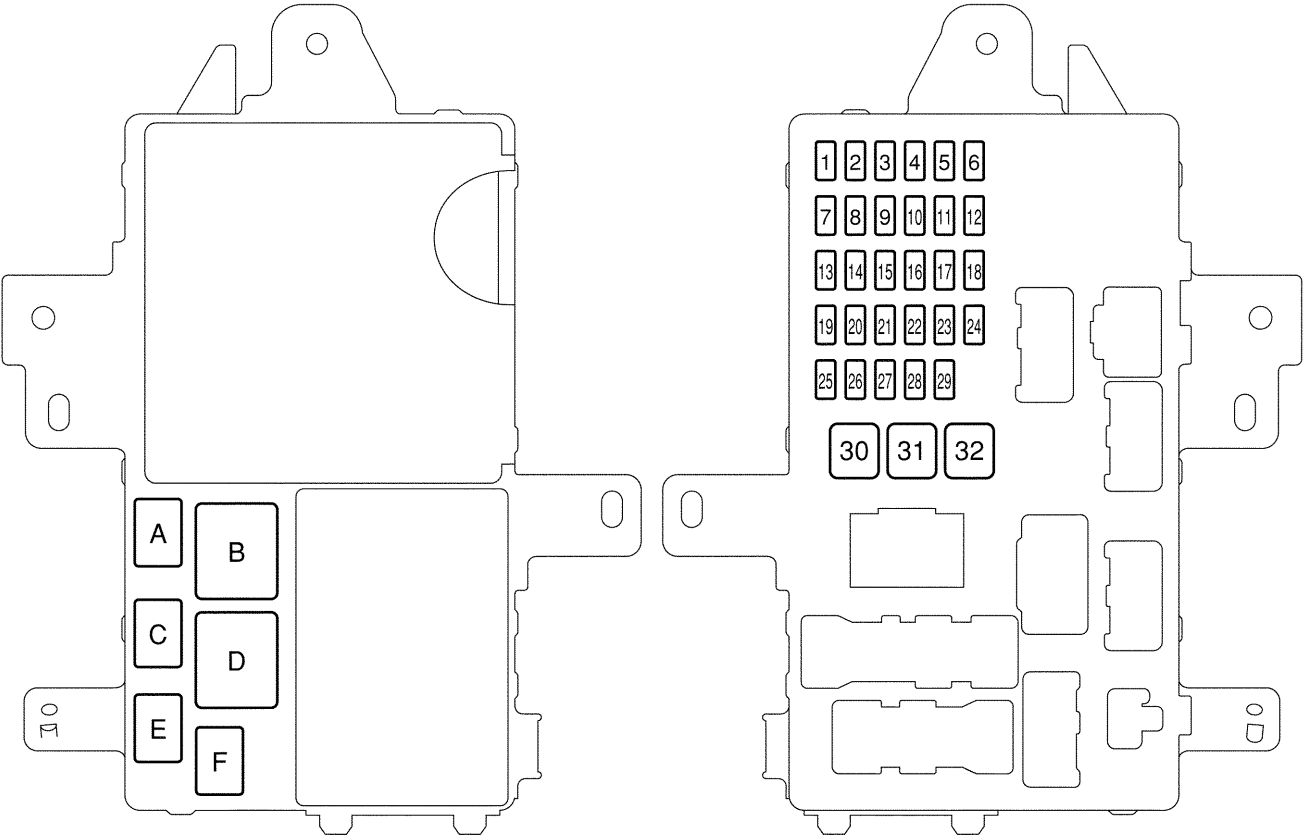

RELAY

FUSE

A FOG	1 ECU-B	10 A	12 MIR HTR	10 A	23 WASHER	15 A
B RR DEF	2 DOME	7.5 A	13 AM 1	5 A	24 FAN RLY	10 A
C TAIL	3 CIG	15 A	14 FOG	15 A	25 STOP	15 A
D IG 1	4 ECU-ACC	5 A	15 SUN-SHADE	15 A	26 FUEL OPN	5 A
E ACC	5 RAD No. 2	10 A	16 GAUGE 2	10 A	27 DOOR No. 2	25 A
F PWR	6 POWER POINT	15 A	17 PANEL	10 A	28 AMP	25 A
	7 RAD No. 1	20 A	18 TAIL	10 A	29 PWR No. 3	20 A
	8 GAUGE 1	10 A	19 PWR No. 4	20 A	30 PWR SEAT	30 A
	9 ECU-IG	10 A	20 PWR No. 2	20 A	31 PWR No. 1	30 A
	10 WIPER	25 A	21 OBD	7.5 A	32 DEF	40 A
	11 HTR	10 A	22 SEAT HTR	20 A		