


# IGNITION OR STARTER SWITCH ASSY REPLACEMENT

8001R-01


## 1. REMOVE INSTRUMENT PANEL SUB-ASSY LOWER (See page 71-12)

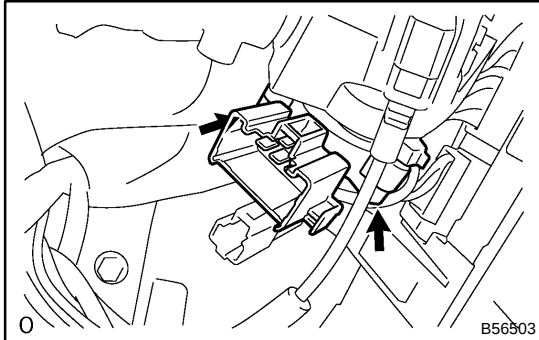

## 2. REMOVE IGNITION OR STARTER SWITCH ASSY

- (a) Disconnect the ignition switch connector and unlock warning switch connector.
- (b) Remove the clamp.
- (c) Remove the 2 screws and ignition switch.

INSPECTION

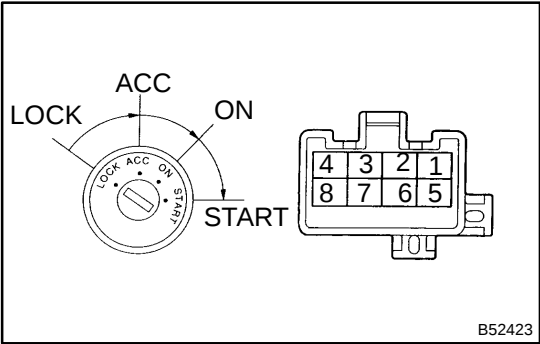

1. INSPECT IGNITION OR STARTER SWITCH ASSY

(a) Inspect the ignition switch continuity.

Standard:

| Switch position | Tester connection      | Specified condition |
|-----------------|------------------------|---------------------|
| LOCK            | –                      | No continuity       |
| ACC             | 2 ⇄ 3                  | Continuity          |
| ON              | 2 ⇄ 3 ⇄ 4<br>6 ⇄ 7     | Continuity          |
| START           | 1 ⇄ 2 ⇄ 4<br>6 ⇄ 7 ⇄ 8 | Continuity          |

If the continuity is not as specified, replace the switch.