


CRUISE CONTROL MAIN SWITCH ASSY REPLACEMENT


8201M-02

1. DISCONNECT BATTERY NEGATIVE TERMINAL
 2. REMOVE STEERING WHEEL COVER LOWER NO.2
 3. REMOVE STEERING WHEEL COVER LOWER NO.3(W/O STEERING PAD SWITCH 4 SPOKE STEERING WHEEL)
 4. REMOVE CONNECTOR COVER(W/ STEERING PAD SWITCH 4 SPOKE STEERING WHEEL)
(See page 82-5)
 5. REMOVE STEERING WHEEL COVER LOWER NO.3(3 SPOKE STEERING WHEEL ASSY)
 6. INSPECT PLACE FRONT WHEELS FACING STRAIGHT AHEAD
 7. REMOVE HORN BUTTON ASSY
(See page 60-15)
 8. REMOVE STEERING WHEEL ASSY
- SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
9. REMOVE STEERING PAD SWITCH(W/ STEERING PAD SWITCH 4 SPOKE STEERING WHEEL)
(See page 82-5)

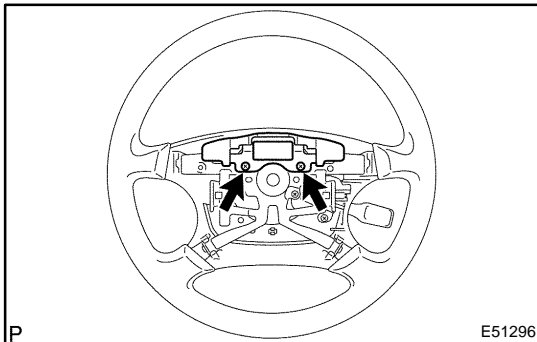


10. REMOVE CRUISE CONTROL MAIN SWITCH ASSY


- (a) 4 spoke steering wheel assy:
Remove the 2 screws and steering wheel damper.

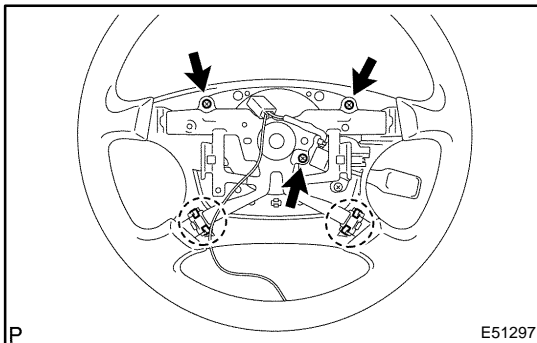


- (b) 4 Spoke steering wheel assy:
Remove the 3 screws.
- (c) 4 spoke steering wheel assy:
Disengage the 2 claws and remove the steering wheel boss cover LWR.

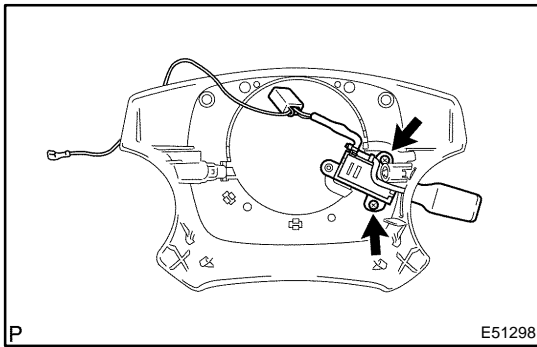


- (d) 4 spoke steering wheel assy:
Remove the 2 screws and cruise control main switch assy.

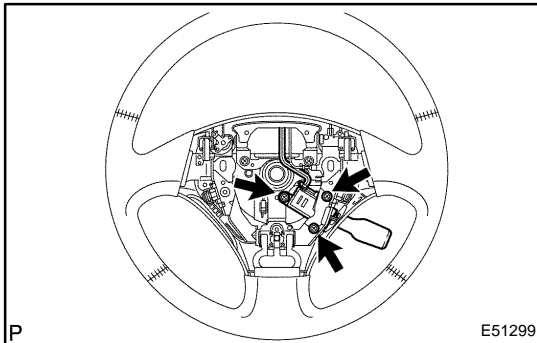

- (e) 3 spoke steering wheel assy:
Remove the 3 screws.

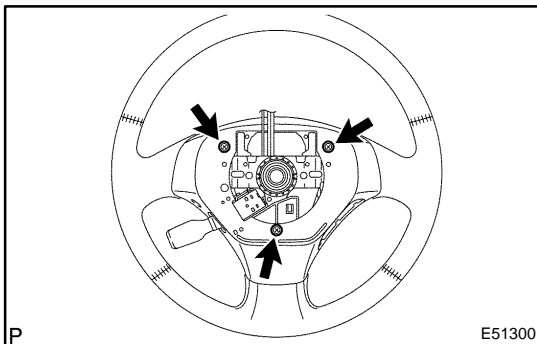

- (f) 3 spoke steering wheel assy:
Reverse the steering wheel, remove the 3 screws and cruise control main switch assy.

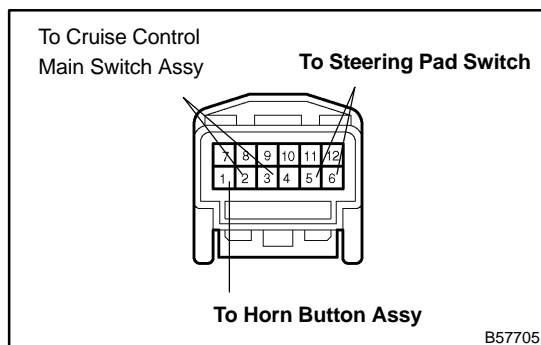

- (g) Disengage the wiring pins other than the cruise control main switch assy from the connector, and pull them out.


11. **CENTER SPIRAL CABLE**(See page 60-25)
12. **INSTALL STEERING WHEEL ASSY**
(See page 50-9 or 50-22)
13. **INSPECT STEERING WHEEL CENTER POINT**
(See page 50-9 or 50-22)
14. **INSPECT HORN BUTTON ASSY**
(See page 60-15)
15. **INSTALL HORN BUTTON ASSY**
(See page 60-15)

16. INSPECT SRS WARNING LIGHT

CLUTCH SWITCH ASSY REPLACEMENT

8201K-01

1. REMOVE FRONT DOOR SCUFF PLATE LH
(See page 71-12)
2. REMOVE COWL SIDE TRIM SUB-ASSY LH
(See page 71-12)
3. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER
(See page 71-12)
4. REMOVE INSTRUMENT PNL INSERT SUB-ASSY LWR LH(TMMK MADE)
(See page 71-12)

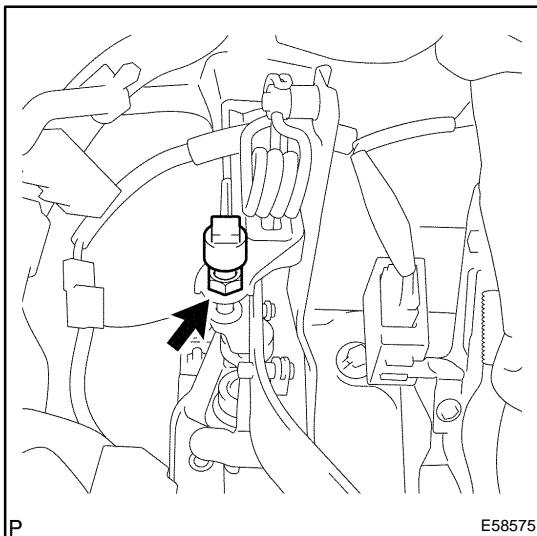


5. REMOVE CLUTCH SWITCH ASSY

- (a) Disconnect the connector.
- (b) Loosen the nut and remove the clutch switch assy.

STEERING PAD SWITCH REPLACEMENT

8201L-01

1. DISCONNECT BATTERY NEGATIVE TERMINAL(See page 60-1)
2. REMOVE STEERING WHEEL COVER LOWER NO.2

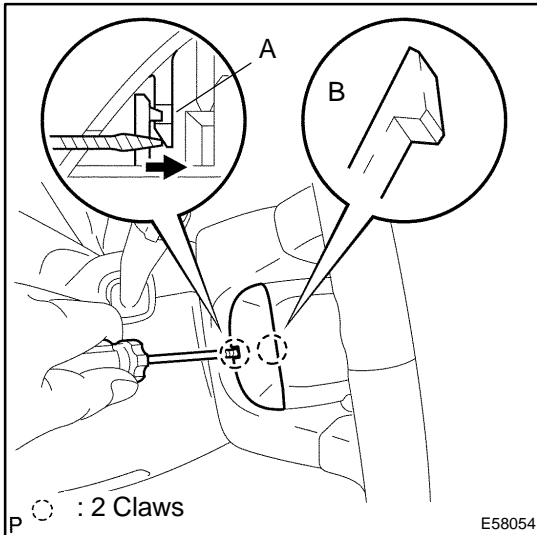

3. REMOVE CONNECTOR COVER


- (a) Using a screwdriver, disengage the claw(A).

HINT:

Tape the screwdriver tip, before use.


- (b) Disengage the claw(B) and remove the connector cover.

4. REMOVE HORN BUTTON ASSY (See page 60-15)

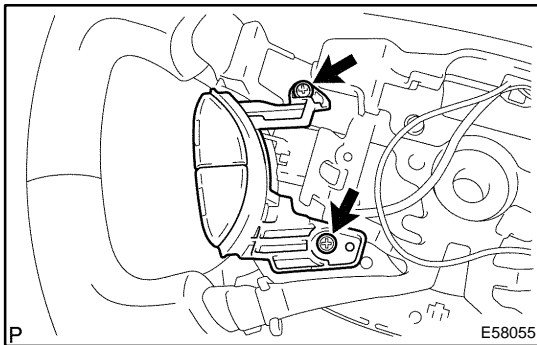

5. REMOVE STEERING PAD SWITCH

- (a) Disconnect the connector.
- (b) Remove the 2 screws and steering pad switch.

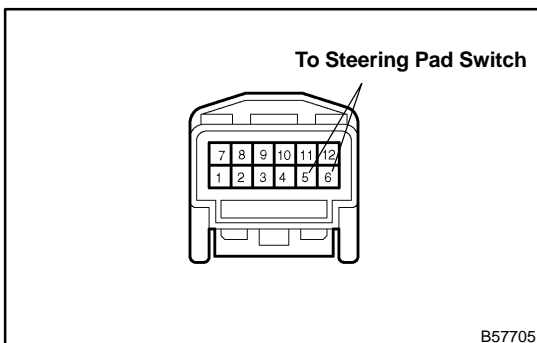

- (c) Disengage the wiring 2 pins from the connector, and pull them out.

6. **INSTALL HORN BUTTON ASSY**
(See page [60-15](#))
7. **INSPECT HORN BUTTON ASSY**
(See page [60-15](#))
8. **INSPECT SRS WARNING LIGHT**