


# BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 46)

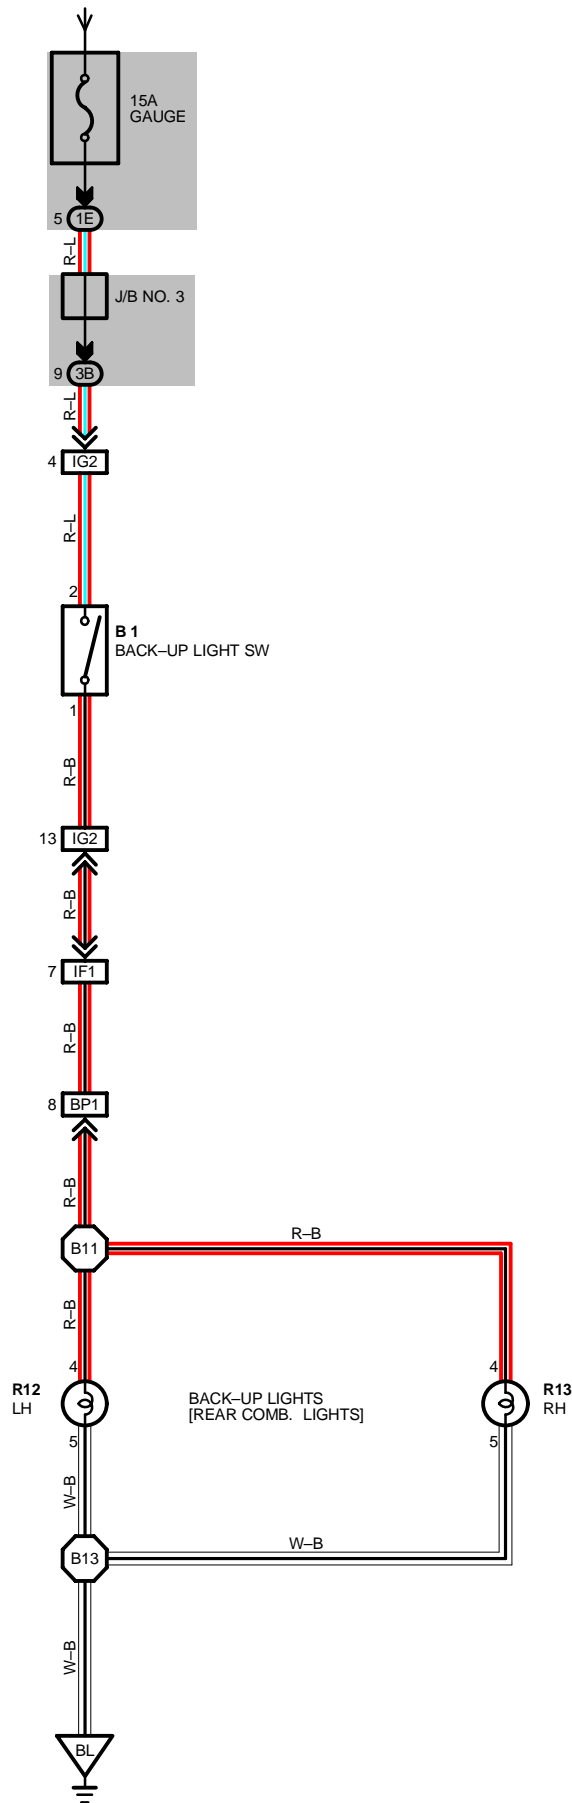

## SERVICE HINTS

### B 1 BACK-UP LIGHT SW

1-2 : CLOSED WITH SHIFT LEVER IN R POSITION

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 1	25	R12	27	R13	27

### □ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1E	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
3B	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF1	30	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG2	30	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
BP1	34	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)

### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BL	34	BACK PANEL CENTER

### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B11	34	LUGGAGE ROOM WIRE	B13	34	LUGGAGE ROOM WIRE

B 1 GRAY



R12, R13

