



## SERVICE HINTS

### A17(A) ALTERNATOR

- (A) 2-GROUND: **13.9–15.1** VOLTS WITH ENGINE RUNNING AT **2000** RPM AND **25°C (77°F)**  
**13.5–14.3** VOLTS WITH ENGINE RUNNING AT **2000** RPM AND **115°C (239°F)**  
 (A) 1-GROUND: **0–4** VOLTS WITH IGNITION SW AT **ON** POSITION AND ENGINE NOT RUNNING

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A16	B 25	C12	26	J 3	26
A17	A 25	F11	25		

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1D		
2B	20	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG2	30	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)

