


Position of Parts in Engine Compartment

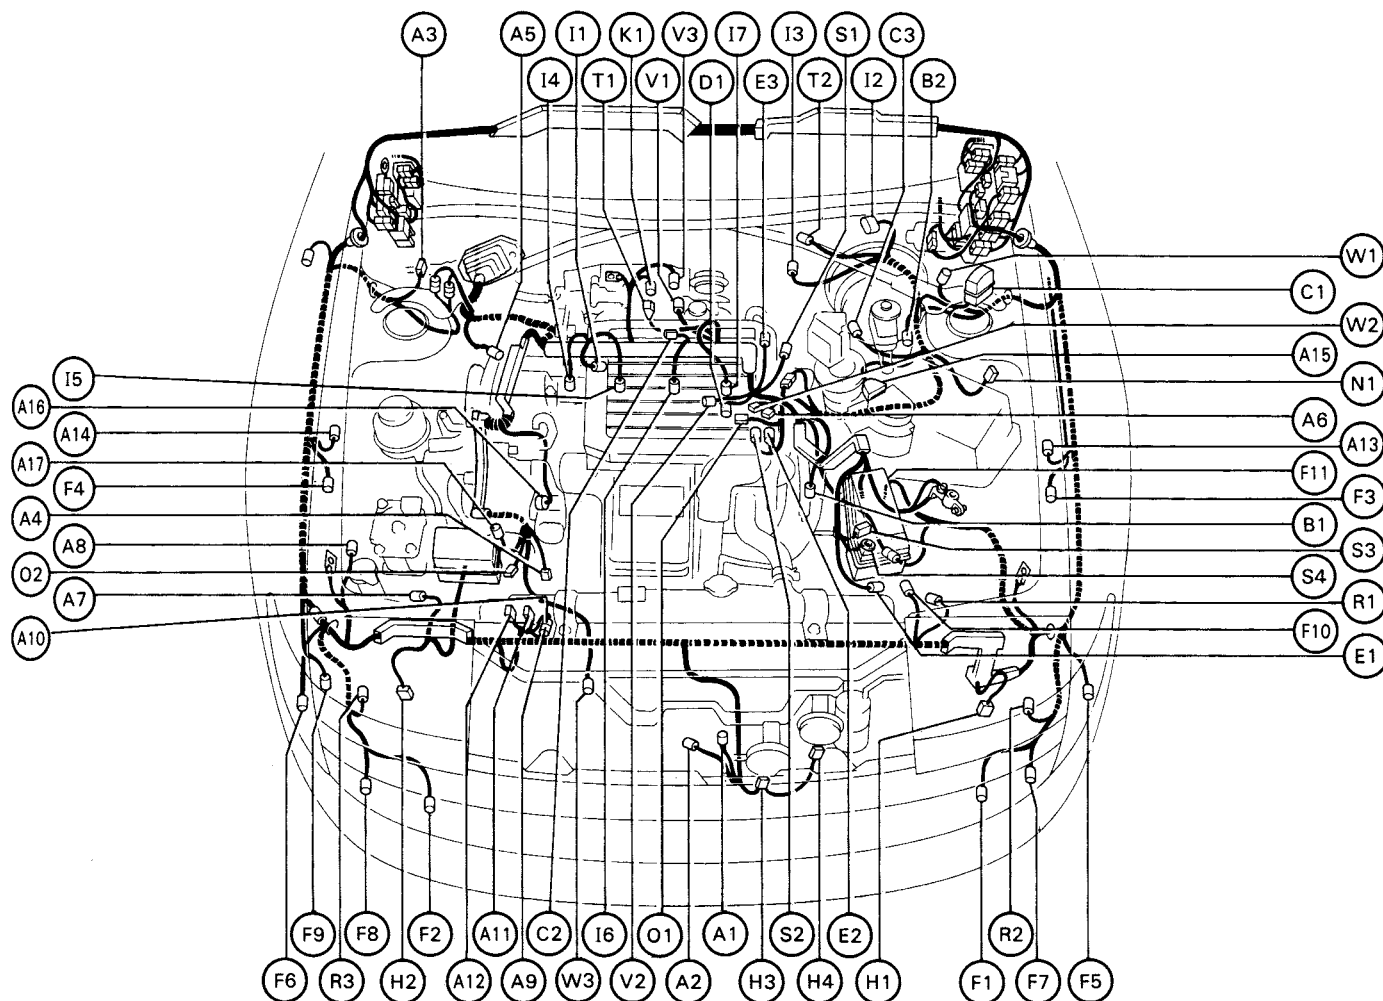

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 3 A/C Idle-Up VSV
 A 4 A/C Magnet Clutch and Compressor Sensor
 A 5 A/C Pressure SW
 A 6 A/C Water Temp. SW
 A 7 ABS Actuator
 A 8 ABS Actuator
 A 9 ABS Check Connector
 A 10 ABS Check Connector
 A 11 ABS Relay
 A 12 ABS Relay
 A 13 ABS Speed Sensor Front LH
 A 14 ABS Speed Sensor Front RH
 A 15 Air Flow Meter
 A 16 Alternator
 A 17 Alternator

B 1 Back-Up Light SW
 B 2 Brake Fluid Level SW

C 1 Check Connector
 C 2 Cold Start Injector
 C 3 Cruise Control Actuator

D 1 Distributor

E 1 EFI Resistor
 E 2 EFI Water Temp. Sensor
 E 3 EGR Gas Temp. Sensor (for California)

F 1 Fog Light LH
 F 2 Fog Light RH
 F 3 Front Airbag Sensor LH
 F 4 Front Airbag Sensor RH
 F 5 Front Side Marker Light LH
 F 6 Front Side Marker Light RH
 F 7 Front Turn Signal Light and Clearance Light LH
 F 8 Front Turn Signal Light and Clearance Light RH
 F 9 Front Wiper Motor
 F 10 Fuel Pump Resistor
 F 11 Fusible Link Box

H 1 Headlight LH
 H 2 Headlight RH
 H 3 Horn
 H 4 Horn

I 1 ISC Valve
 I 2 Igniter
 I 3 Ignition Coil
 I 4 Injector No. 1
 I 5 Injector No. 2
 I 6 Injector No. 3
 I 7 Injector No. 4

K 1 Knock Sensor

N 1 Noise Filter (for Ignition System)

O 1 Oil Pressure SW
 O 2 Oxygen Sensor

R 1 Radiator Fan Motor
 R 2 Retract Motor LH
 R 3 Retract Motor RH

S 1 Speed Sensor (for Cruise Control System)
 S 2 Start Injector Time SW
 S 3 Starter
 S 4 Starter


T 1 Throttle Position Sensor
 T 2 Turbo Charging Pressure Sensor

V 1 VSV (for EGR System)
 V 2 VSV (for Turbo Charging Pressure)
 V 3 VSV (for T-VIS)

W 1 Washer Motor
 W 2 Water Temp. Sender
 W 3 Water Temp. SW (for Fans control)

ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

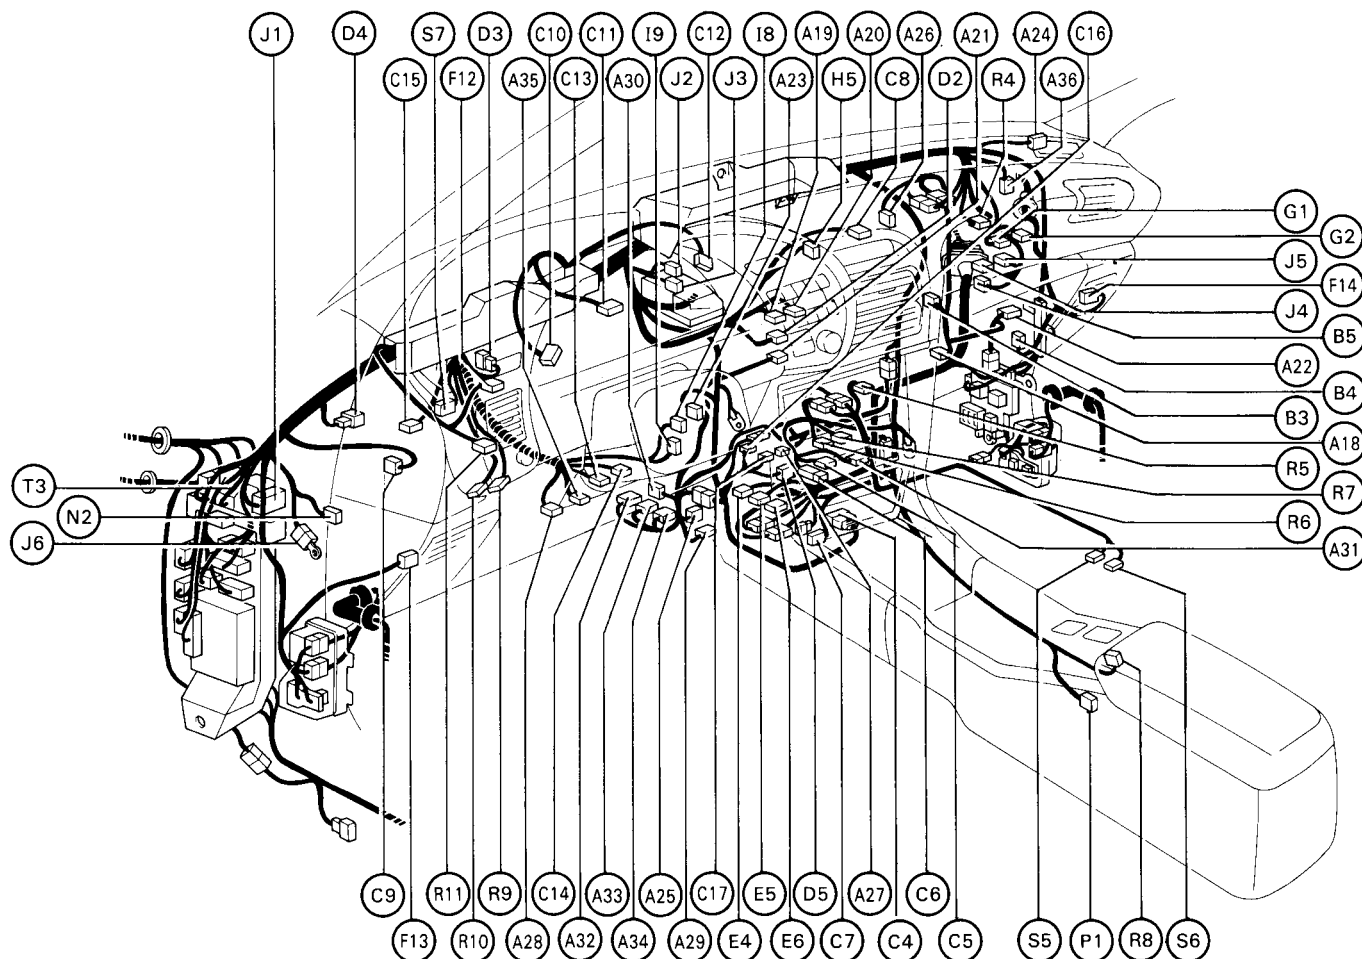


- A 18 A/C Amplifier
- A 19 A/C Control Assembly
- A 20 A/C Control Assembly
- A 21 A/C Control Assembly
- A 22 A/C Power Transistor
- A 23 A/C Room Temp. Sensor
- A 24 A/C Solar Sensor
- A 25 A/C System Amplifier
- A 26 A/C Thermistor
- A 27 A/C Water Temp. Sensor
- A 28 Airbag Squib
- A 29 Air Mix Control Servo Motor
- A 30 Air Vent Mode Control Servo Motor
- A 31 Ashtray
- A 32 Auto A/C Amplifier
- A 33 Auto A/C Amplifier
- A 34 Auto A/C Amplifier
- A 35 Auto Tilt Away Actuator
- A 36 Auto Tilt Away ECU
- B 3 Blower Control Relay
- B 4 Blower Motor
- B 5 Blower Resistor
- C 4 Center Airbag Sensor Assembly
- C 5 Cigarette Lighter
- C 6 Cigarette Lighter Illumination
- C 7 Circuit Opening Relay

- C 8 Clock
- C 9 Clutch Start SW
- C 10 Combination Meter
- C 11 Combination Meter
- C 12 Combination Meter
- C 13 Combination SW
- C 14 Combination SW
- C 15 Cruise Control Clutch SW
- C 16 Cruise Control ECU
- C 17 Cruise Control ECU
- D 2 Defogger SW
- D 3 Diode (for Cruise Control System)
- D 4 Diode (for Key Off)
- D 5 Door Lock ECU
- E 4 Engine ECU
- E 5 Engine ECU
- E 6 Engine ECU
- F 12 Fog Light SW
- F 13 Front Speaker LH
- F 14 Front Speaker RH
- G 1 Glove Box Light
- G 2 Glove Box Light SW
- H 5 Hazard SW
- I 8 Ignition Key Cylinder Light
- I 9 Ignition SW and Unlock Warning SW

- J 1 Junction Connector
- J 2 Junction Connector
- J 3 Junction Connector
- J 4 Junction Connector
- J 5 Junction Connector
- J 6 Junction Connector (for Earth)
- N 2 Noise Filter (for Defogger System)
- P 1 Parking Brake SW
- R 4 RECIRC/FRESH Control Servo Motor
- R 5 Radio and Player (w/ CD Player)
- R 6 Radio and Player (w/o CD Player)
- R 7 Radio and Player (w/o CD Player)
- R 8 Remote Control Mirror SW
- R 9 Retract Control Relay
- R 10 Retract Control Relay (for CANADA)
- R 11 Rheostat
- S 5 Stereo Component Amplifier (w/ CD Player)
- S 6 Stereo Component Amplifier (w/ CD Player)
- S 7 Stop Light and Cruise Control Stop SW
- T 3 Turn Signal Flasher

Position of Parts in Body

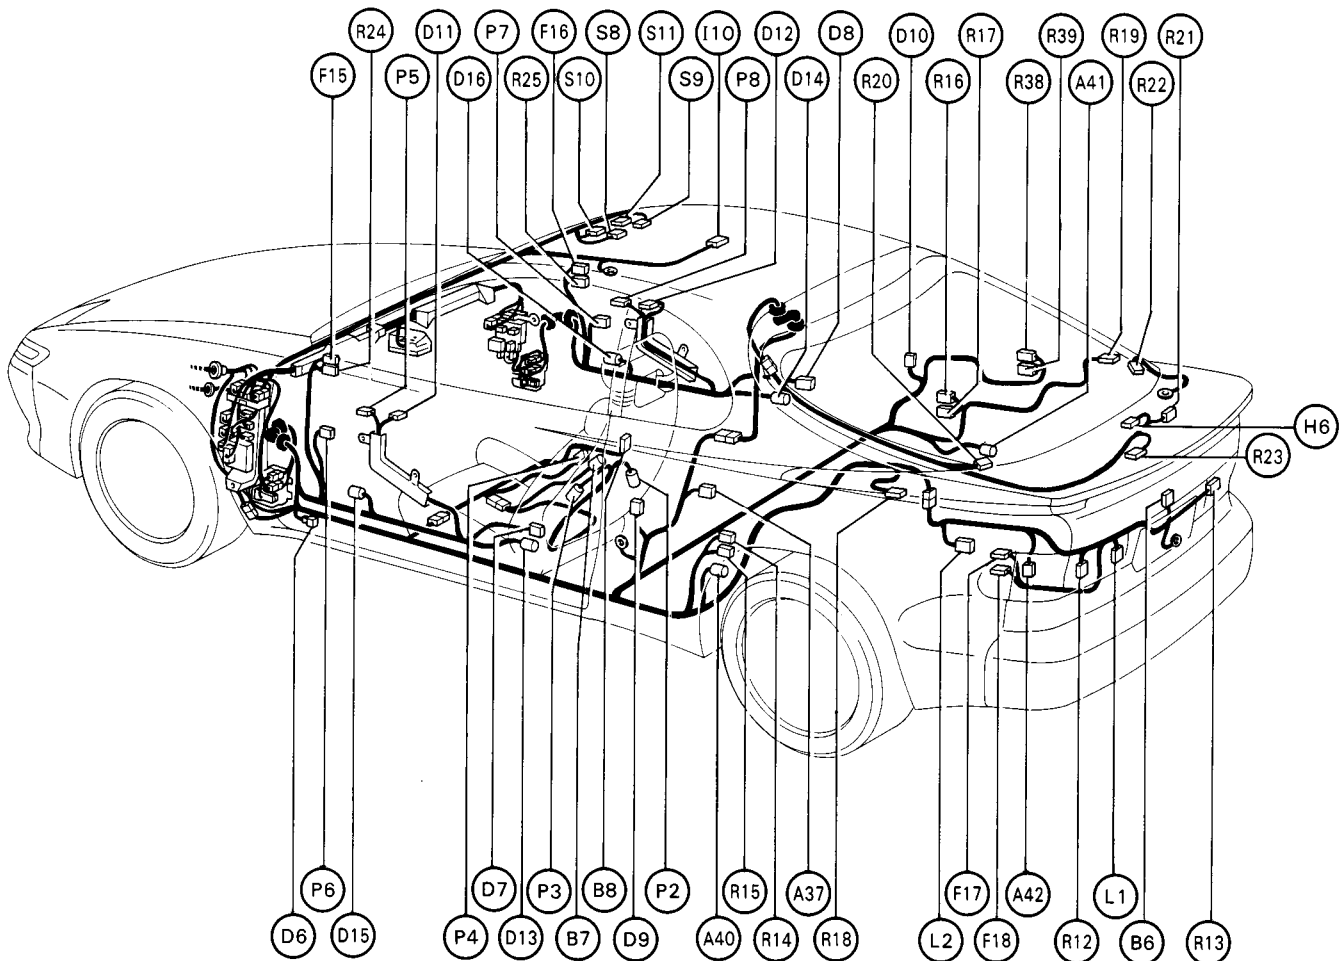

A 37 ABS Deceleration Sensor
 A 38 ABS ECU
 A 39 ABS ECU
 A 40 ABS Speed Sensor Rear LH
 A 41 ABS Speed Sensor Rear RH
 A 42 Auto Antenna Control Relay and Motor

B 6 Back Door Courtesy SW
 B 7 Buckle SW (w/ Power Seat)
 B 8 Buckle SW (w/o Power Seat)

D 6 Diode (for Interior Light System)
 D 7 Door Courtesy Light LH
 D 8 Door Courtesy Light RH
 D 9 Door Courtesy SW LH
 D 10 Door Courtesy SW RH
 D 11 Door Lock Control SW LH
 D 12 Door Lock Control SW RH
 D 13 Door Lock Motor LH and, Key Lock and Unlock SW LH
 D 14 Door Lock Motor RH and, Key Lock and Unlock SW RH
 D 15 Door Speaker LH
 D 16 Door Speaker RH

F 15 Front Tweeter (Speaker) LH
 F 16 Front Tweeter (Speaker) RH
 F 17 Fuel Pump
 F 18 Fuel Sender

H 6 High Mount Stop Light

I 10 Interior Light

L 1 License Plate Light
 L 2 Luggage Compartment Light

P 2 Power Seat Motor (for Lumbar Support)
 P 3 Power Seat Motor (for Side Support)
 P 4 Power Seat SW
 P 5 Power Window Master SW
 P 6 Power Window Motor LH
 P 7 Power Window Motor RH
 P 8 Power Window SW RH

R 12 Rear Combination Light LH
 R 13 Rear Combination Light RH
 R 14 Rear Speaker LH
 R 15 Rear Speaker LH
 R 16 Rear Speaker RH
 R 17 Rear Speaker RH
 R 18 Rear Tweeter (Speaker) LH
 R 19 Rear Tweeter (Speaker) RH
 R 20 Rear Window Defogger (+, w/o Diversity Antenna)
 R 21 Rear Window Defogger (+, w/ Diversity Antenna)
 R 22 Rear Window Defogger (-)
 R 23 Rear Wiper Control Relay and Motor
 R 24 Remote Control Mirror LH
 R 25 Remote Control Mirror RH

S 8 Sun Roof Control Relay
 S 9 Sun Roof Control SW and Personal Light
 S 10 Sun Roof Limit SW
 S 11 Sun Roof Motor