



ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

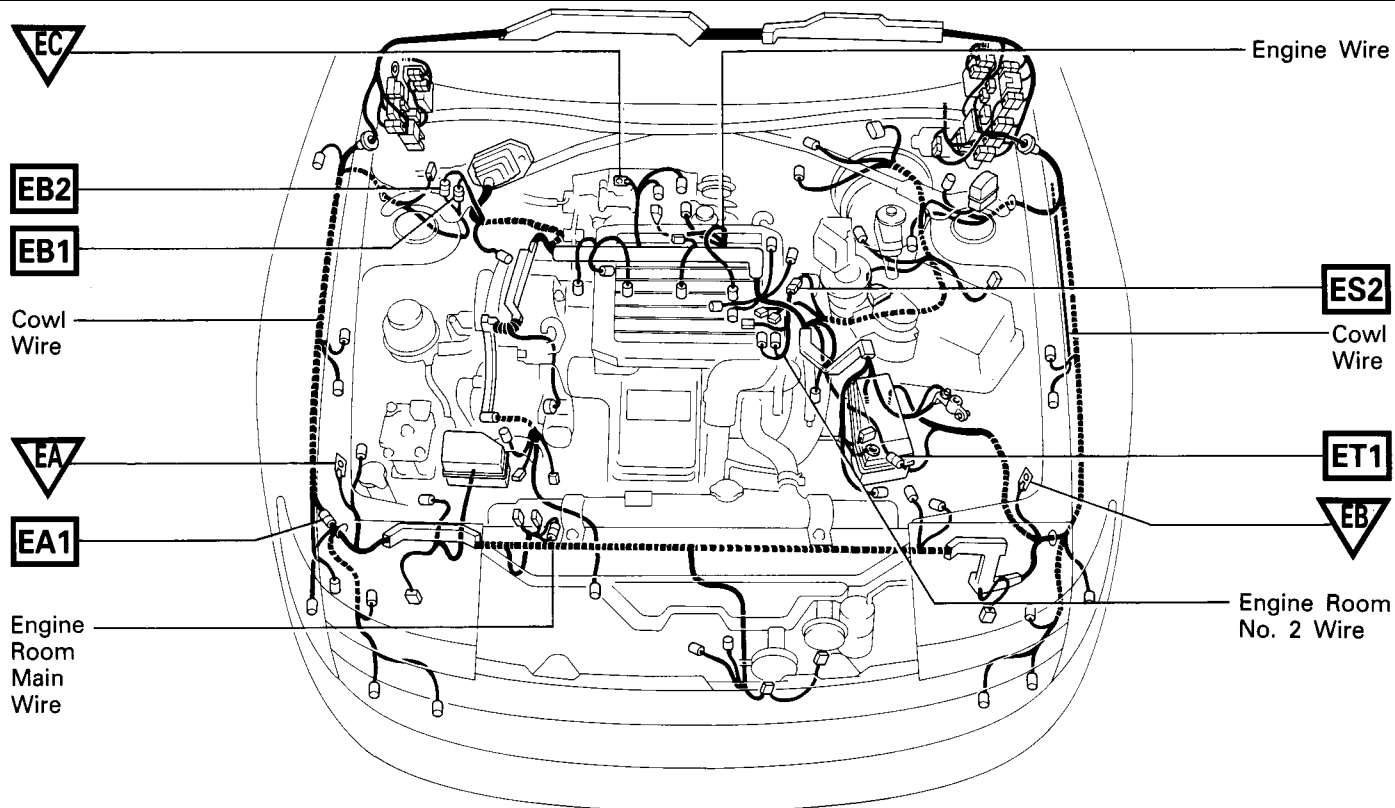

○ : Location of Splice Points

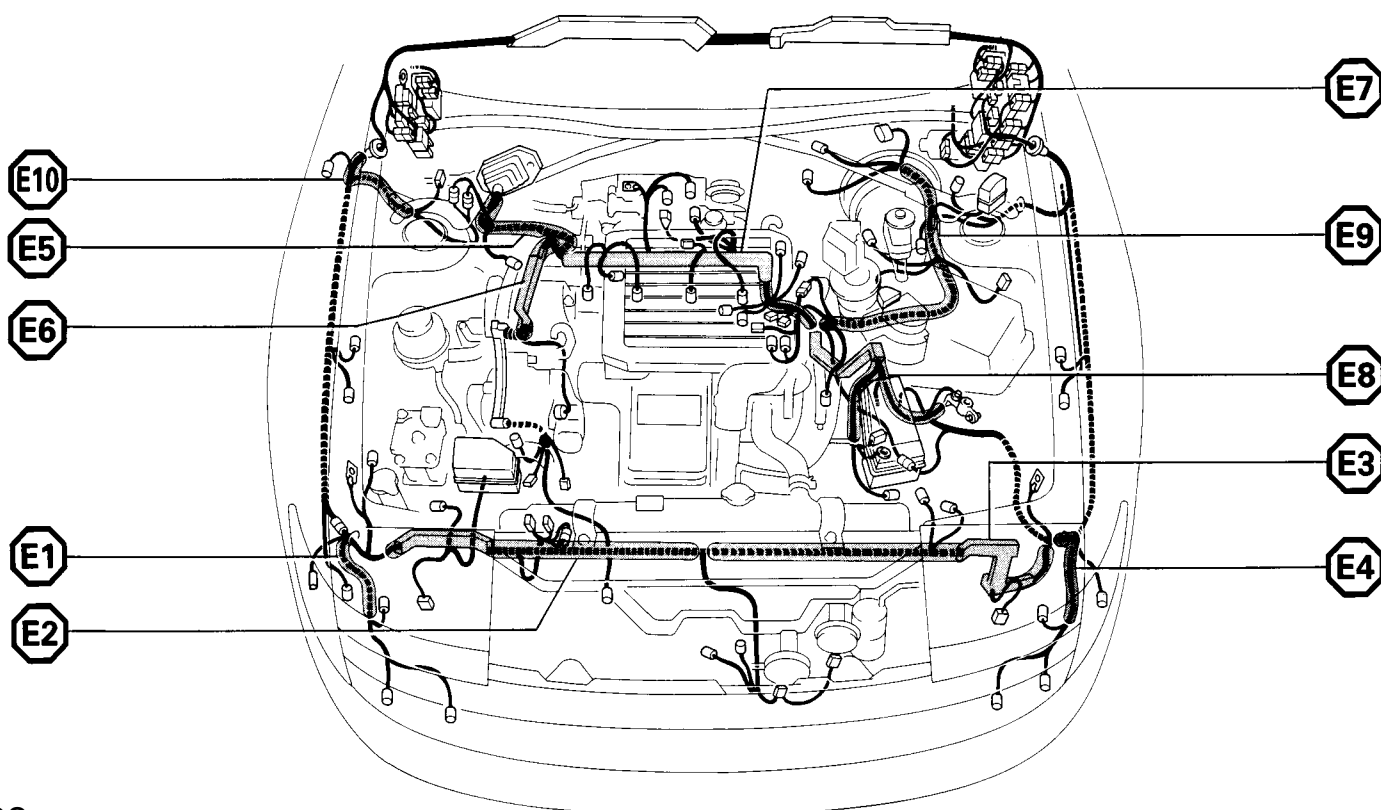


Connector Joining Wire Harness and Wire Harness

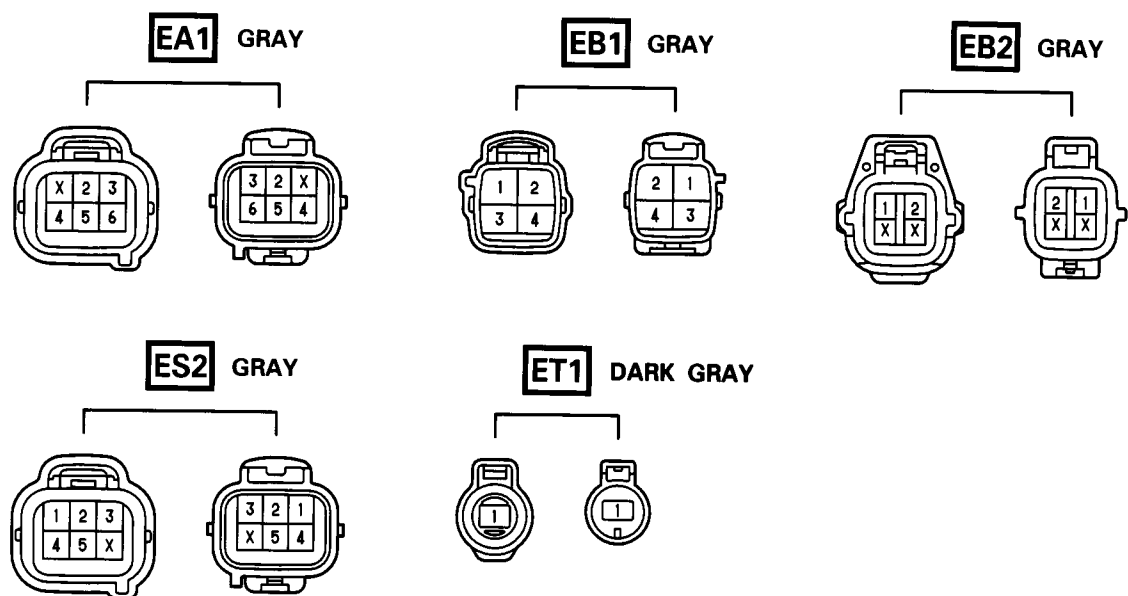


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FRONT FENDER)
EB1	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
EB2	
ES2	ENGINE WIRE AND ENGINE ROOM NO. 2 WIRE (NEAR THE DISTRIBUTOR)
ET1	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

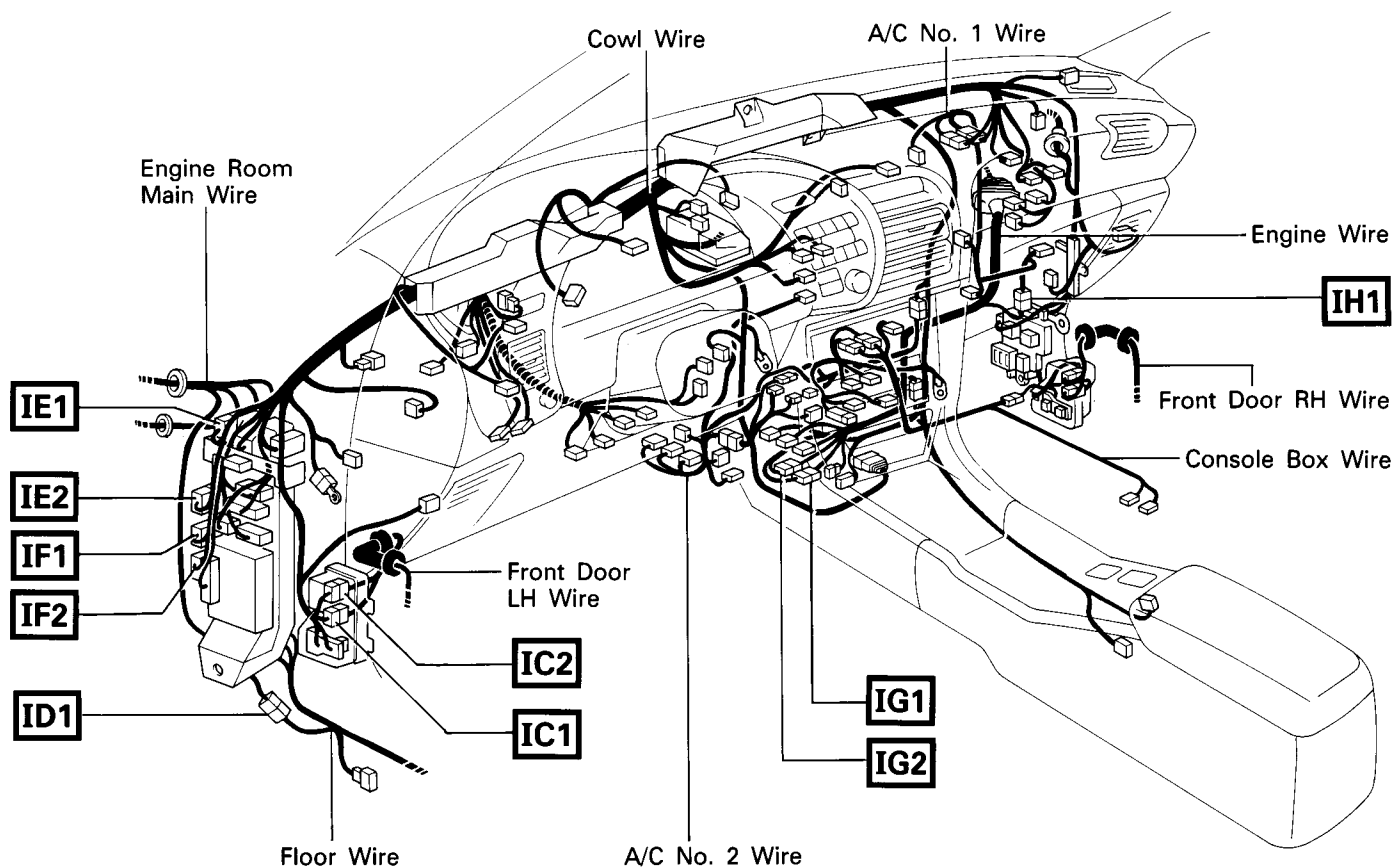

▽ : Location of Ground Points

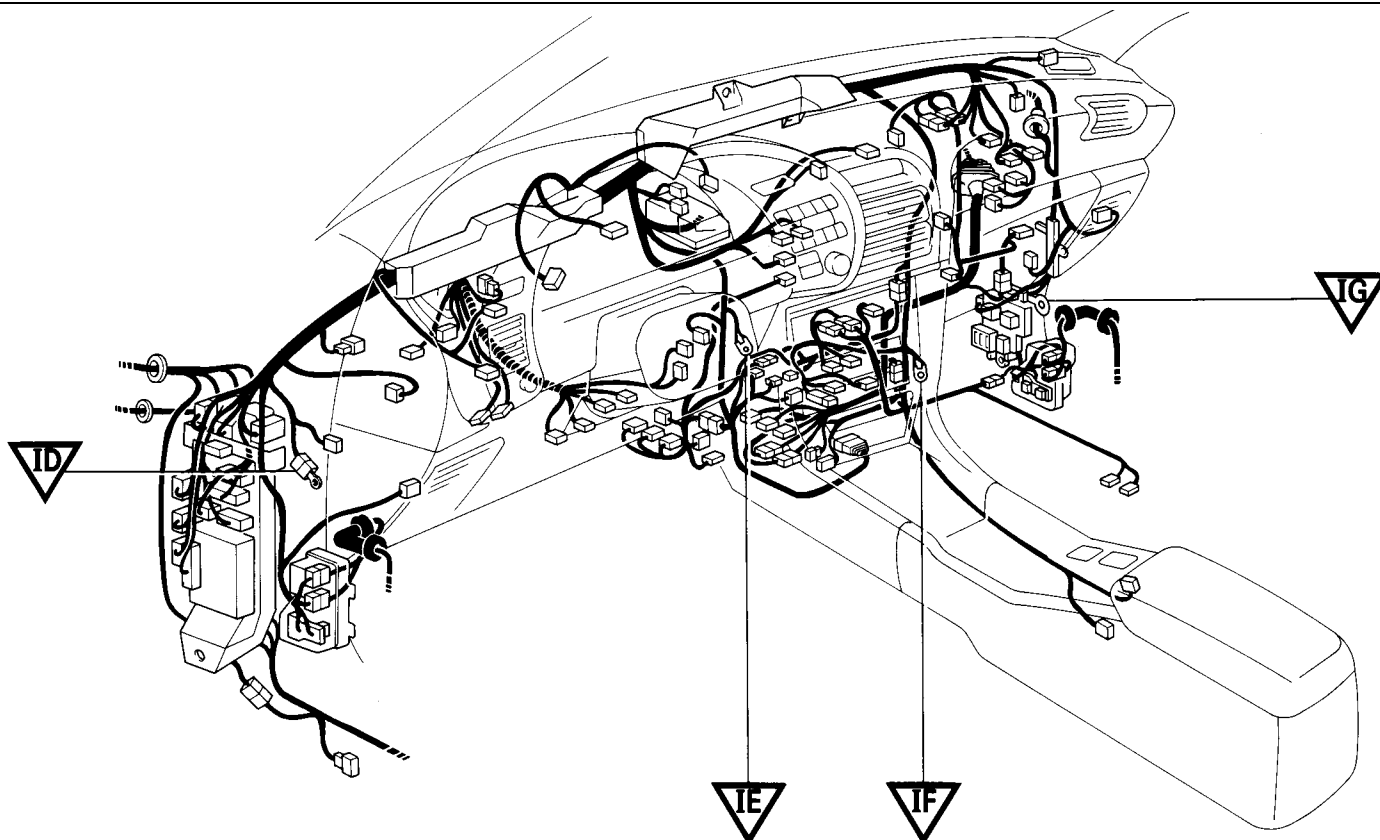

Connector Joining Wire Harness and Wire Harness

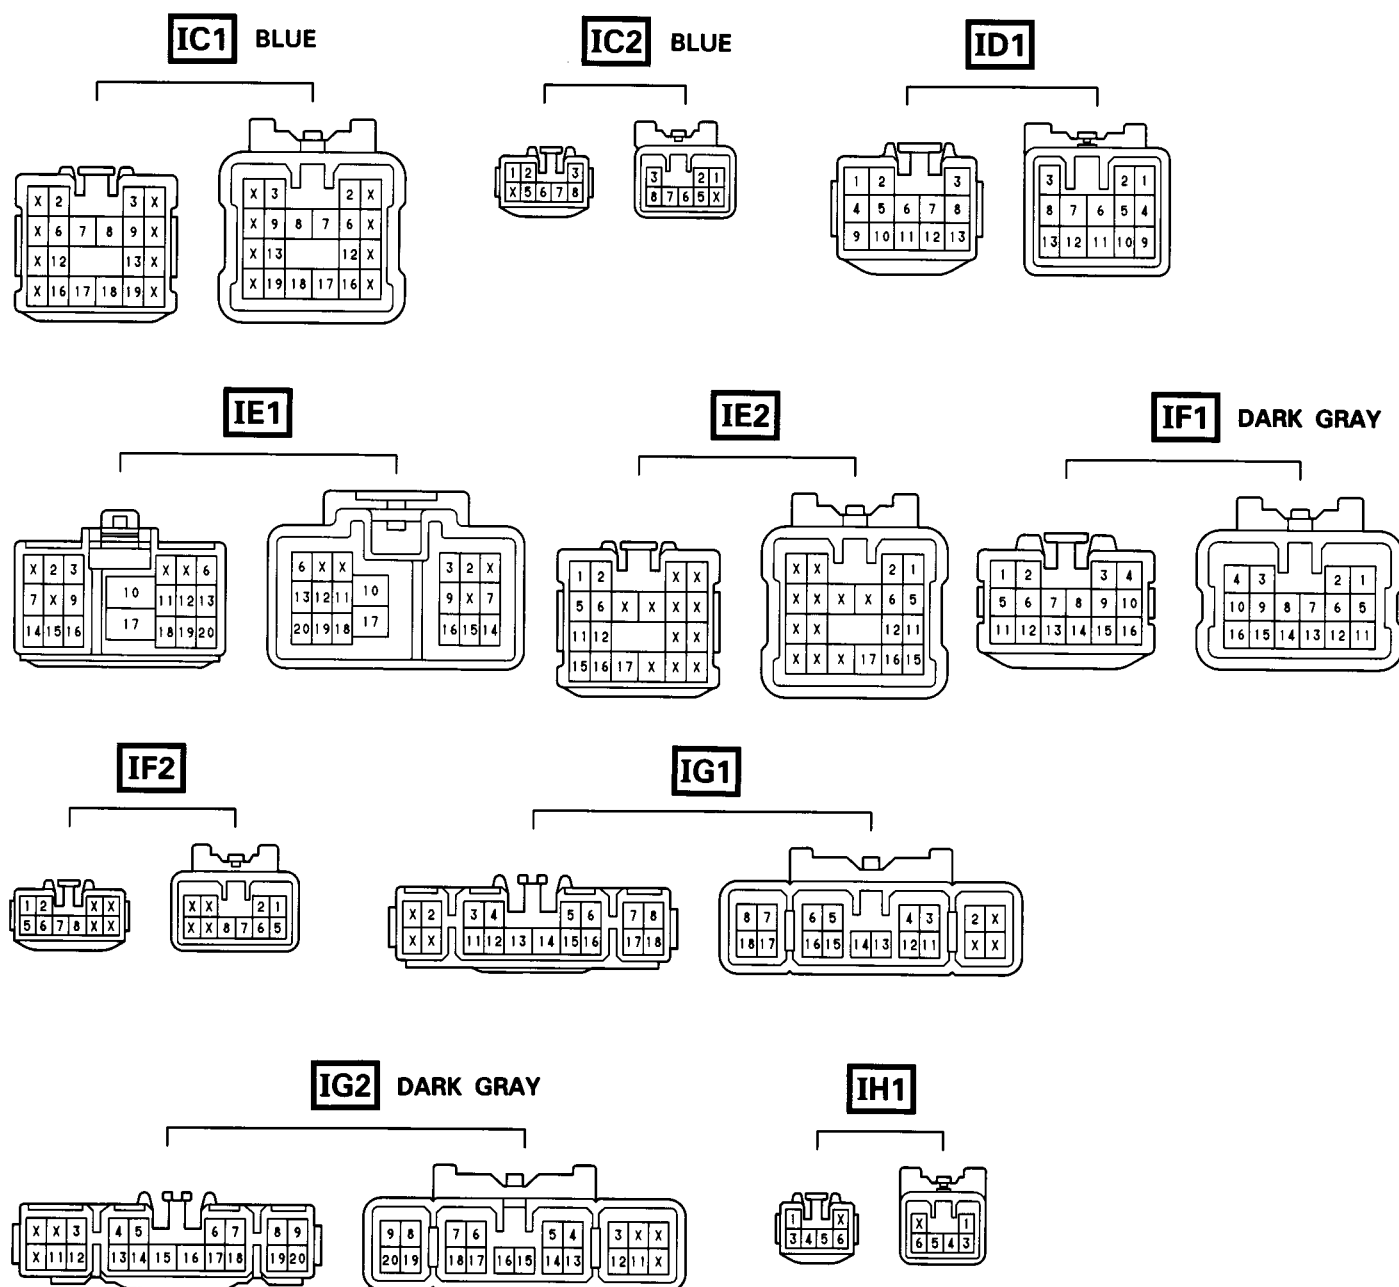


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IC2	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
ID1	ENGINE ROOM MAIN WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IE1	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IE2	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IF2	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
IG2	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
IH1	ENGINE WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

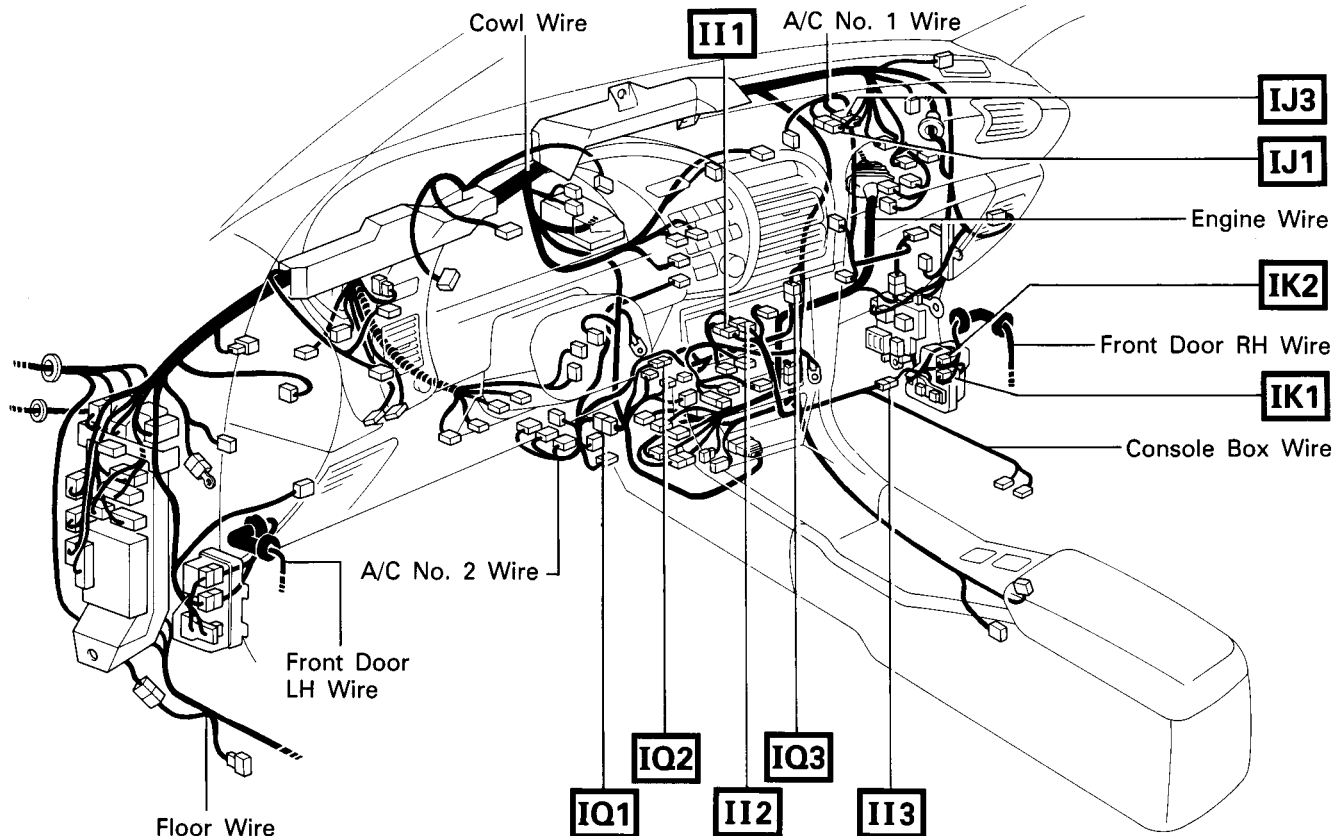

○ : Location of Splice Points

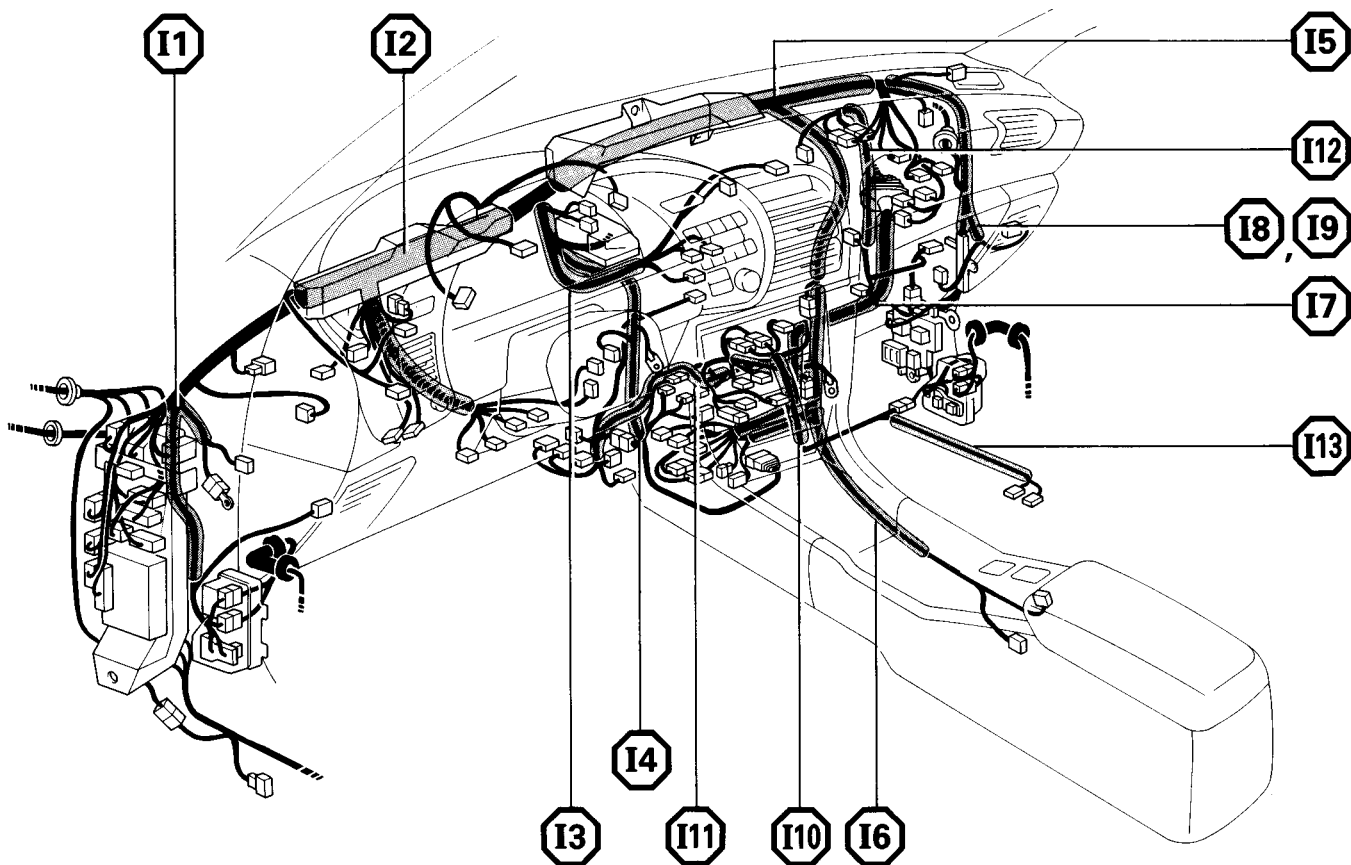

Connector Joining Wire Harness and Wire Harness

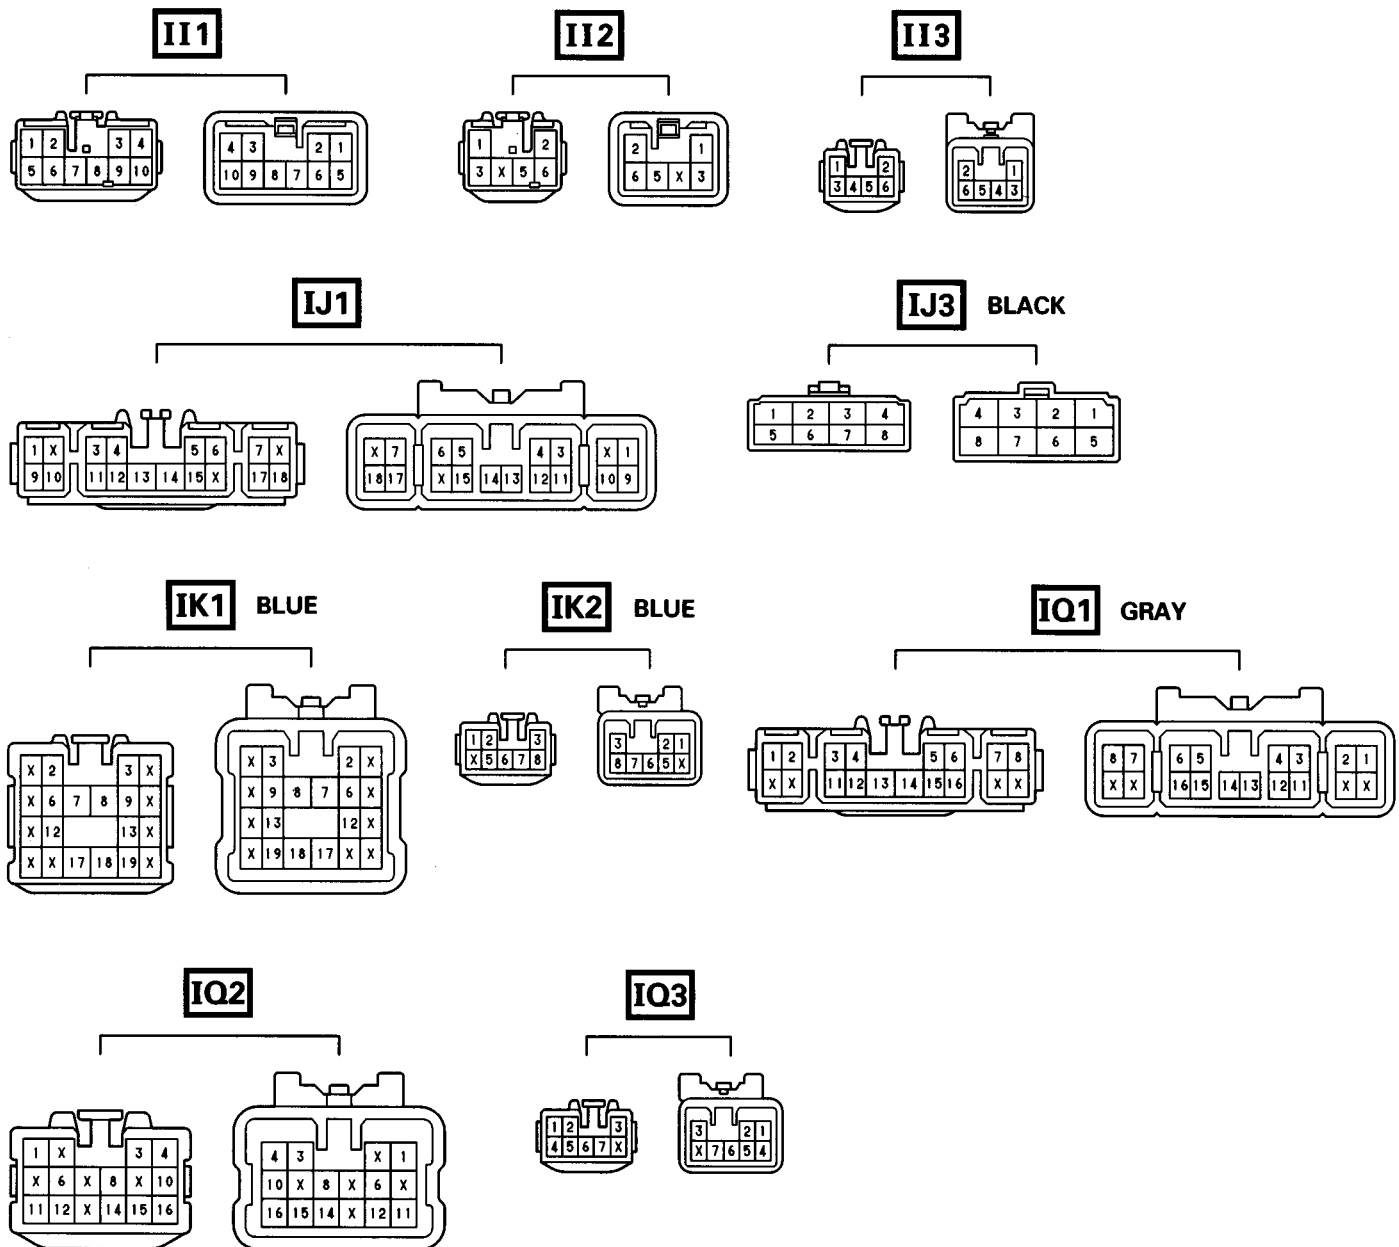


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
II1	COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)
II2	
II3	
IJ1	COWL WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)
IJ3	
IK1	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IK2	
IQ1	COWL WIRE AND A/C NO. 2 WIRE (BESIDE HEATER UNIT)
IQ2	
IQ3	


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

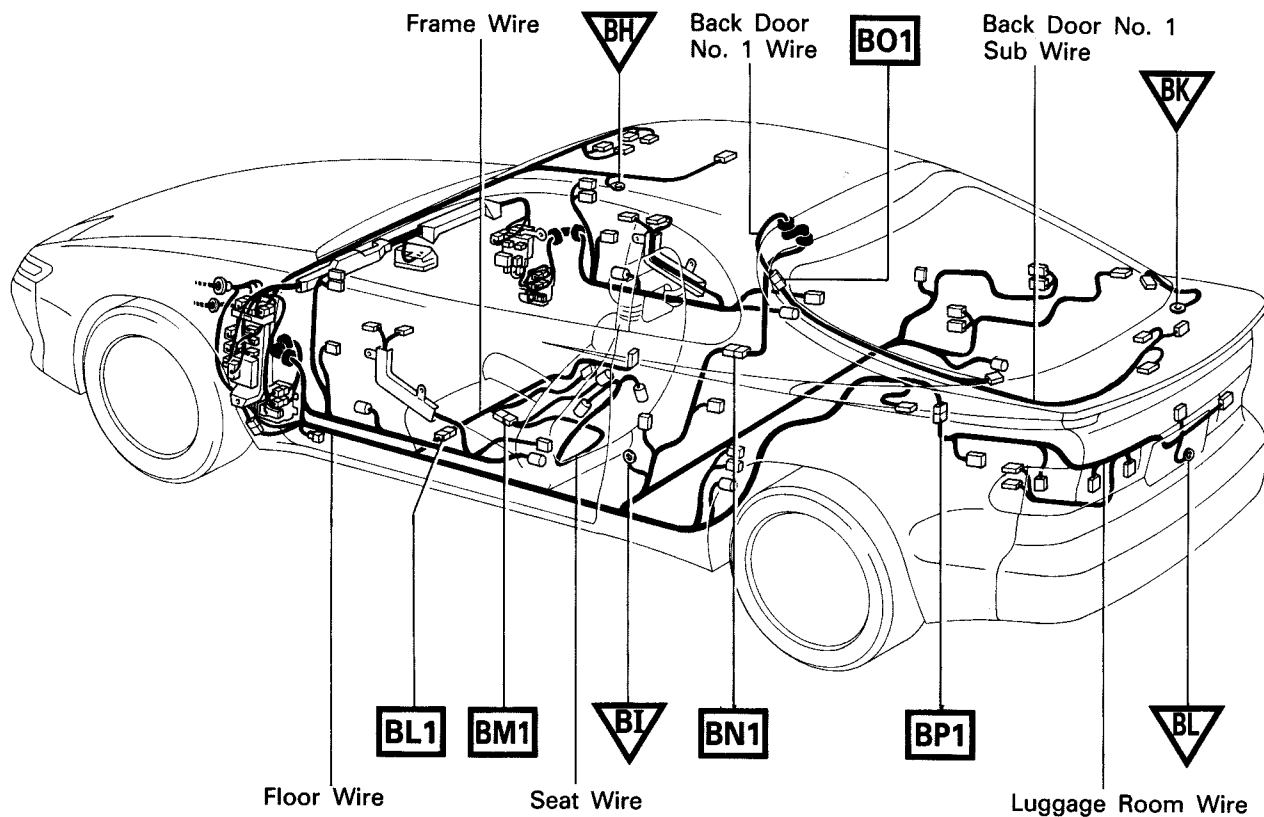

○ : Location of Splice Points

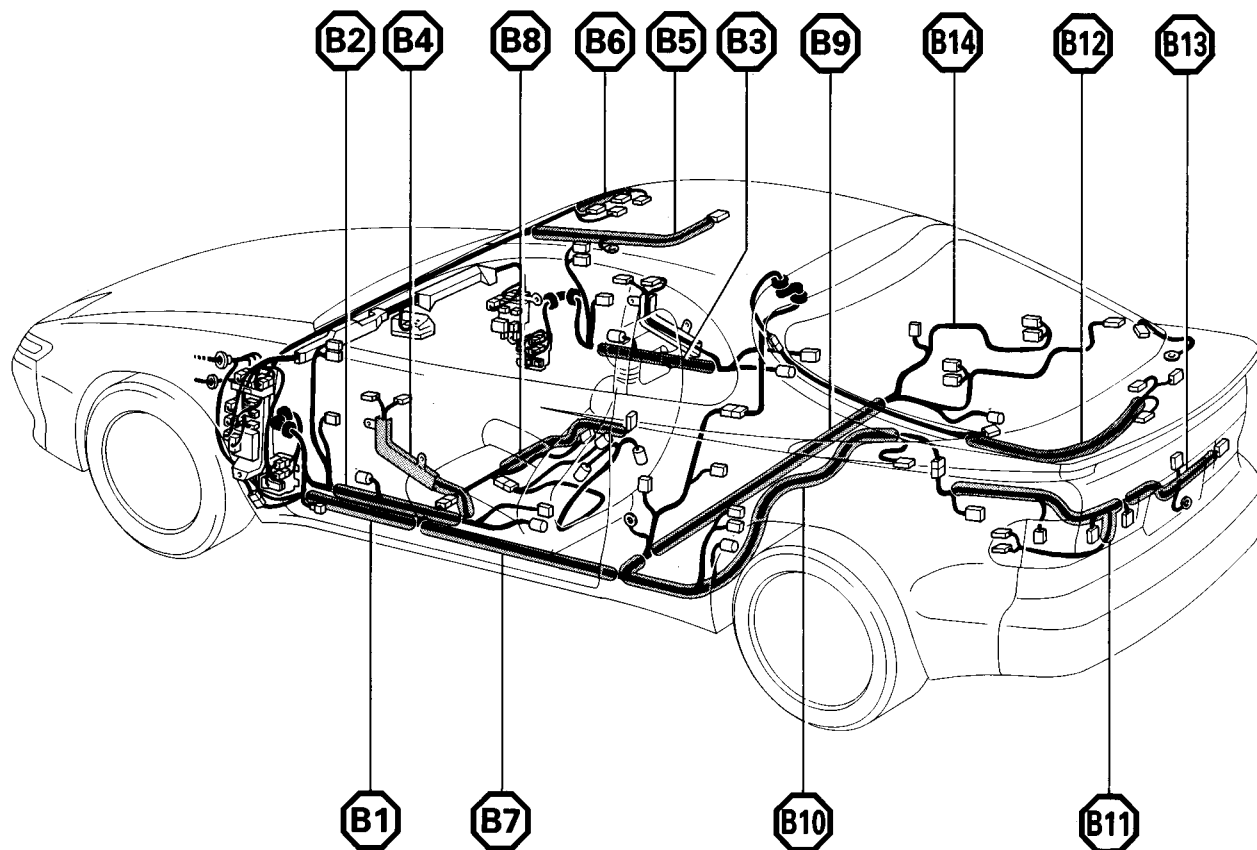

Connector Joining Wire Harness and Wire Harness

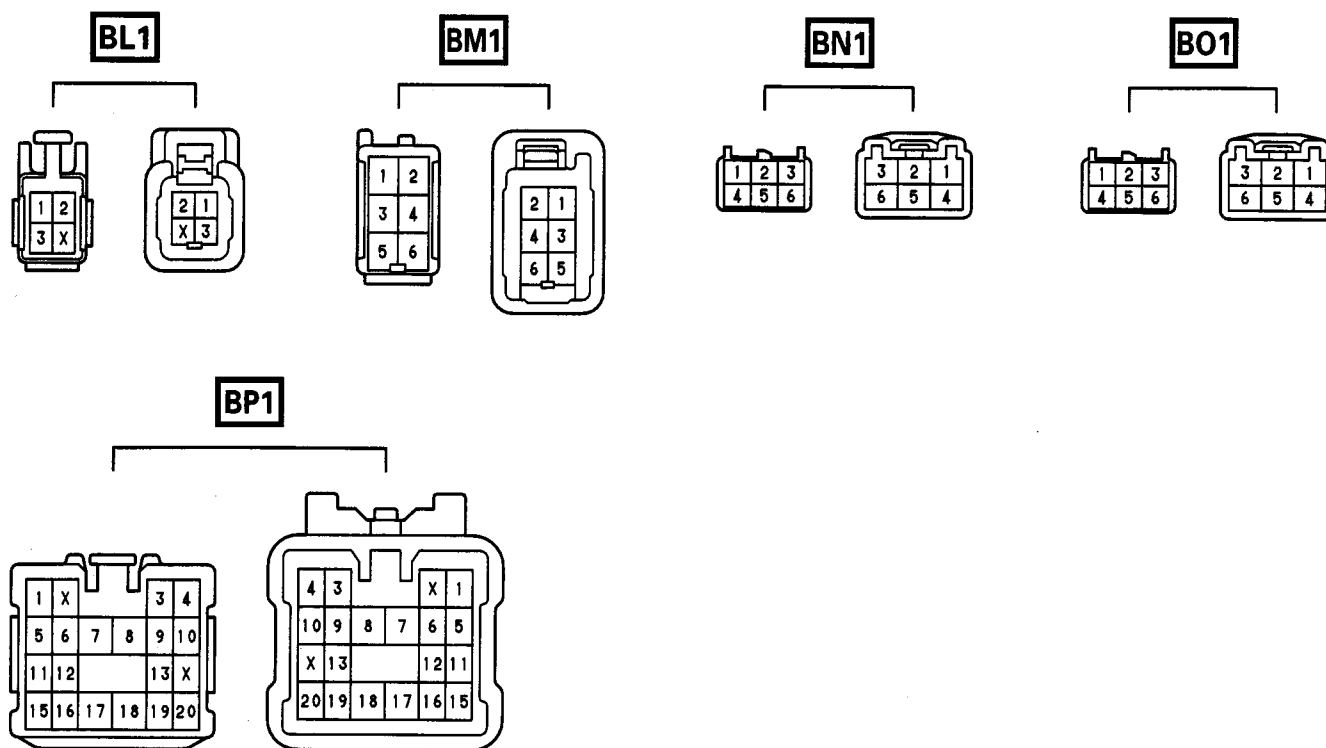

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BL1	FLOOR WIRE AND FRAME WIRE (LEFT SIDE OF FRONT FLOOR PANEL)
BM1	FRAME WIRE AND SEAT WIRE (UNDER THE DRIVER'S SEAT)
BN1	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LET SIDE OF PACKAGE TRAY TRIM)
BO1	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)
BP1	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)