


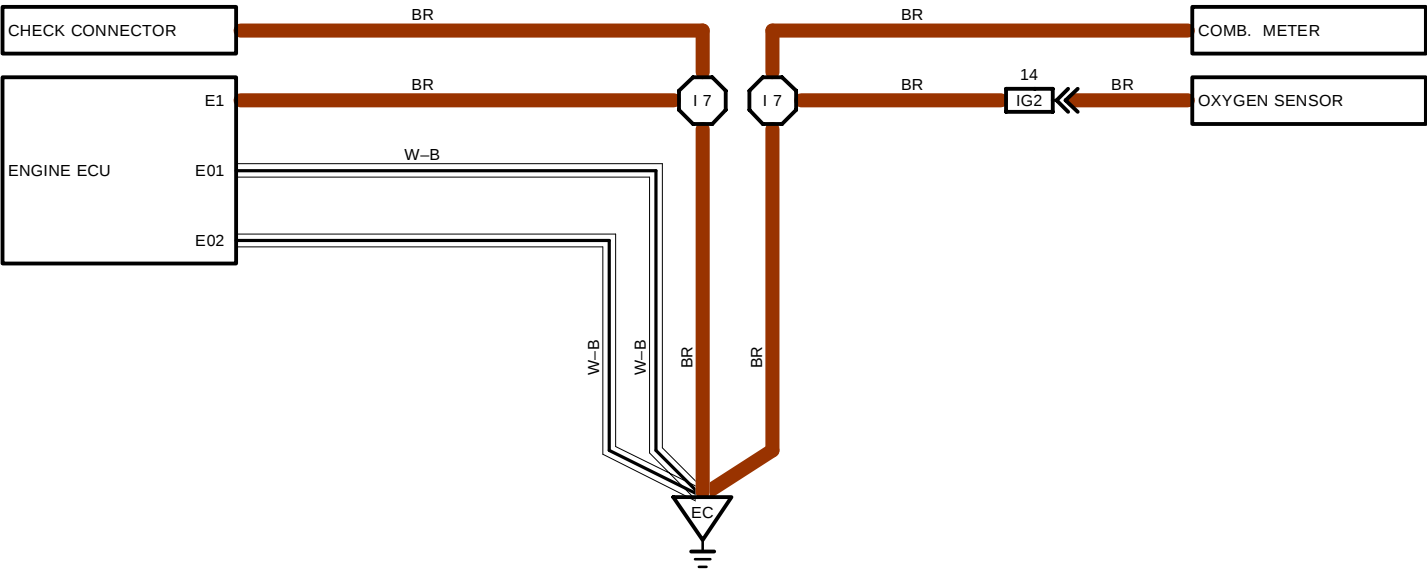


GROUND POINT

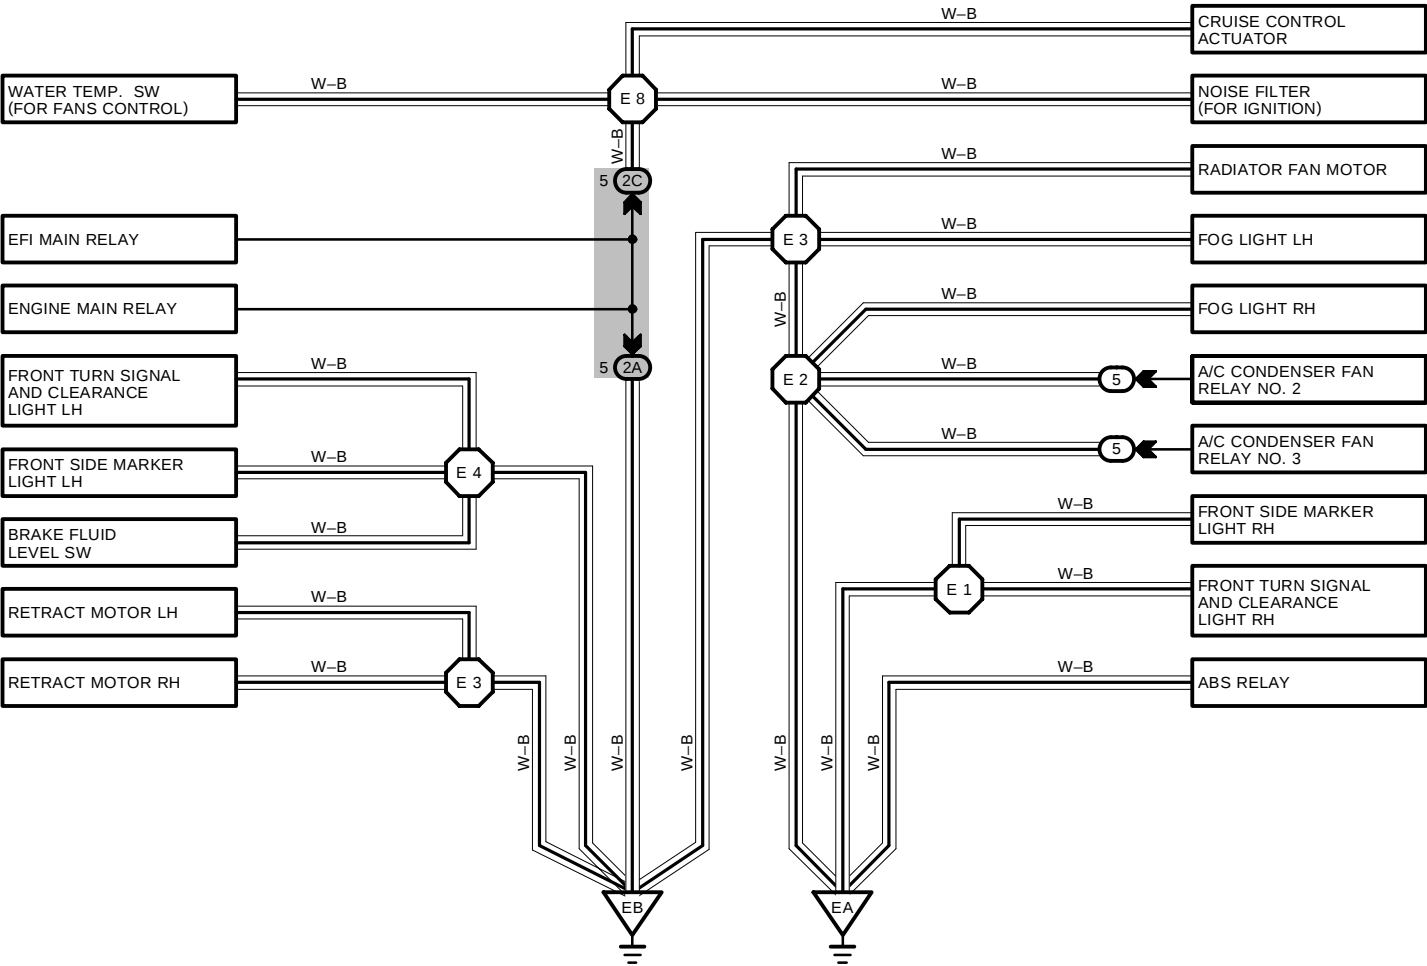

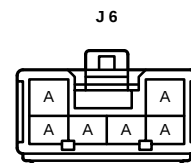

GROUND POINT

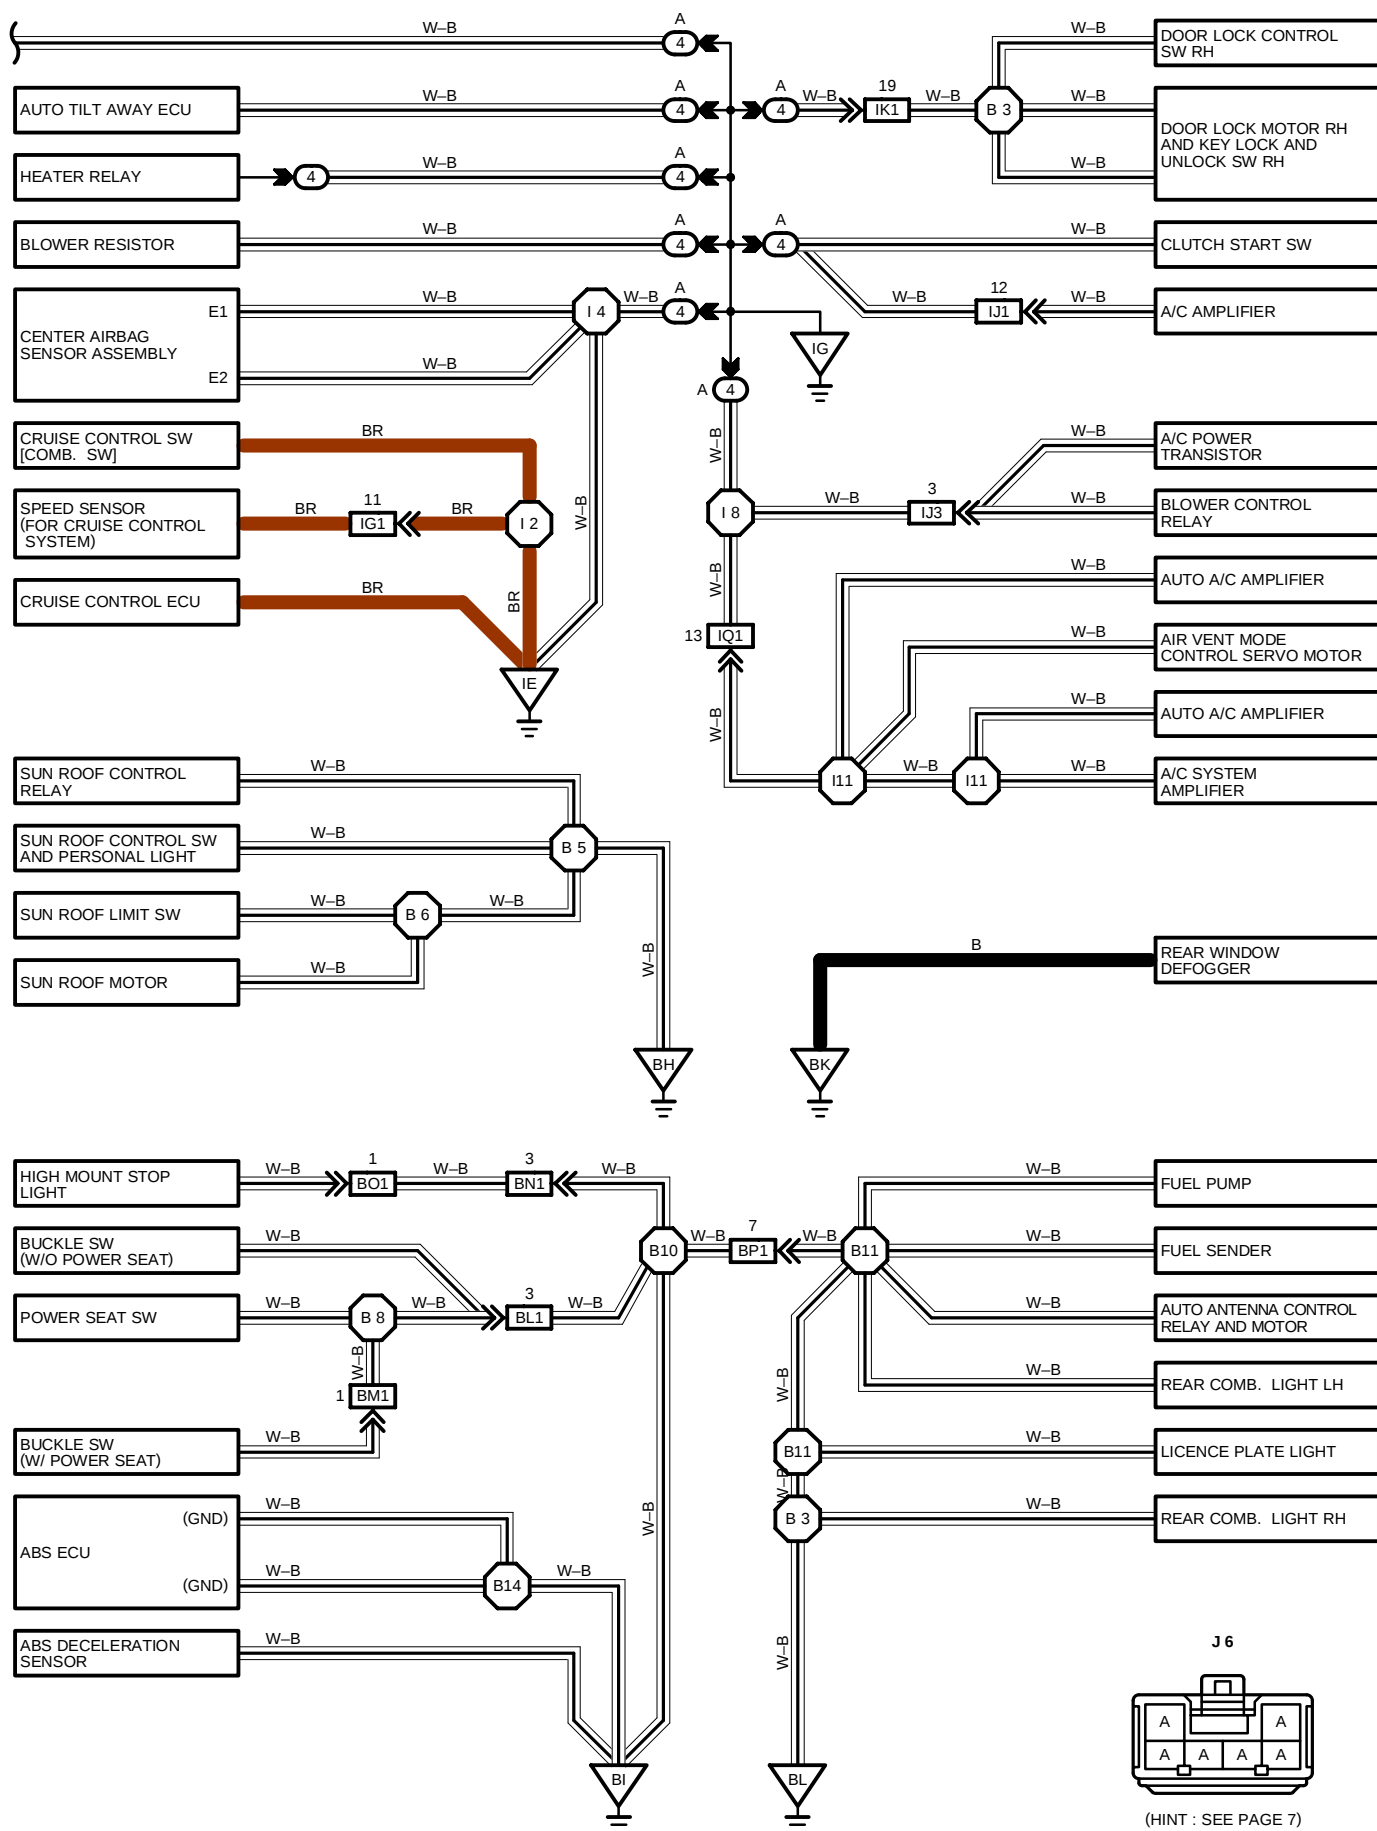

(HINT : SEE PAGE 7)

 : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
J 6	26				

 : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	23	R/B NO. 2 (LEFT KICK PANEL)
4	24	R/B NO. 4 (RIGHT KICK PANEL)
5	24	R/B NO. 5 (ENGINE COMPARTMENT FRONT RIGHT)

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
2A	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2C	20	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)
3A	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3B		
3C		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1	30	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	30	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	30	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
IG2		
II1	32	COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)
II3	32	COWL WIRE AND CONSOLE BOX WIRE (RIGHT KICK PANEL)
IJ1	32	COWL WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)
IJ3		
IK1	32	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IQ1	32	COWL WIRE AND A/C NO. 2 WIRE (BESIDE HEATER UNIT)
BL1	34	FLOOR WIRE AND FRAME WIRE (LEFT SIDE OF FRONT FLOOR PANEL)
BM1	34	FRAME WIRE AND SEAT WIRE (UNDER THE DRIVER'S SEAT)
BN1	34	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LEFT SIDE OF PACKAGE TRAY TRIM)
BO1	34	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)
BP1	34	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)

 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	28	FRONT RIGHT FENDER
EB	28	FRONT LEFT FENDER
EC	28	INTAKE MANIFOLD
ID	30	LEFT KICK PANEL
IE	30	INSTRUMENT PANEL BRACE LH
IF	30	INSTRUMENT PANEL BRACE RH
IG	30	R/B NO. 4 SET BOLT
BH	34	ROOF LEFT
BI	34	UNDER THE LEFT CENTER PILLAR
BK	34	BACK DOOR RIGHT
BL	34	BACK PANEL CENTER

 : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	28	ENGINE ROOM MAIN WIRE	I11	32	A/C NO. 2 WIRE
E 2			B 2	34	FRONT DOOR LH WIRE
E 3			B 3	34	FRONT DOOR RH WIRE
E 4			B 4	34	FRONT DOOR LH WIRE
E 8	28	ENGINE WIRE	B 5	34	ROOF WIRE
I 2	32	COWL WIRE	B 6		
I 4			B 8	34	FRAME WIRE
I 5			B10	34	FLOOR WIRE
I 7	32	ENGINE WIRE	B11	34	LUGGAGE ROOM WIRE
I 8	32	COWL WIRE	B14	34	FLOOR WIRE