


FROM POWER SOURCE SYSTEM (SEE PAGE 46)

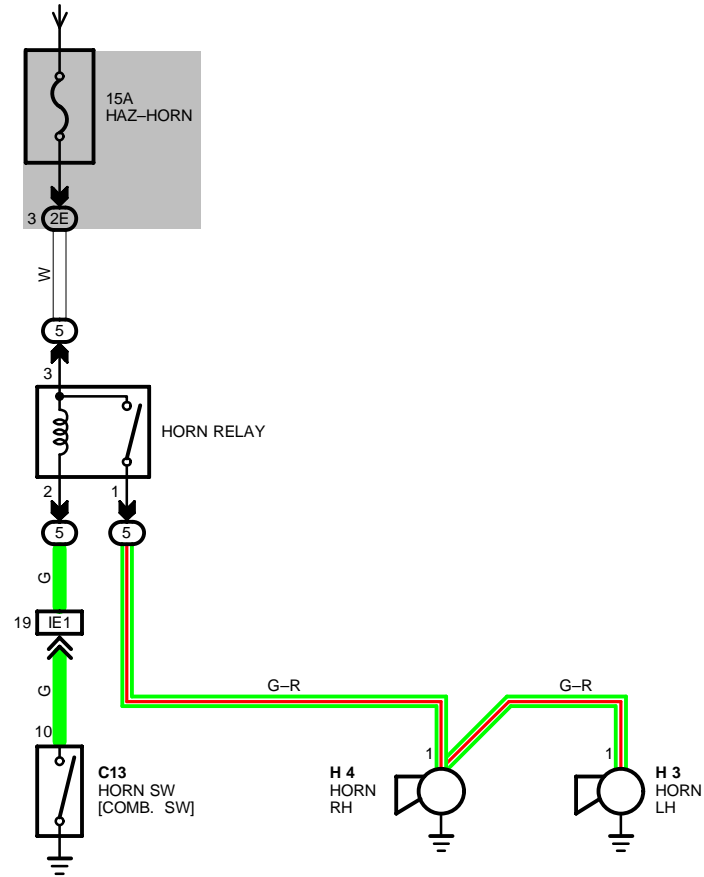

SERVICE HINTS

HORN RELAY

(5) 3- (5) 1 : CLOSED WITH HORN SW ON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13	26	H 3	25	H 4	25

□ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
5	24	R/B NO. 5 (ENGINE COMPARTMENT FRONT RIGHT)


○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
2E	20	ENGINE ROOM MAIN WIRE AND J/B NO.2 (NEAR THE BATTERY)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	30	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)

C13 BLACK

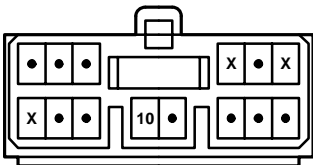

H 3, H 4 BLACK

