



# ILLUMINATION

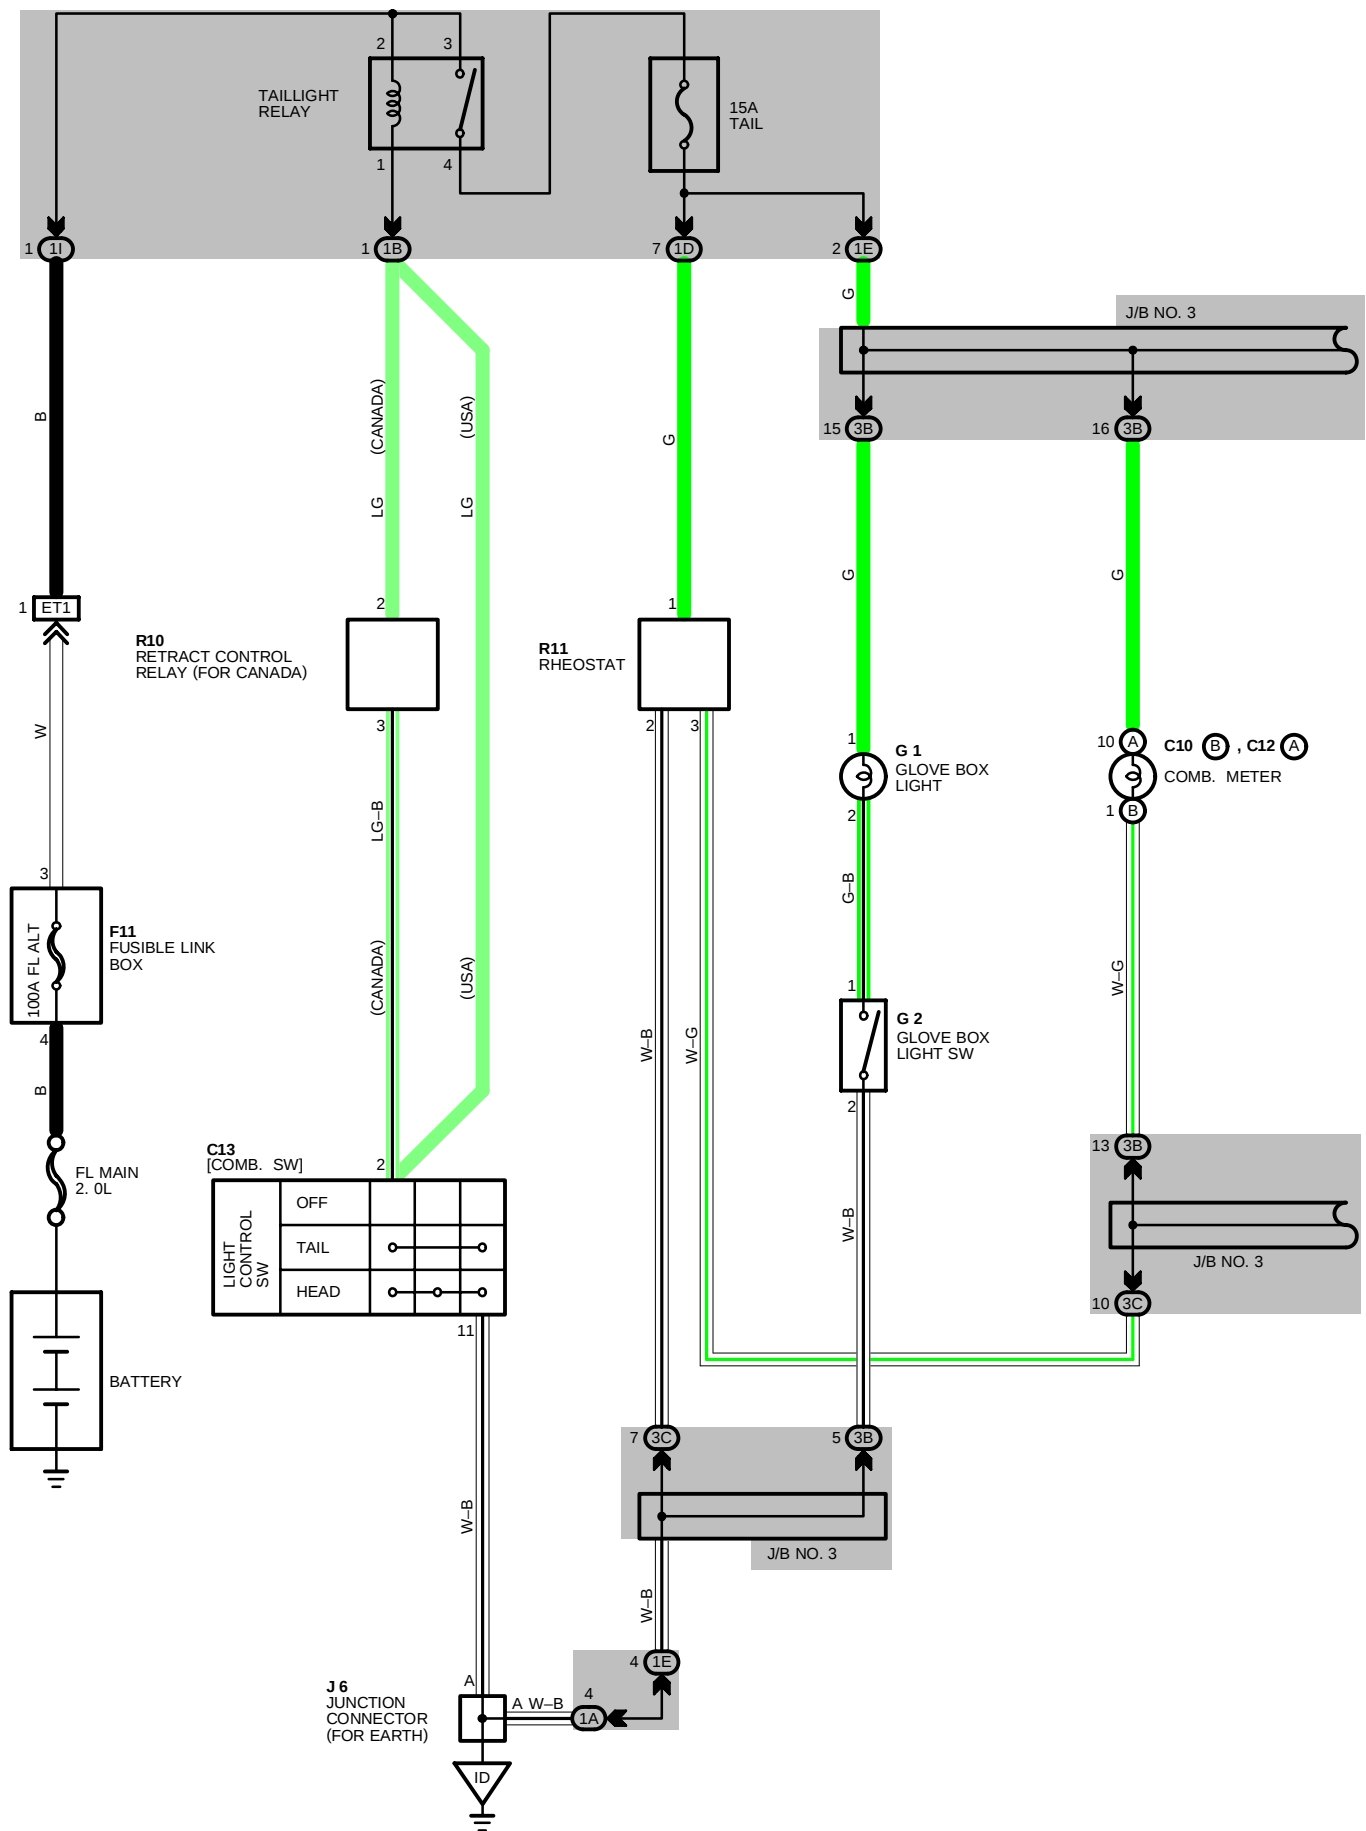

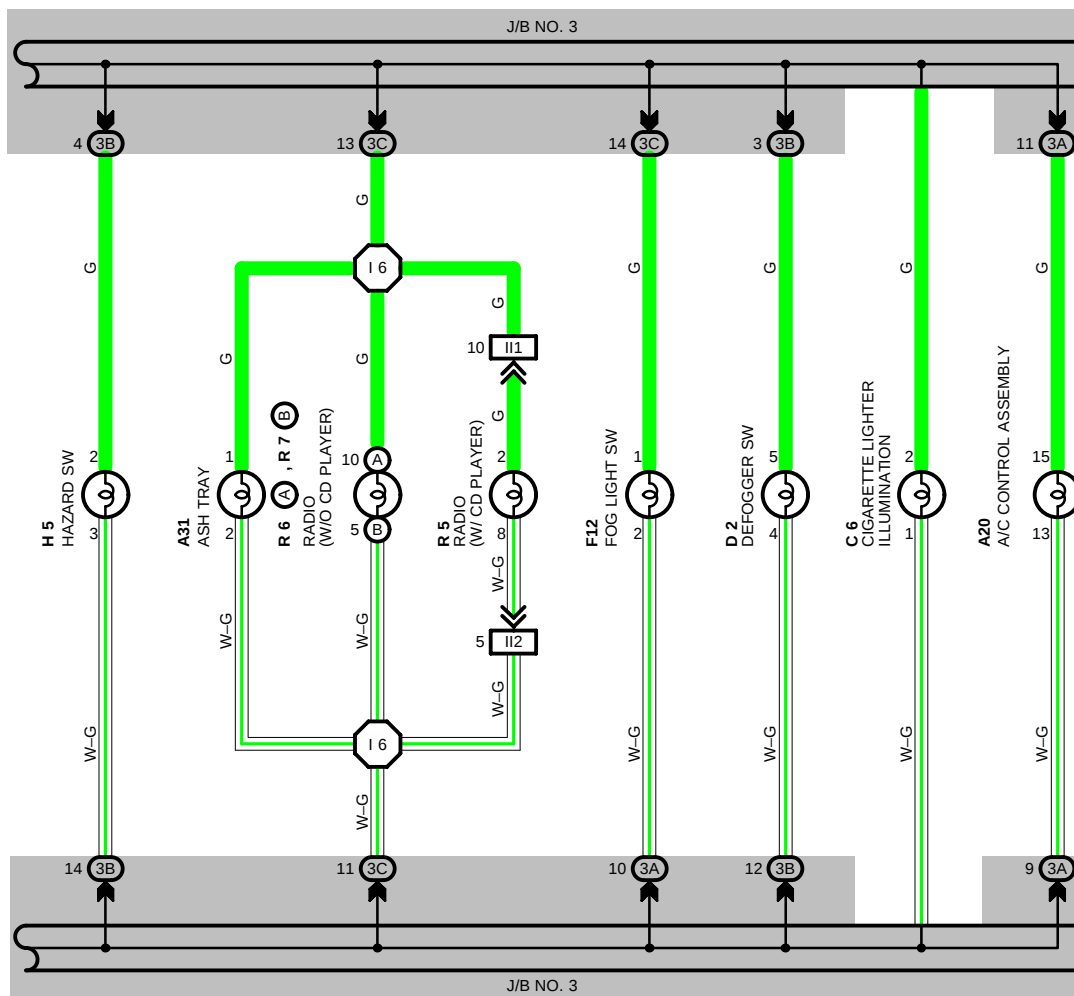

# ILLUMINATION

## SERVICE HINTS

### TAILLIGHT RELAY

3-4 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION (WHEN LIGHT AUTO TURN OFF SYSTEM IS OFF)

### R 8 RHEOSTAT

1-2 : APPROX. **12** VOLTS WITH RHEOSTAT FULLY TURNED COUNTERCLOCKWISE AND **0** VOLTS WITH FULLY TURNED CLOCKWISE

## ○ : PARTS LOCATION

| CODE | SEE PAGE | CODE | SEE PAGE | CODE | SEE PAGE |
|------|----------|------|----------|------|----------|
| A20  | 26       | D 2  | 26       | J 6  | 26       |
| A31  | 26       | F11  | 25       | R 5  | 26       |
| C 6  | 26       | F12  | 26       | R 6  | A 26     |
| C10  | B 26     | G 1  | 26       | R 7  | B 26     |
| C12  | A 26     | G 2  | 26       | R10  | 26       |
| C13  | 26       | H 5  | 26       | R11  | 26       |

## □ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| CODE | SEE PAGE | JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)  |
|------|----------|-------------------------------------------------------|
| 1A   | 18       | COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)             |
| 1B   |          |                                                       |
| 1D   |          |                                                       |
| 1E   |          |                                                       |
| 1I   | 18       | ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL) |
| 3A   | 22       | COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)    |
| 3B   |          |                                                       |
| 3C   |          |                                                       |

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS







| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|----------|------------------------------------------------------------|
| ET1  | 28       | ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2) |
| II1  | 32       | COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)   |
| II2  |          |                                                            |

## ▽ : GROUND POINTS


| CODE | SEE PAGE | GROUND POINTS LOCATION |
|------|----------|------------------------|
| ID   | 30       | LEFT KICK PANEL        |

## ○ : SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------|----------|---------------------------------|------|----------|---------------------------------|
| I 6  | 32       | COWL WIRE                       |      |          |                                 |

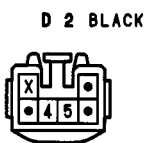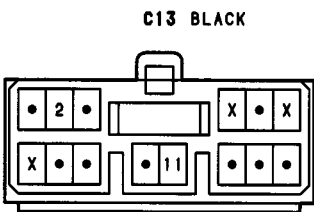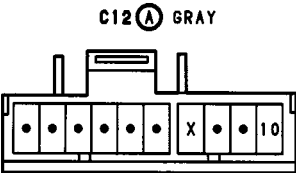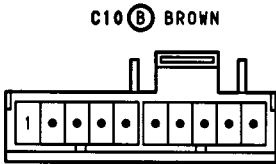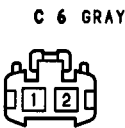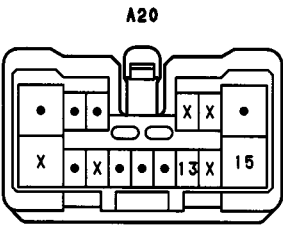

F11 BLACK

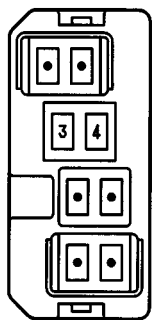

F12 BLACK



 
G 1 GRAY




G 2



H 5 BLACK




J 6

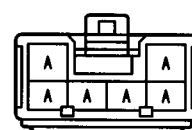

(HINT: SEE PAGE 7)


R 5

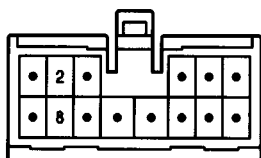


R 6 (A)



R 7 (B)

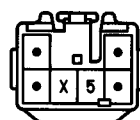

R10

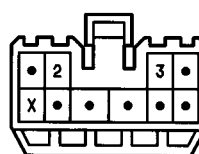

R11

