


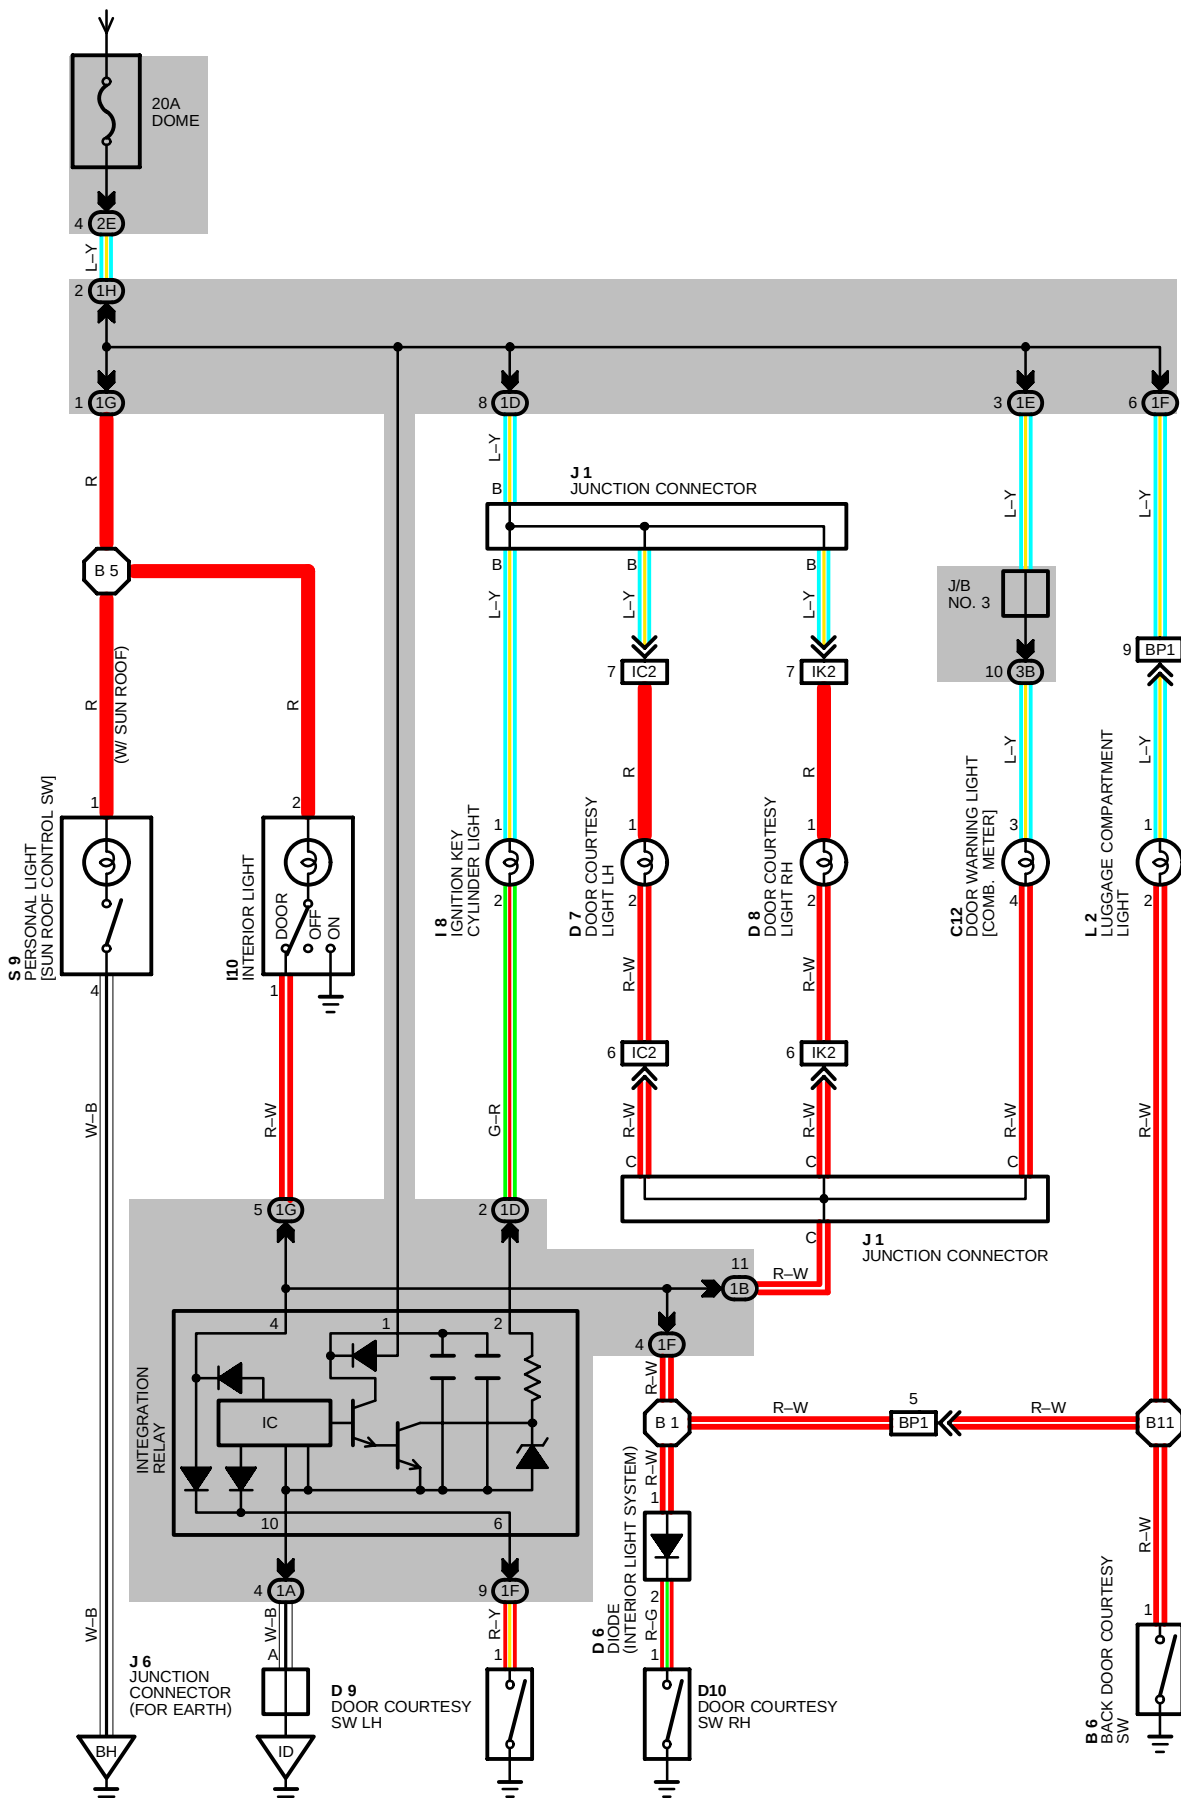

SERVICE HINTS

INTEGRATION RELAY

(1B)11-GROUND : APPROX. 12 VOLTS WITH DOOR CLOSED
0 VOLTS WITH EACH DOOR OPEN

D 9, D10 DOOR COURTESY SW

1-GROUND : CLOSED WITH DOOR OPEN

B 6 BACK DOOR COURTESY SW

1-GROUND : CLOSED WITH BACK DOOR OPEN

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 6	27	D 9	27	J 6	26
C12	26	D10	27	L 2	27
D 6	27	I 8	26	S 9	27
D 7	27	I10	27		
D 8	27	J 1	26		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1F	18	FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1G	18	ROOF WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1H	18	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2E	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
3B	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC2	30	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IK2	32	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BP1	34	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	30	LEFT KICK PANEL
BH	34	ROOF LEFT


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 1	34	FLOOR WIRE	B11	34	LUGGAGE ROOM WIRE
B 5	34	ROOF WIRE			


B 6 GRAY




C12 GRAY

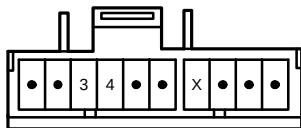

D 6

 

D 7, D 8

 


D 9, D10




I 8



 I10




J 1

 


(HINT : SEE PAGE 7)

J 6

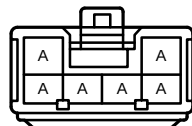

(HINT : SEE PAGE 7)

 L 2



S 9

