
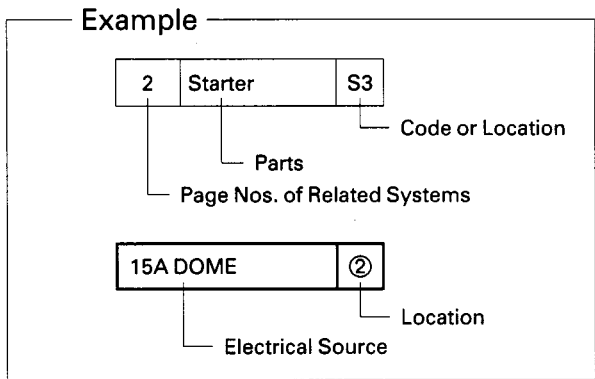


POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

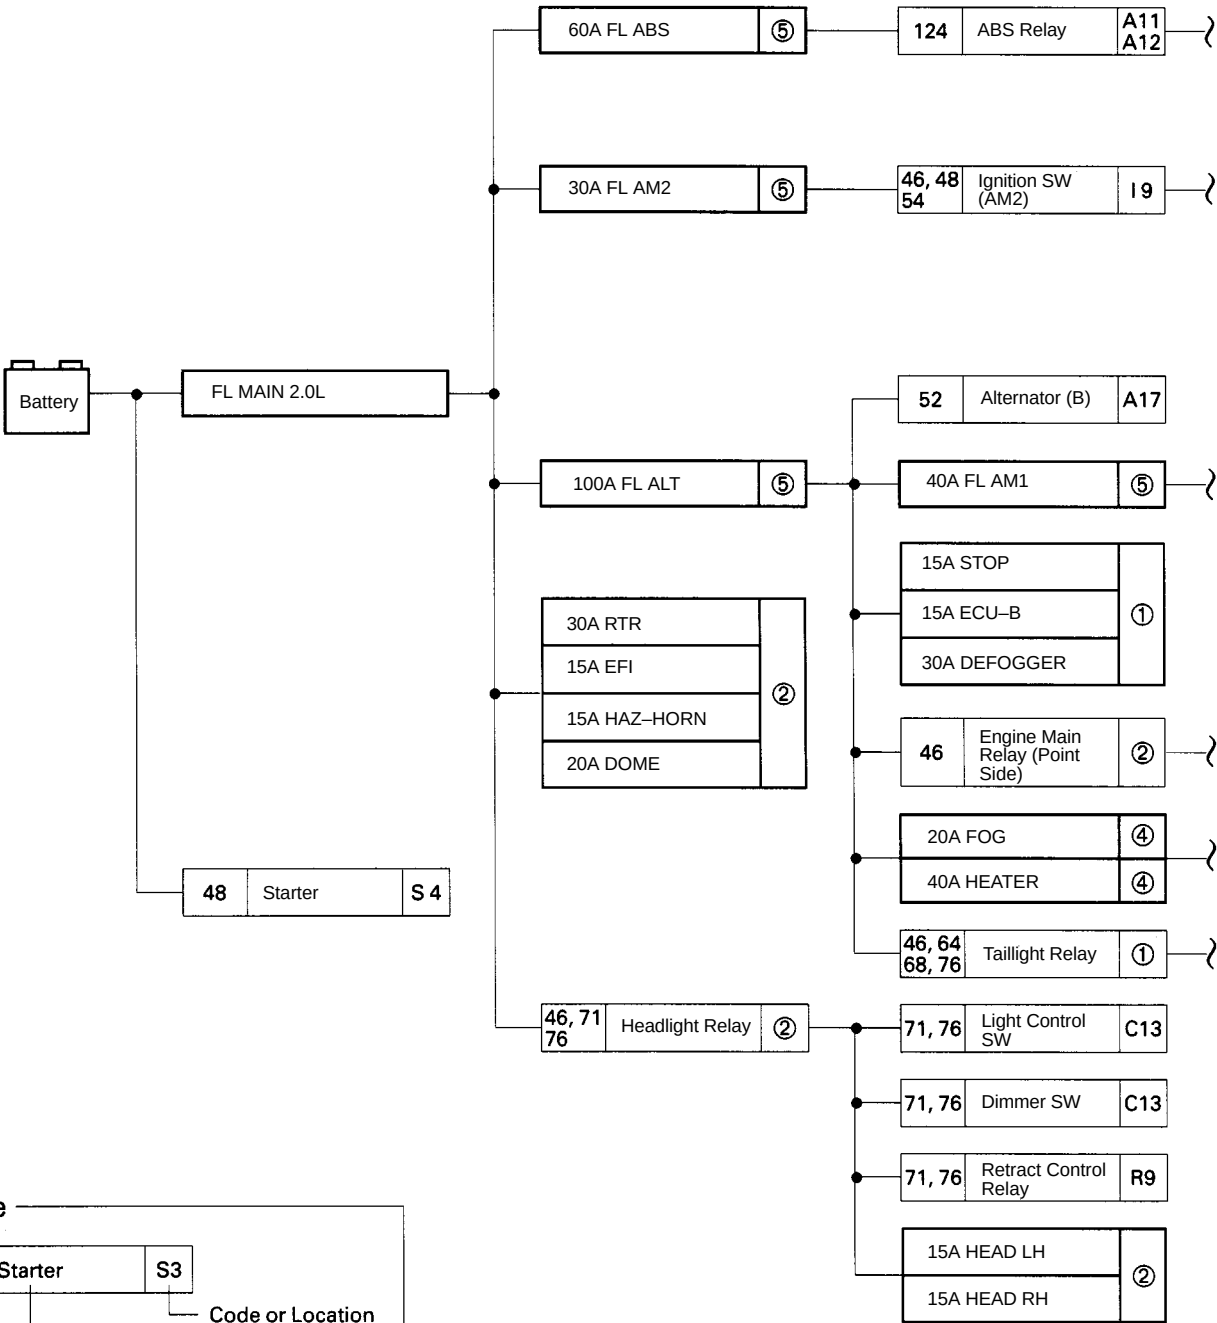

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) : R/B No. 2 (See page 23)

POWER SOURCE (Current Flow Chart)

Location			Page Nos. of Related Systems		148 159				124		52	148	159	64 148		64 159		148	148 159		64	148	116	124																		
					Parts				Code or Location				CB or Fuse																													
					A/C Condenser Fan Motor		A/C Idle-Up VSV		A/C Magnet Clutch and Compressor Sensor		A/C Pressure SW		ABS Actuator		ABS Relay		Alternator		A/C Amplifier (Auto A/C)		A/C Amplifier (Manual A/C)		A/C Control Assembly (Auto A/C)		A/C Control Assembly (Manual A/C)		A/C Power Transistor		A/C System Amplifier		Air Vent Mode Control Servo Motor		Ashtray Illumination		Auto A/C Amplifier		Auto Tilt Away ECU		ABS Deceleration Sensor		ABS ECU	
			A2	A3	A4	A5	A7	A11	A17	A18	A19	A20	A19	A20	A22	A25	A30	A31	A32	A34	A36	A37	A39																			
①	30A	DEFOGGER																																								
	20A	WIPER																																								
	15A	GAUGE		●	●	●	●	●		●	●	●		●	●		●		●	●	●			●																		
	7.5A	IGN				●			●																																	
	15A	ECU-B																						●																		
	10A	TURN																																								
	15A	CIG & RADIO																		●																						
	15A	TAIL										●		●			●																									
	15A	ECU-IG							●													●	●																			
	15A	STOP																					●																			
②	15A	HEAD LH																																								
	15A	HEAD RH																																								
	30A	RTR																																								
	15A	EFI																																								
	20A	DOME																		●																						
	15A	HAZ-HORN																																								
	30A	FL RDI FAN																																								
	30A	FL CDS FAN	●																																							
③	30A	POWER																			●																					
④	20A	FOG											●																													
	10A	A/C								●		●																														
	40A	HEATER													●				●																							

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (3) R/B No. 2 (See page 23)

[illegible]

POWER SOURCE (Current Flow Chart)

Location			Page Nos. of Related Systems		118	64 106	90 108	90 93	86				93		54	54 148 159	76		68		68 84	100	54	64 74	
			Parts		Cruise Control ECU	Defogger SW	Diode (for Key Off)	Door Lock ECU	Diode (for Interior System)	Door Courtesy Light LH	Door Courtesy Light RH	Door Courtesy SW LH	Door Courtesy SW RH	Door Lock Motor LH	Door Lock Motor RH	Engine ECU	Fog Light LH	Fog Light RH	Front Side Marker Light LH	Front Side Marker Light RH	Front Turn Signal Light and Clearance Light LH	Front Turn Signal Light and Clearance Light RH	Front Wiper Motor	Fuel Pump Resistor	Fog Light SW
			CB or Fuse			C17	D2	D4	D5	D6	D7	D8	D9	D10	D13	D14	E5	E6	F1	F2	F5	F6	F7	F8	F9
①	30A	DEFOGGER																							
	20A	WIPER																				●			
	15A	GAUGE	●	●	●	●									●										
	7.5A	IGN																							
	15A	ECU-B																							
	10A	TURN																		●	●				
	15A	CIG & RADIO																							
	15A	TAIL		●												●			●	●	●			●	
	15A	ECU-IG																							
	15A	STOP														●									
②	15A	HEAD LH																						●	
	15A	HEAD RH																						●	
	30A	RTR																							
	15A	EFI												●	●								●		
	20A	DOME					●	●	●	●	●														
	15A	HAZ-HORN																		●	●				
	30A	FL RDI FAN																							
	30A	FL CDS FAN																							
③	30A	POWER				●						●	●												
④	20A	FOG														●	●								
	10A	A/C																							
	40A	HEATER																							

[LOCATION] (1) : J/B No. 1 (See page18) (2) : J/B No. 2 (See page20) (3) R/B No. 2 (See page23)

54	64	71 74 76	115	64 84	80	54	86	86 138 142	54 80 144	52 84 144	76 118	90 108 148	94 112 159	148 159	68	86	106	54	108	90						
Fuel Pump	Glove Box Light	Glove Box Light SW	Headlight LH	Headlight RH	Horn LH	Horn RH	Hazard SW	High Mount Stop Light	ISC Valve	Ignition Key Cylinder Light	Interior Light	Junction Connector			Licence Plate Light	Luggage Compartment Light	Noise Filter (for Defogger)	Oxygen Sensor	Power Seat Motor (for Lumbar Support)	Power Seat Motor (for Side Support)	Power Seat SW	Power Window Master SW	Power Window Motor LH	Power Window Motor RH		
F17	G1	G2	H1	H2	H3	H4	H5	H6	I1	I8	I10	J1	J2	J3	J4	J5	L1	L2	N2	O2	P2	P3	P4	P5	P6	P7
																			●							
															●											
							●								●											
	●	●					●										●									
								●					●													
			●																							
				●																						
●									●											●						
					●	●	●			●	●	●						●								
														●												
																				●	●	●	●	●	●	
																●										

(4) : R/B No. 4 (See page 24)

POWER SOURCE (Current Flow Chart)

Location			Page Nos. of Related Systems			90	148 159	71	148 159	64	64 136 142	110	71 76	76	64	82	84	80	68	82	84	80	68	106	98
						Parts			Code or Location																
			CB or Fuse																						
						Power Window SW RH	Radiator Fan Motor	Retract Motor LH	Retract Motor RH	RECIRC/FRESH Control Servo Motor	Radio and Player (w/ CD Player)	Radio and Player (w/o CD Player)	Remote Control Mirror SW	Retract Control Relay	Retract Control Relay (for CANADA)	Rheostat	Back-Up Light LH [Rear Comb. Light LH]	Rear Turn Signal Light LH [Rear Comb. Light LH]	Stop Light LH [Rear Comb. Light LH]	Tail and Rear Side Marker Light LH [Rear Comb. Light LH]	Back-Up Light RH [Rear Comb. Light RH]	Rear Turn Signal Light RH [Rear Comb. Light RH]	Stop Light RH [Rear Comb. Light RH]	Tail and Rear Side Marker Light RH [Rear Comb. Light RH]	Rear Window Defogger
P8	R1	R2	R3	R4	R5	R6	R8	R9	R10	R11	R12				R13				R20	R21	R23				
①	30A	DEFOGGER																					●	●	
	20A	WIPER																						●	
	15A	GAUGE					●								●				●						
	7.5A	IGN																							
	15A	ECU-B																							
	10A	TURN																		●					
	15A	CIG & RADIO																							
	15A	TAIL																							
	15A	ECU-IG																							
	15A	STOP																							
②	15A	HEAD LH																							
	15A	HEAD RH																							
	30A	RTR																							
	15A	EFI																							
	20A	DOME																							
	15A	HAZ-HORN																							
	30A	FL RDI FAN																							
	30A	FL CDS FAN																							
③	30A	POWER																							
④	20A	FOG																							
	10A	A/C																							
	40A	HEATER																							

[LOCATION] (1) : J/B No. 1 (See page 18) (2) : J/B No. 2 (See page 20) (6) R/B No. 2 (See page 23)

[illegible]