


POWER SOURCE

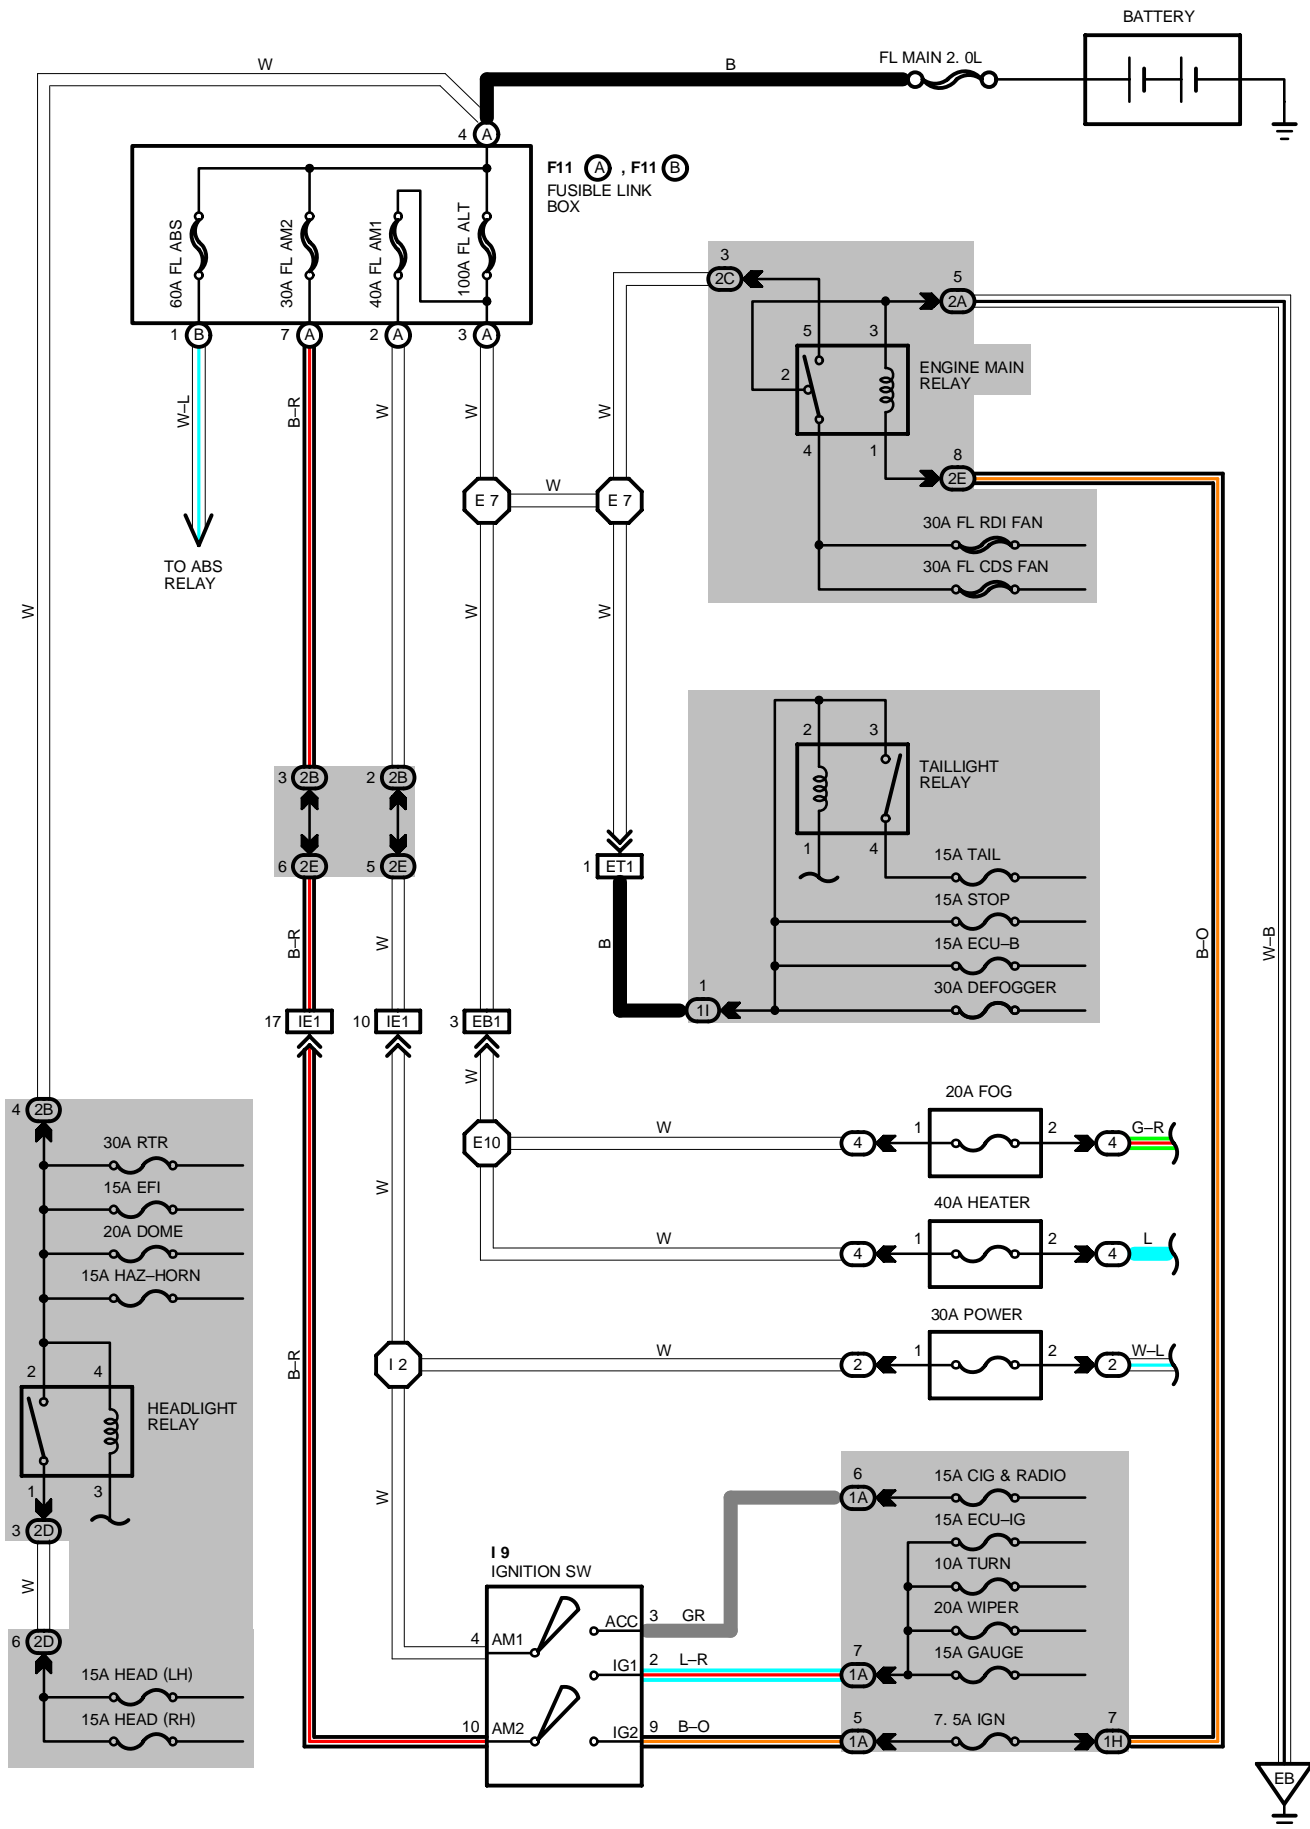

SERVICE HINTS

TAILLIGHT RELAY

3-4 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

ENGINE MAIN RELAY

4-5 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

HEADLIGHT RELAY

4-5 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

I9 IGNITION SW

4-3 : CLOSED WITH IGNITION KEY AT **ACC** OR **ON** POSITION

9-10 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	A	25	F11	B	25
				I9	26

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	23	R/B NO. 2 (LEFT KICK PANEL)
4	24	R/B NO. 4 (RIGHT KICK PANEL)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1H	18	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1I		
2A	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2B	20	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2C		
2D	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
2E		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	28	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
ET1	28	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)
IE1	30	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	28	FRONT LEFT FENDER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E7	28	ENGINE WIRE	I2	32	COWL WIRE
E10	28	COWL WIRE			

F11 (A) BLACK

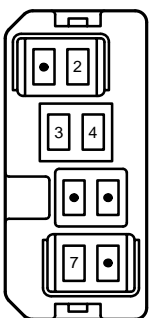

F11 (B) BLACK



I9 BLACK

