


RADIO AND PLAYER (w/ CD PLAYER)

FROM POWER SOURCE SYSTEM (SEE PAGE 46)

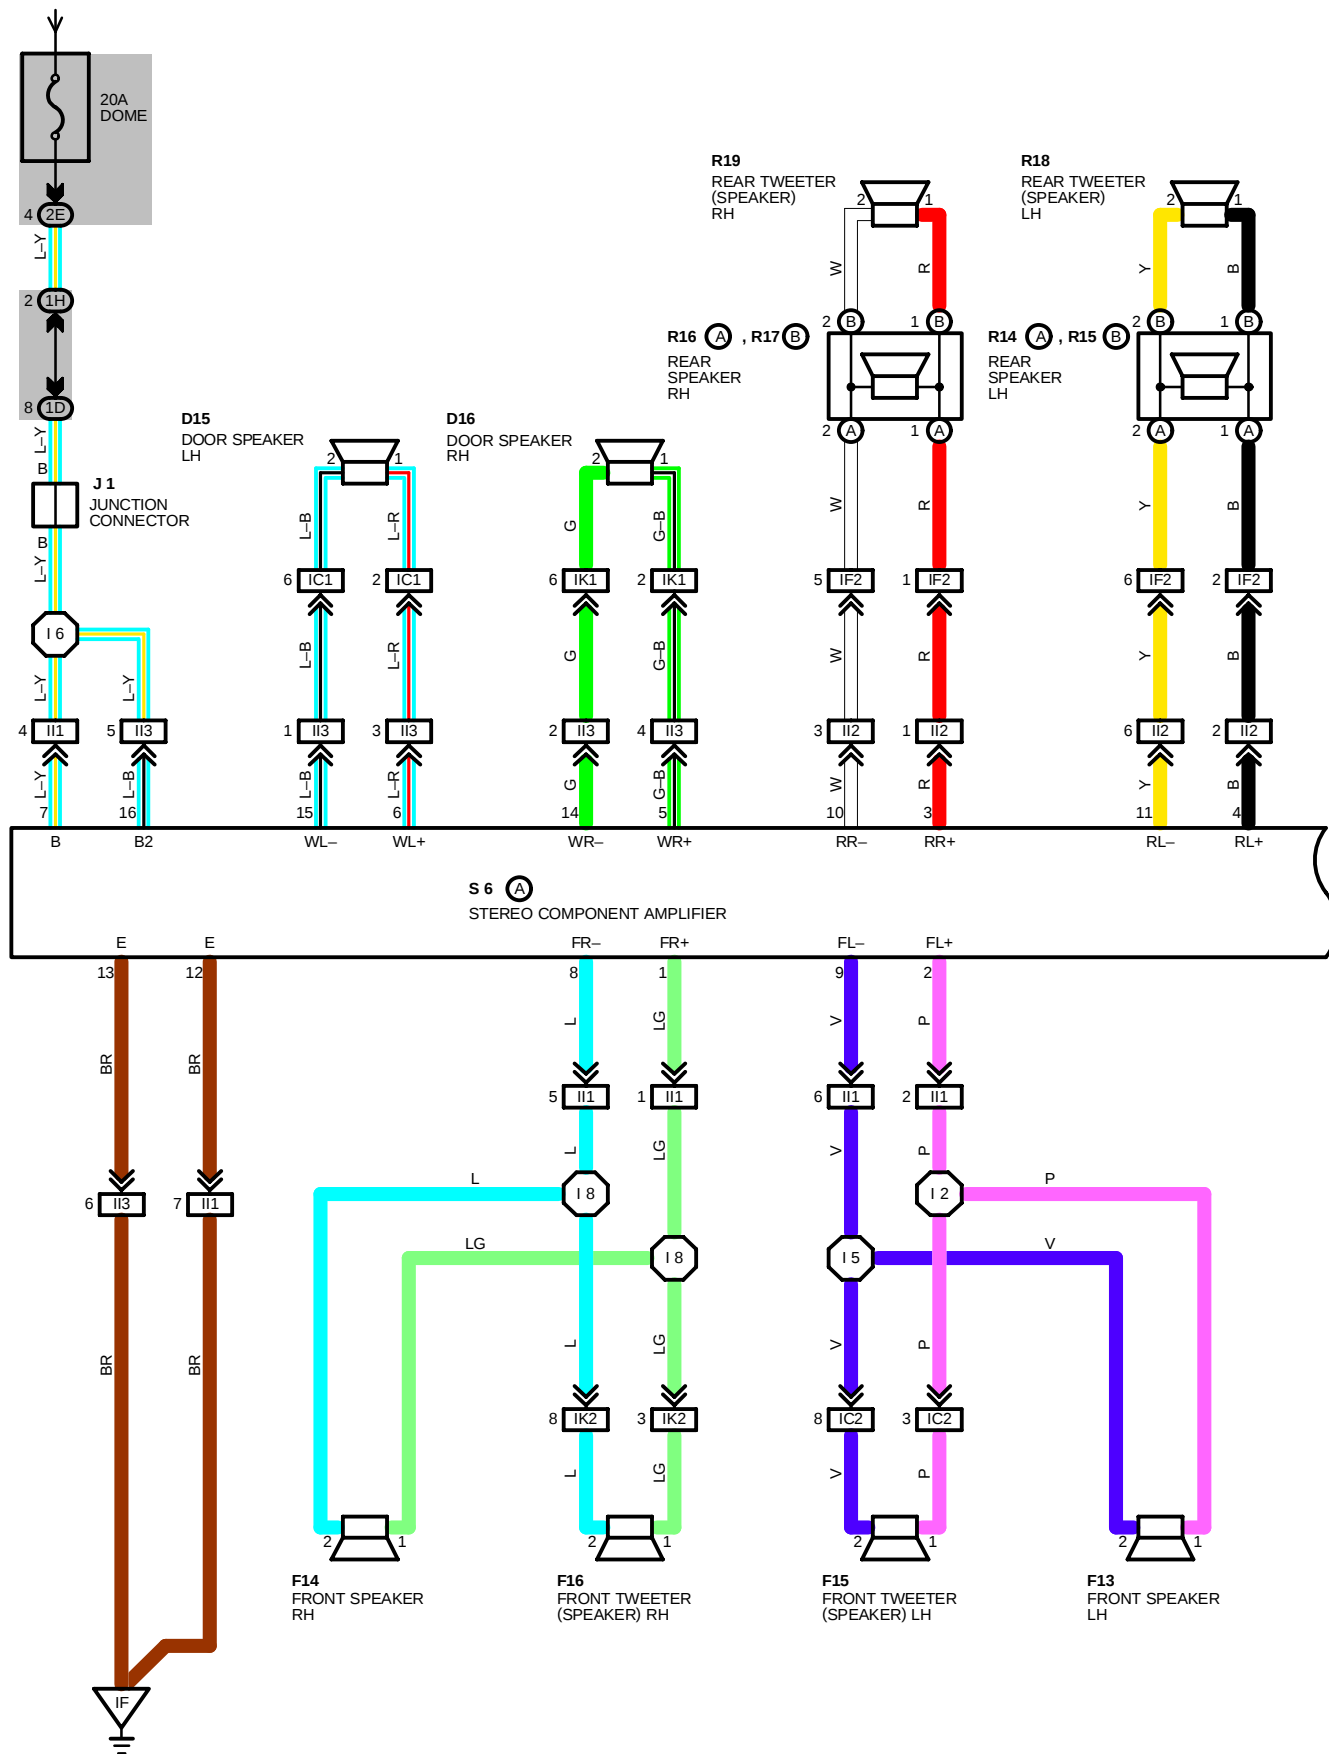



RADIO AND PLAYER (w/ CD PLAYER)

SERVICE HINTS

S 5 (B), S 6 (A) POWER AMPLIFIER

(A) 7, (A)16-GROUND : ALWAYS APPROX. 12 VOLTS

(B) 7-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON OR ACC POSITION

(A)12, (A)13-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D15	27	J 1	26	R18	27
D16	27	R 5	26	R19	27
F13	26	R14 A	27	S 5 B	26
F14	26	R15 A	27	S 6 A	26
F15	27	R16 B	27		
F16	27	R17 B	27		

□ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1D	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
1H	18	ENGINE ROOM MAIN WIRE AND J/B NO.1 (LEFT KICK PANEL)
2E	20	ENGINE ROOM MAIN WIRE AND J/B NO.2 (NEAR THE BATTERY)
3C	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1	30	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IC2		
IF2	30	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
II1	32	COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)
II2		
II3	32	COWL WIRE AND CONSOLE BOX WIRE (RIGHT KICK PANEL)
IK1	32	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IK2		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IF	30	INSTRUMENT PANEL BRACE RH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 2	32	COWL WIRE	I 8	32	COWL WIRE
I 5			I10	32	CONSOLE BOX WIRE
I 6					

D15, D16



 
F13, F14



F15, F16




J 1



(HINT: SEE PAGE 7)

R 5

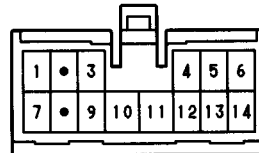

R14 (A), R16 (B)




R15 (A), R17 (B)



R18, R19



S 5 (B)

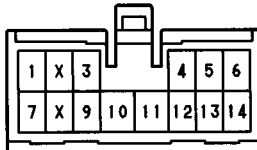

S 6 (A)

