


# RADIO AND PLAYER (w/o CD PLAYER)

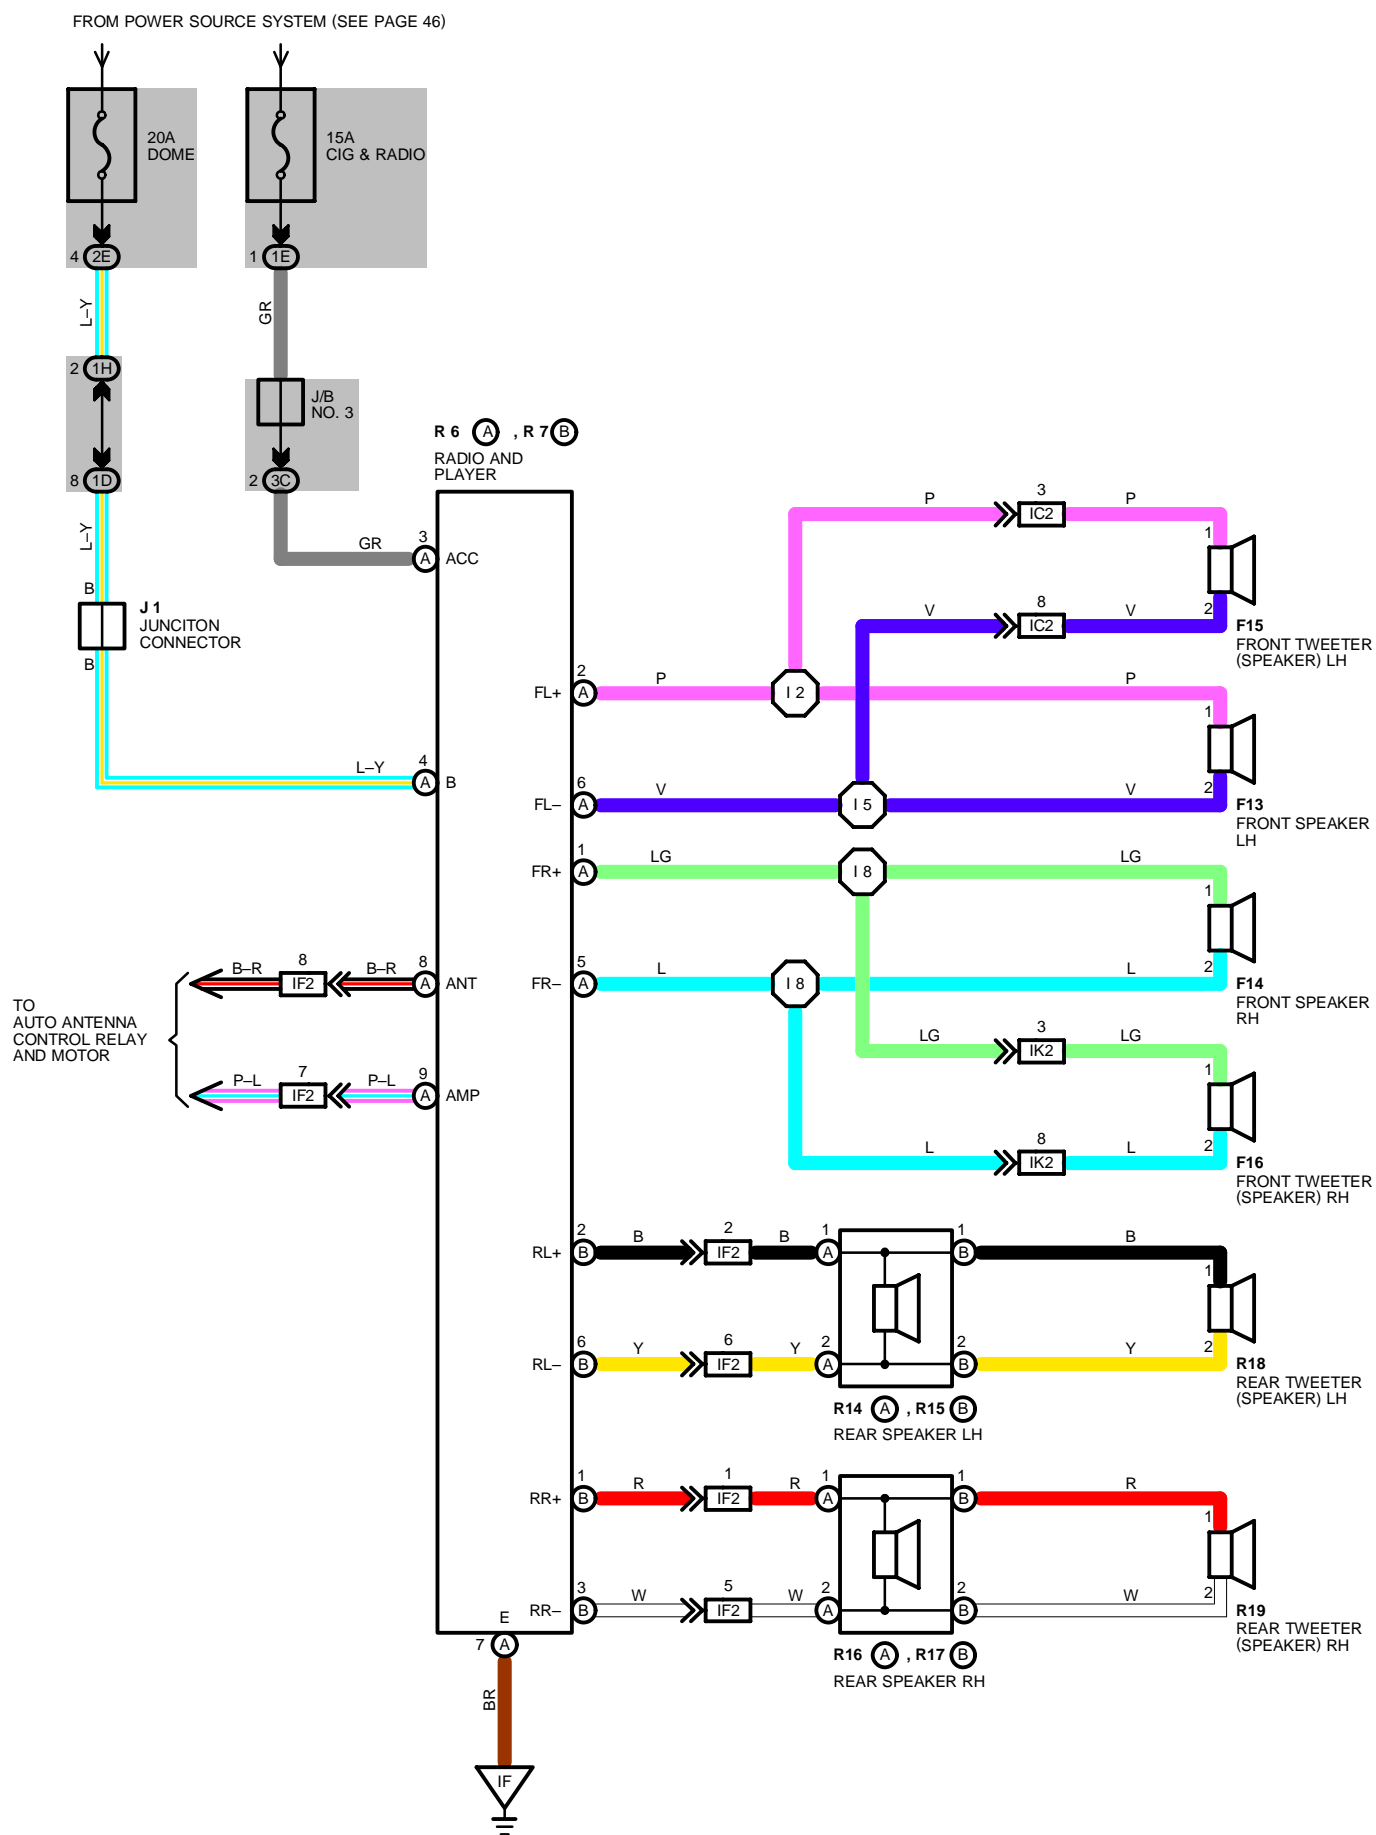

## SERVICE HINTS

### R 6(A), R 7(B) RADIO AND PLAYER

(A) 4-GROUND : ALWAYS APPROX. 12 VOLTS

(A) 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** OR **ACC** POSITION

(A) 7-GROUND : ALWAYS CONTINUITY

## ○ : PARTS LOCATION

CODE	SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
F13	26	R 6	A	26	R17	B	27
F14	26	R 7	B	26	R18		27
F15	27	R14	A	27	R19		27
F16	27	R15	B	27			
J 1	26	R16	A	27			

## □ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1D	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
1H	18	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2E	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
3C	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC2	30	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IF2	30	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IK2	32	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)

 
## ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IF	30	INSTRUMENT PANEL BRACE RH

## ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 5	32	COWL WIRE	I 8	32	COWL WIRE


F13, F14




F15, F16




J 1

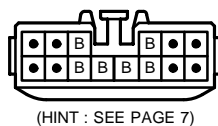

R 6 (A)

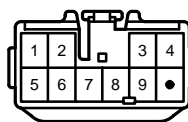

R 7 (B)

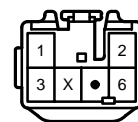

R14 (A), R16 (A)



R15 (B), R17 (B)



R18, R19

