



STARTING AND IGNITION

SERVICE HINTS -

STARTER

POINTS CLOSED WITH CLUTCH START SW ON AND IGNITION SW AT ST POSITION

STARTER RELAY

(4) 2-(4) 4: CLOSED WITH CLUTCH START SW ON AND IGNITION SW AT ST POSITION

C 2 COLD START INJECTOR

1-2: APPROX. 12 VOLTS WHILE START INJECTOR TIME SW IS CLOSED AND STARTER CRANKING

C9 CLUTCH START SW

1-2: CLOSED WITH CLUTCH PEDAL FULLY DEPRESSED

19 IGNITION SW

- 4-7: CLOSED WITH IGNITION SW AT **ST** POSITION
- 9-10: CLOSED WITH IGNITION SW AT ON OR ST POSITION

: PARTS LOCATION

CODE		SEE PAGE	CODE	SEE PAGE	COD	E	SEE PAGE
С	1	25	E5 B	26	N 1		25
С	2	25	F11	25	S 2		25
C 9		26	12	25	S3 A		25
D 1		25	13	25	S 4	В	25
E 4	Α	26	19	26			

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
4	24	R/B NO. 4 (RIGHT KICK PANEL)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)		
2A	20	ENGINE ROOM MAIN WIRE AND J/B NO.2 (NEAR THE BATTERY)		
2B	20	ENCINE WIDE AND UD NO 2 (NEAD THE DATTEDY)		
2C	20	ENGINE WIRE AND J/B NO.2 (NEAR THE BATTERY)		
2E	20	ENGINE ROOM MAIN WIRE AND J/B NO.2 (NEAR THE BATTERY)		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	28	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
ES2	28	ENGINE WIRE AND ENGINE ROOM NO. 2 WIRE (NEAR THE DISTRIBUTOR)
IE1	30	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)

7 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	28	FRONT LEFT FENDER
EC	28	INTAKE MANIFOLD
IG	30	R/B NO. 4 SET BOLT

: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 5			17	32	ENGINE WIRE
E 7	28	ENGINE WIRE	18	32	COWL WIRE
E 9					

