


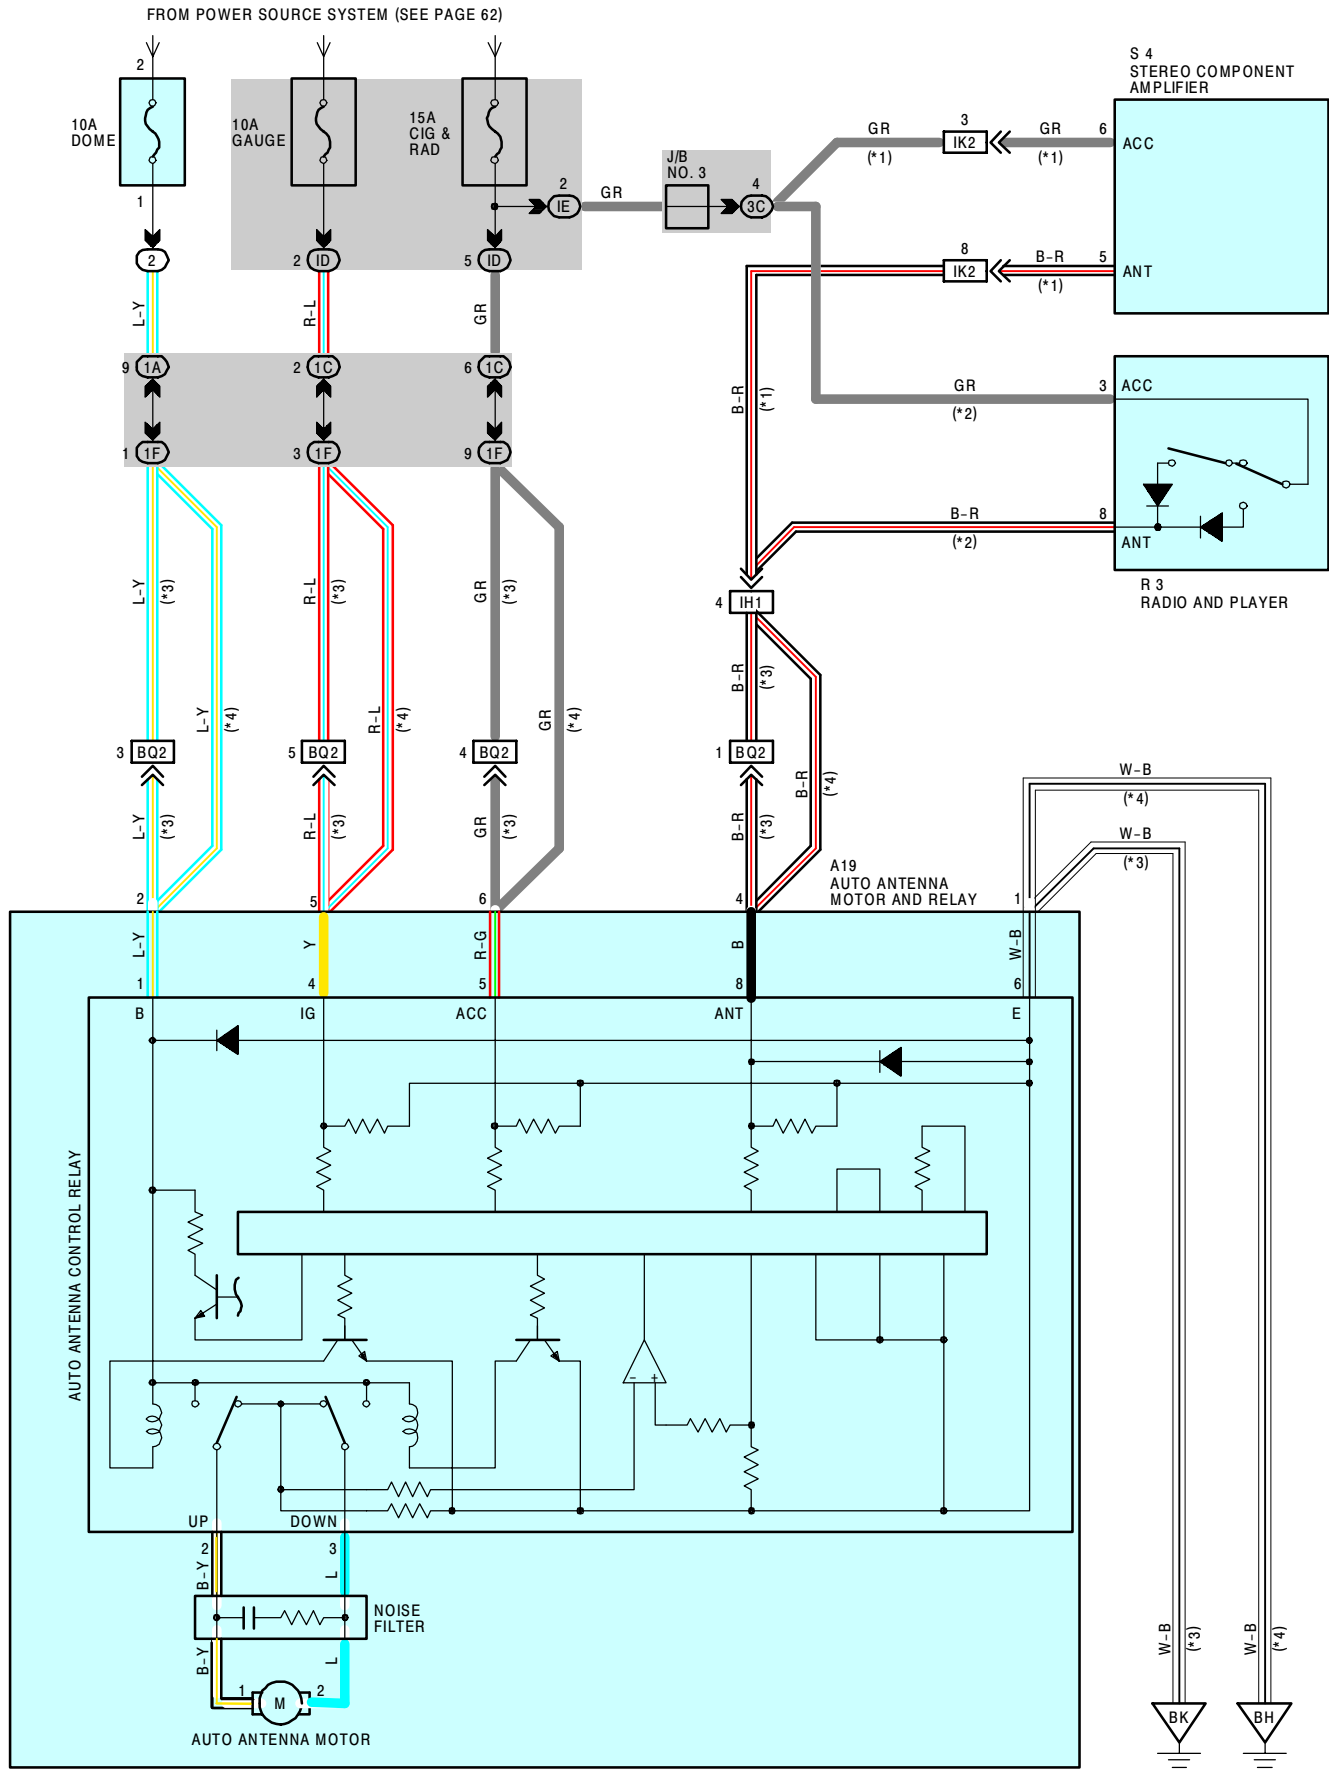

# AUTO ANTENNA

\*1:SEPARATE TYPE AMPLIFIER \*3:L/B  
\*2:BUILT-IN TYPE AMPLIFIER \*4:C/P, CONVERTIBLE



## SERVICE HINTS

### A19 AUTO ANTENNA MOTOR AND RELAY

2-GROUND : ALWAYS APPROX. 12 VOLTS

5-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION

6-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ACC** OR **ON** POSITION

1-GROUND : ALWAYS CONTINUITY

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
<b>A19</b>	34 (L/B), 35 (C/P)	<b>R 3</b>	33		
	36 (CONVERTIBLE)	<b>S 4</b>	33		

### ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
<b>2</b>	26	ENGINE COMPARTMENT LEFT

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
<b>ID</b>	20	INSTRUMENT PANEL WIRE AND INPANE J/B (LEFT KICK PANEL)
<b>IE</b>		
<b>1A</b>	22	ENGINE ROOM MAIN WIRE AND J/B NO.1 (LEFT KICK PANEL)
<b>1C</b>	22	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT KICK PANEL)
<b>1F</b>	22	FLOOR WIRE AND J/B NO.1 (LEFT KICK PANEL)
<b>3C</b>	24	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
<b>IH1</b>	42	FLOOR WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
<b>IK2</b>	44	INSTRUMENT PANEL WIRE AND FLOOR NO.3 WIRE (BEHIND THE RADIO AND PLAYER)
<b>BQ2</b>	46 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE ROOM LEFT)

 
### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
<b>BH</b>	48 (C/P)	UNDER THE LEFT CENTER PILLAR
	50 (CONVERTIBLE)	
<b>BK</b>	46 (L/B)	BACK DOOR CENTER

A19



R 3 BLUE



S 4

