





RADIO AND PLAYER (SEPARATE TYPE AMPLIFIER)

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

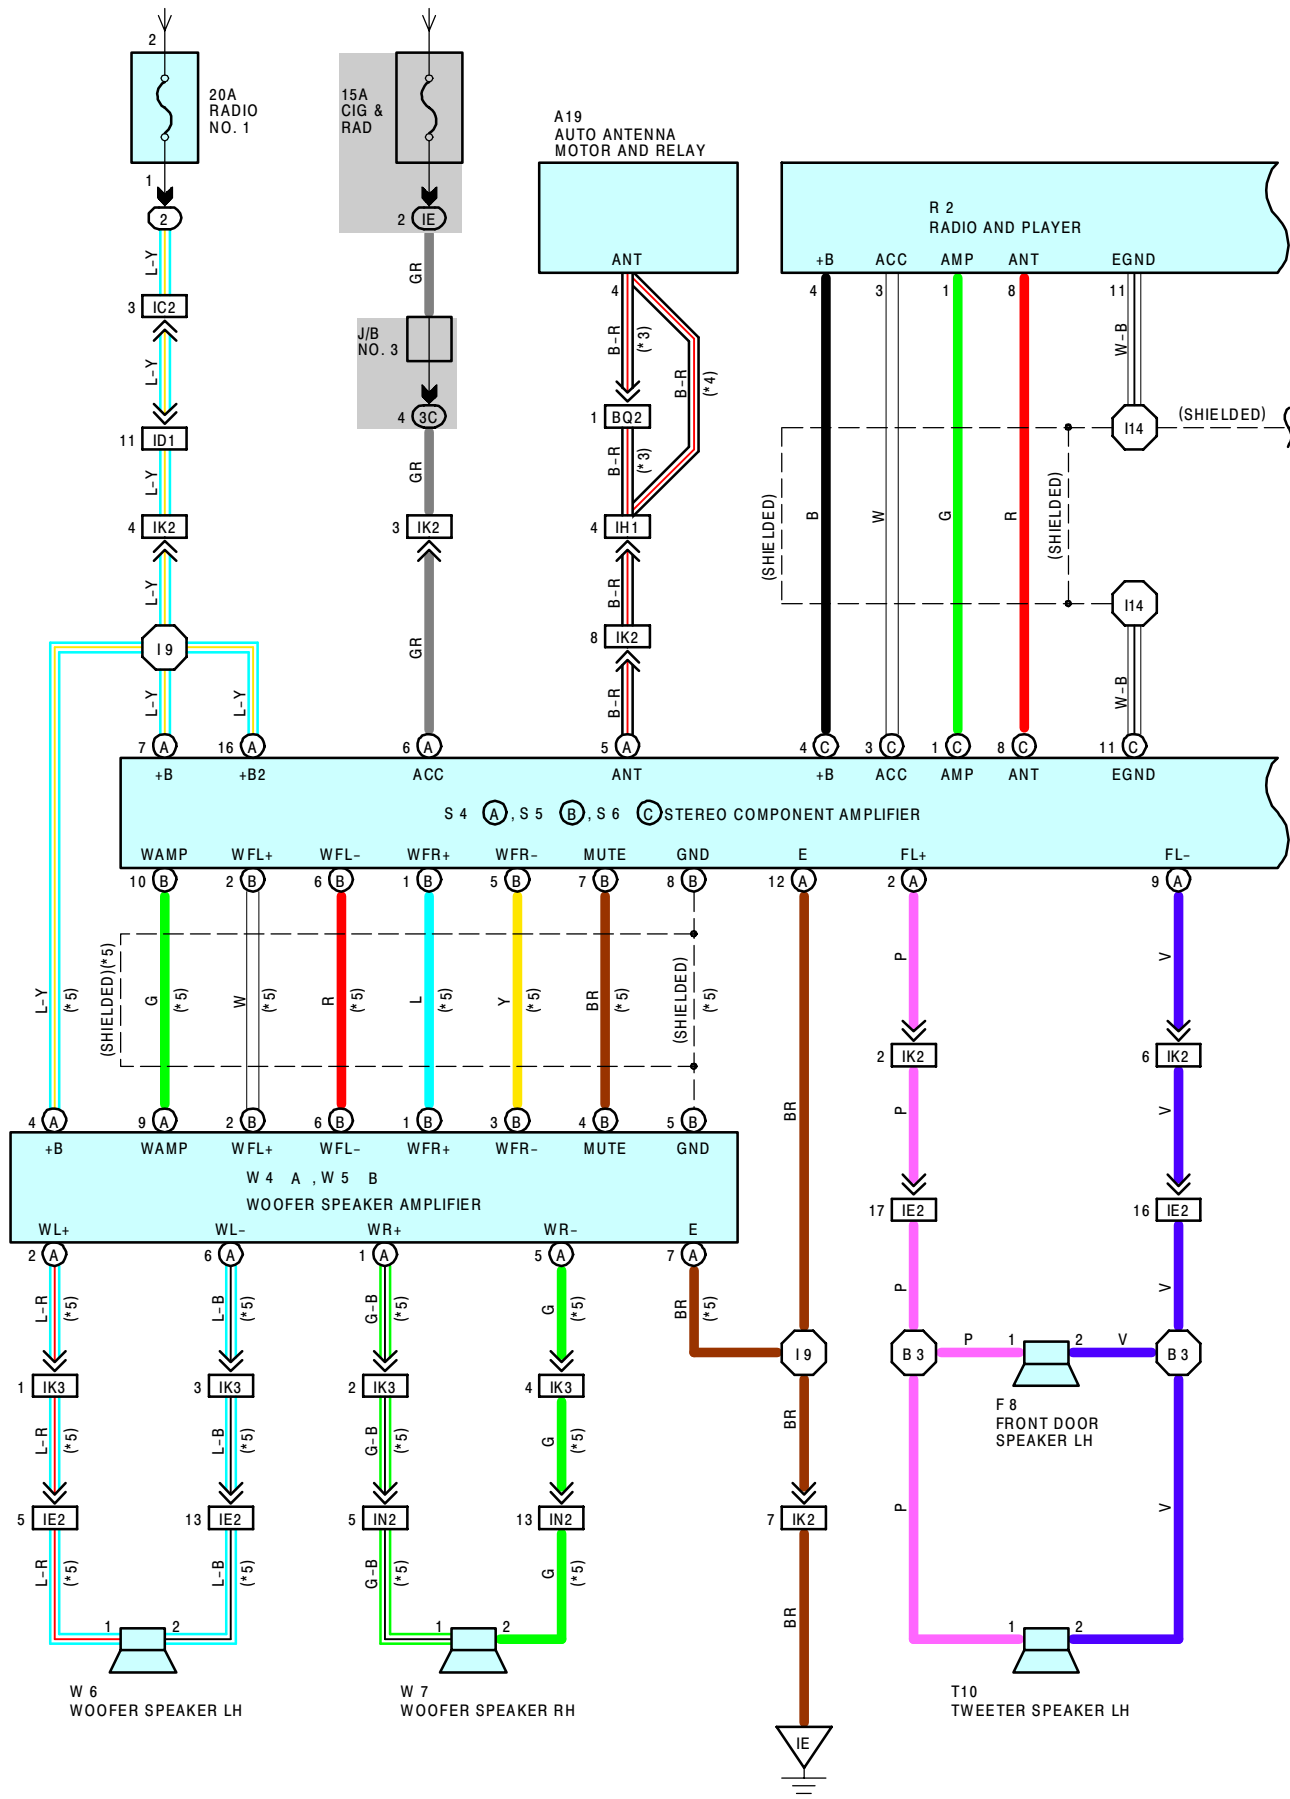

*1: L/B, C/P *3 :L/B
 *2 :CONVERTIBLE *4 : C/P. CONVERTIBLE *5 :W/ CD PLAYER

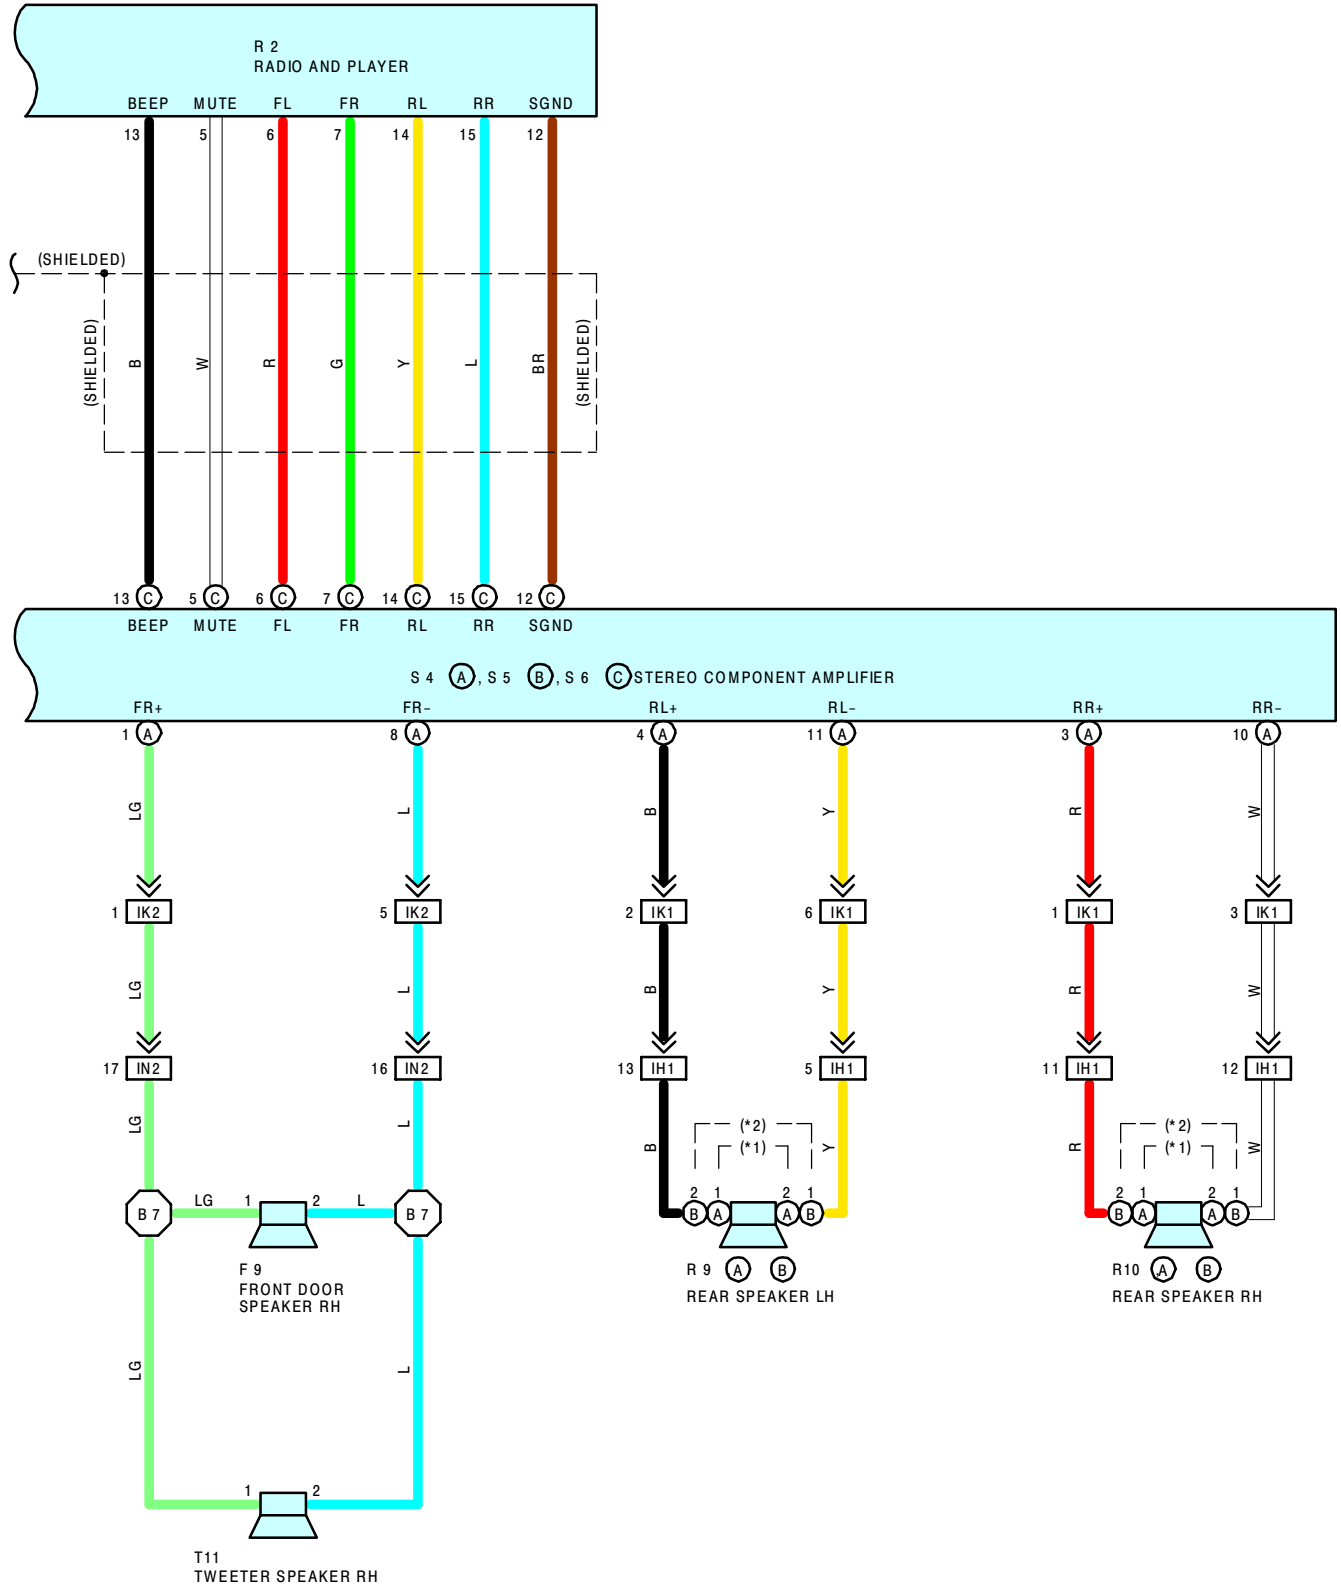



RADIO AND PLAYER (SEPARATE TYPE AMPLIFIER)

SERVICE HINTS

S 4 (A) STEREO COMPONENT AMPLIFIER

(A) 6-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT ACC OR ON POSITION

(A) 7, (A) 16-GROUND : ALWAYS APPROX. 12 VOLTS

(A) 12-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A19	34 (L/B), 35 (C/P)	R 9	B 37 (CONVERTIBLE)	T11	34 (L/B), 35 (C/P)
	36 (CONVERTIBLE)	R10	A 34 (L/B), 35 (C/P)		37 (CONVERTIBLE)
F 8	34 (L/B), 35 (C/P)		B 37 (CONVERTIBLE)	W 4	A 33
	36 (CONVERTIBLE)	S 4	A 33	W 5	B 33
F 9	34 (L/B), 35 (C/P)	S 5	B 33	W 6	34 (L/B), 35 (C/P)
	36 (CONVERTIBLE)	S 6	C 33		37 (CONVERTIBLE)
R 2	33	T10	34 (L/B), 35 (C/P)	W 7	34 (L/B), 35 (C/P)
R 9	A 34 (L/B), 35 (C/P)		37 (CONVERTIBLE)		37 (CONVERTIBLE)

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	26	ENGINE COMPARTMENT LEFT

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
IE	20	INSTRUMENT PANEL WIRE AND INPANE J/B (LEFT KICK PANEL)
3C	24	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC2	42	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
ID1	42	INSTRUMENT PANEL WIRE AND COWL WIRE (LEFT KICK PANEL)
IE2	42	FRONT DOOR LH WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
IH1	42	FLOOR WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
IK1	44	INSTRUMENT PANEL WIRE AND FLOOR NO.3 WIRE (BEHIND THE RADIO AND PLAYER)
IK2		
IK3		
IN2	44	FRONT DOOR RH WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
BQ2	46 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE ROOM LEFT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	42	INSTRUMENT PANEL BRACE LH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 9	44	FLOOR NO.3 WIRE	B 3	50 (CONVERTIBLE)	FRONT DOOR LH WIRE
I14	44	RADIO SUB WIRE	B 7	46 (L/B)	FRONT DOOR RH WIRE
B 3	46 (L/B)	FRONT DOOR LH WIRE		48 (C/P)	
	48 (C/P)			50 (CONVERTIBLE)	

*1 : L/B, C/P
*2 : CONVERTIBLE

