

ABBREVIATIONS

The following abbreviations are used in this manual.

ABS	= Anti-Lock Brake System
A/C	= Air Conditioning
A/T	= Automatic Transaxle
COMB.	= Combination
C/P	= Coupe Type
ECU	= Electronic Control Unit
EGR	= Exhaust Gas Recirculation
ESA	= Electronic Spark Advance
FL	= Fusible Link
IC	= Integrated Circuit
J/B	= Junction Block
L/B	= Liftback Type
LH	= Left-Hand
M/T	= Manual Transaxle
O/D	= Overdrive
R/B	= Relay Block
RH	= Right-Hand
SFI	= Sequential Multiport Fuel Injection
SRS	= Supplemental Restraint System
SW	= Switch
TEMP.	= Temperature
VSV	= Vacuum Switching Valve
W/	= With
W/O	= Without

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.