


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[5S-FE]

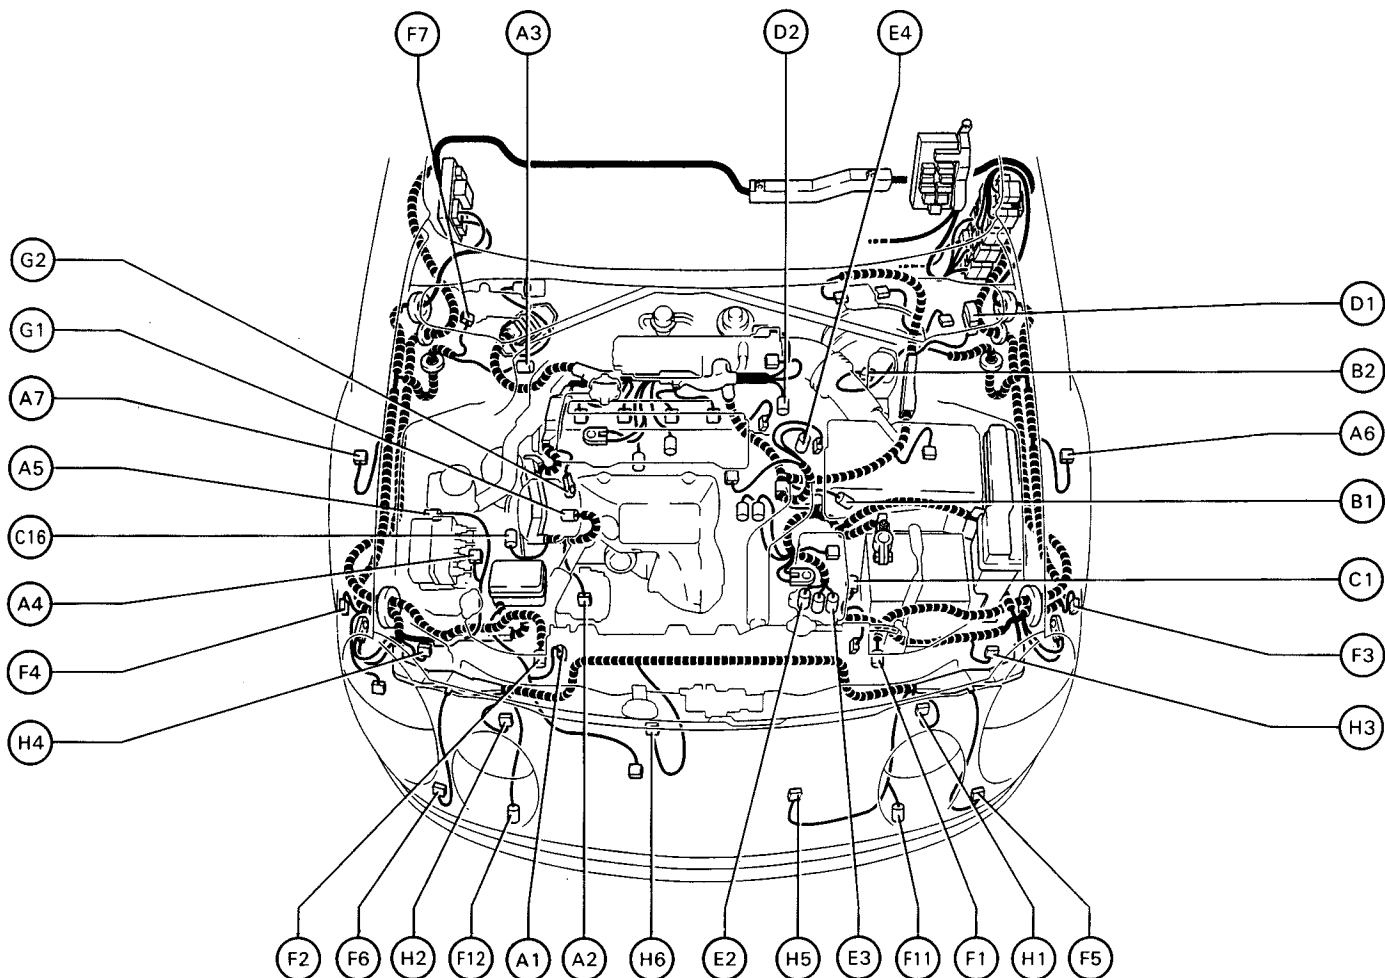

- A 1 A/C Condenser Fan Motor
- A 2 A/C Magnetic Clutch and Lock Sensor
- A 3 A/C Triple Pressure SW (A/C Dual and Single Pressure SW)
- A 4 ABS Actuator
- A 5 ABS Actuator
- A 6 ABS Speed Sensor Front LH
- A 7 ABS Speed Sensor Front RH
- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW
- C 1 Cruise Control Actuator
- C 16 Crankshaft Position Sensor
- D 1 Data Link Connector 1
- D 2 Distributor
- E 2 Electronically Controlled Transmission Solenoid
- E 3 Electronically Controlled Transmission Solenoid
- E 4 Engine Coolant Temp. Sensor

- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Side Marker Light LH
- F 4 Front Side Marker Light RH
- F 5 Front Turn Signal Light and Parking Light LH
- F 6 Front Turn Signal Light and Parking Light RH
- F 7 Front Wiper Motor
- F 11 Front Fog Light LH
- F 12 Front Fog Light RH
- G 1 Generator
- G 2 Generator
- H 1 Headlight Hi LH
- H 2 Headlight Hi RH
- H 3 Headlight Lo LH
- H 4 Headlight Lo RH
- H 5 Horn LH
- H 6 Horn RH


Position of Parts in Engine Compartment



G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[7A-FE]

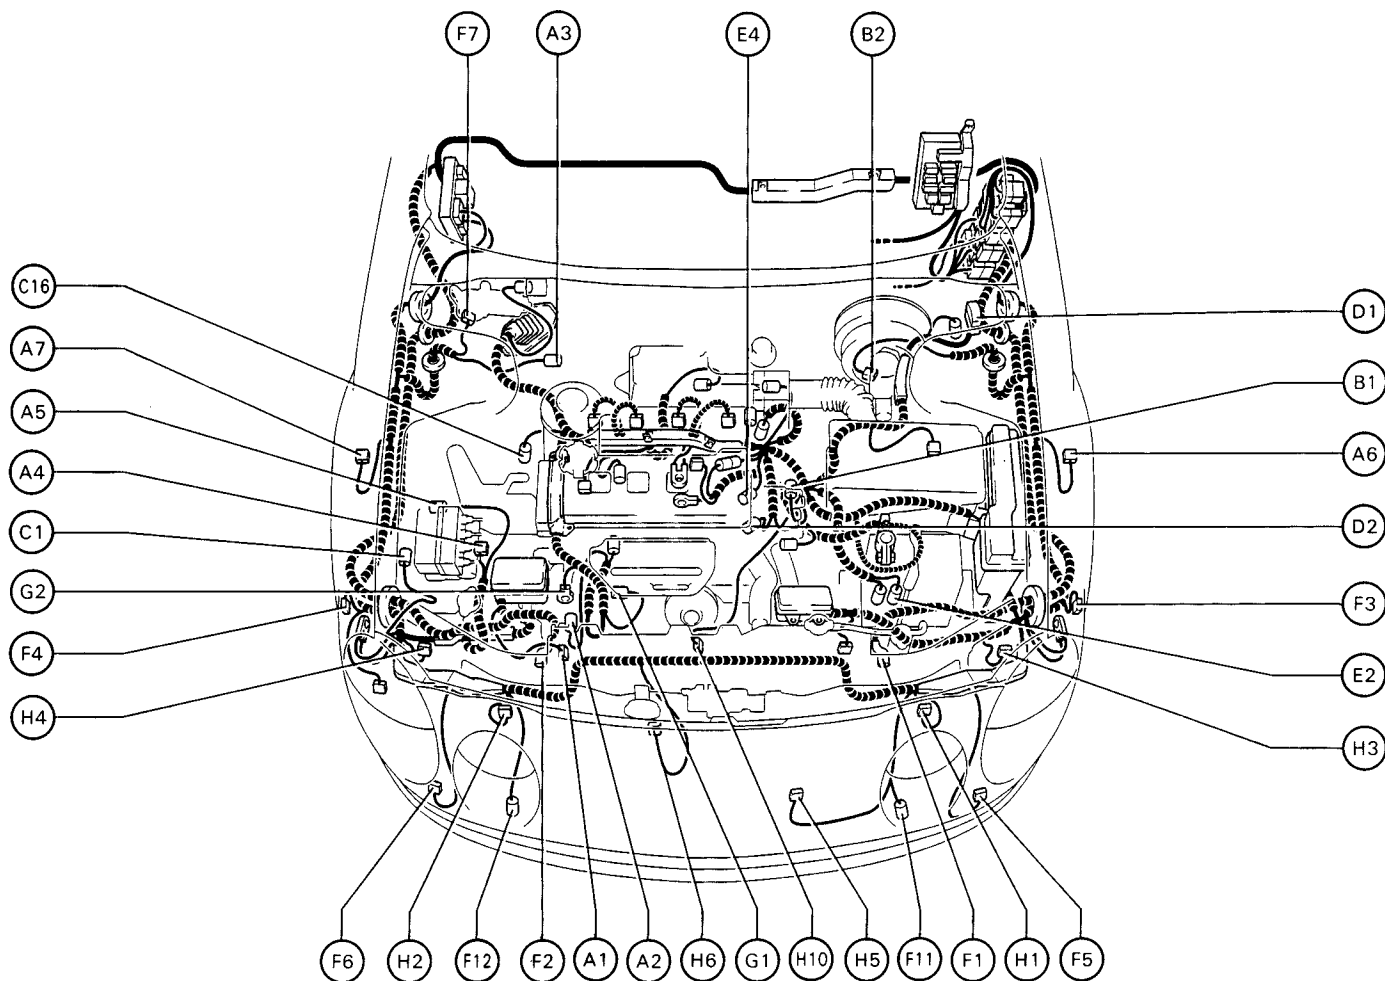

- A 1 A/C Condenser Fan Motor
- A 2 A/C Magnetic Clutch
- A 3 A/C Triple Pressure SW (A/C Dual and Single Pressure SW)
- A 4 ABS Actuator
- A 5 ABS Actuator
- A 6 ABS Speed Sensor Front LH
- A 7 ABS Speed Sensor Front RH

- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW

- C 1 Cruise Control Actuator
- C 16 Crankshaft Position Sensor

- D 1 Data Link Connector 1
- D 2 Distributor

- E 2 Electronically Controlled Transmission Solenoid
- E 4 Engine Coolant Temp. Sensor


- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Side Marker Light LH
- F 4 Front Side Marker Light RH
- F 5 Front Turn Signal Light and Parking Light LH
- F 6 Front Turn Signal Light and Parking Light RH
- F 7 Front Wiper Motor
- F 11 Front Fog Light LH
- F 12 Front Fog Light RH

- G 1 Generator
- G 2 Generator

- H 1 Headlight Hi LH
- H 2 Headlight Hi RH
- H 3 Headlight Lo LH
- H 4 Headlight Lo RH
- H 5 Horn LH
- H 6 Horn RH
- H 10 Oxygen Sensor (Bank 1 Sensor 1)

Position of Parts in Engine Compartment

[7A-FE]

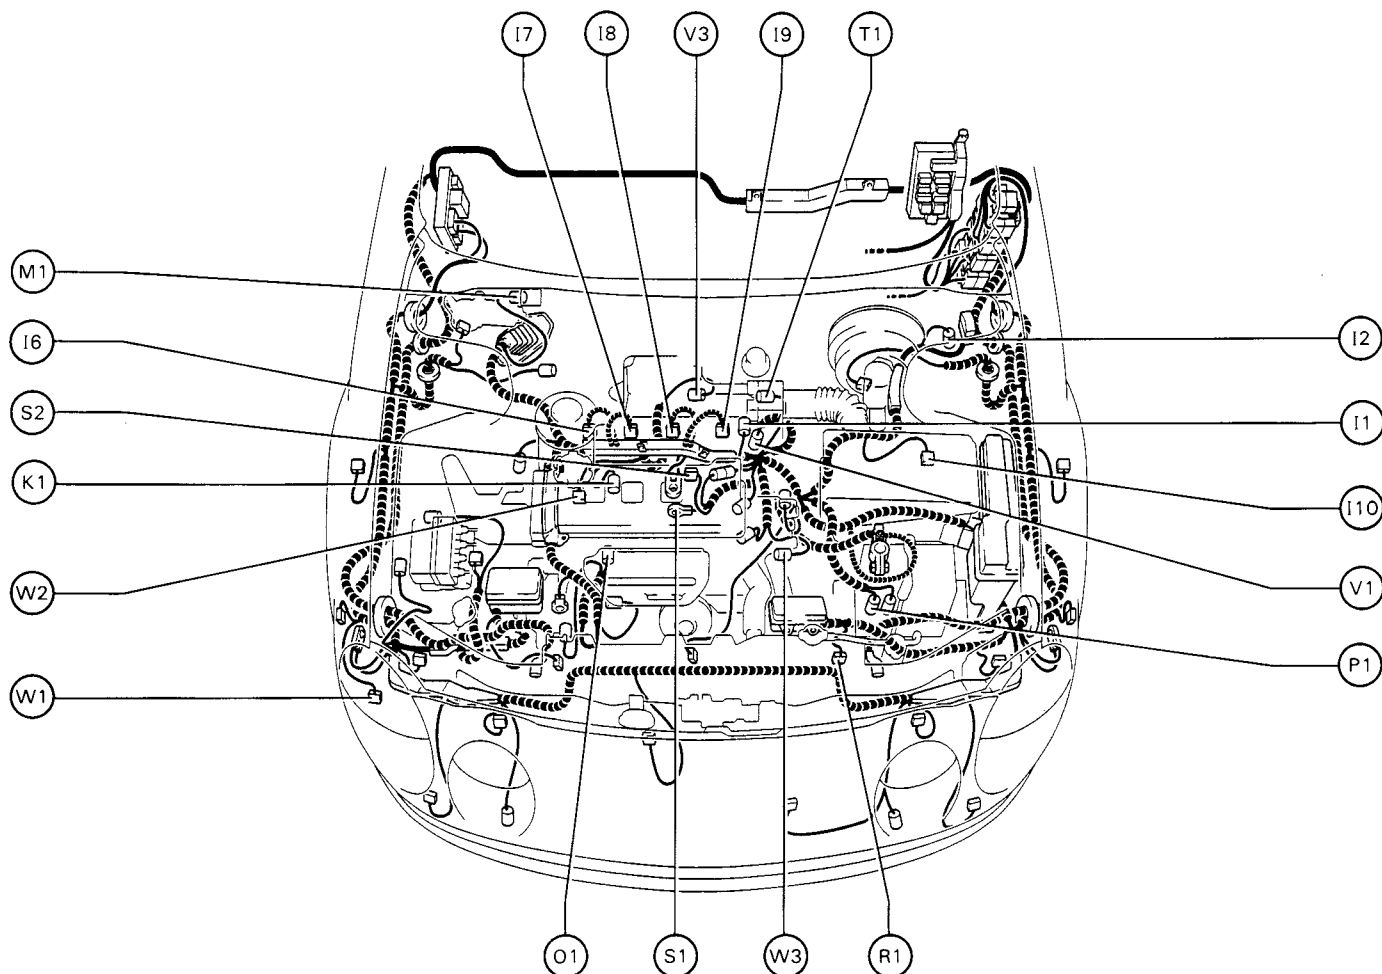

I 1 Idle Air Control Valve
 I 2 Igniter
 I 6 Injector No. 1
 I 7 Injector No. 2
 I 8 Injector No. 3
 I 9 Injector No. 4
 I 10 Intake Air Temp. Sensor

K 1 Knock Sensor

M 1 Manifold Absolute Pressure Sensor

O 1 Oil Pressure SW

P 1 Park/Neutral Position SW

R 1 Radiator Fan Motor

S 1 Starter

S 2 Starter

T 1 Throttle Position Sensor

V 1 Vehicle Speed Sensor (Combination Meter)

V 3 VSV (EGR)


W 1 Washer Motor

W 2 Water Temp. Sender

W 3 Water Temp. SW (Radiator Fan)

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

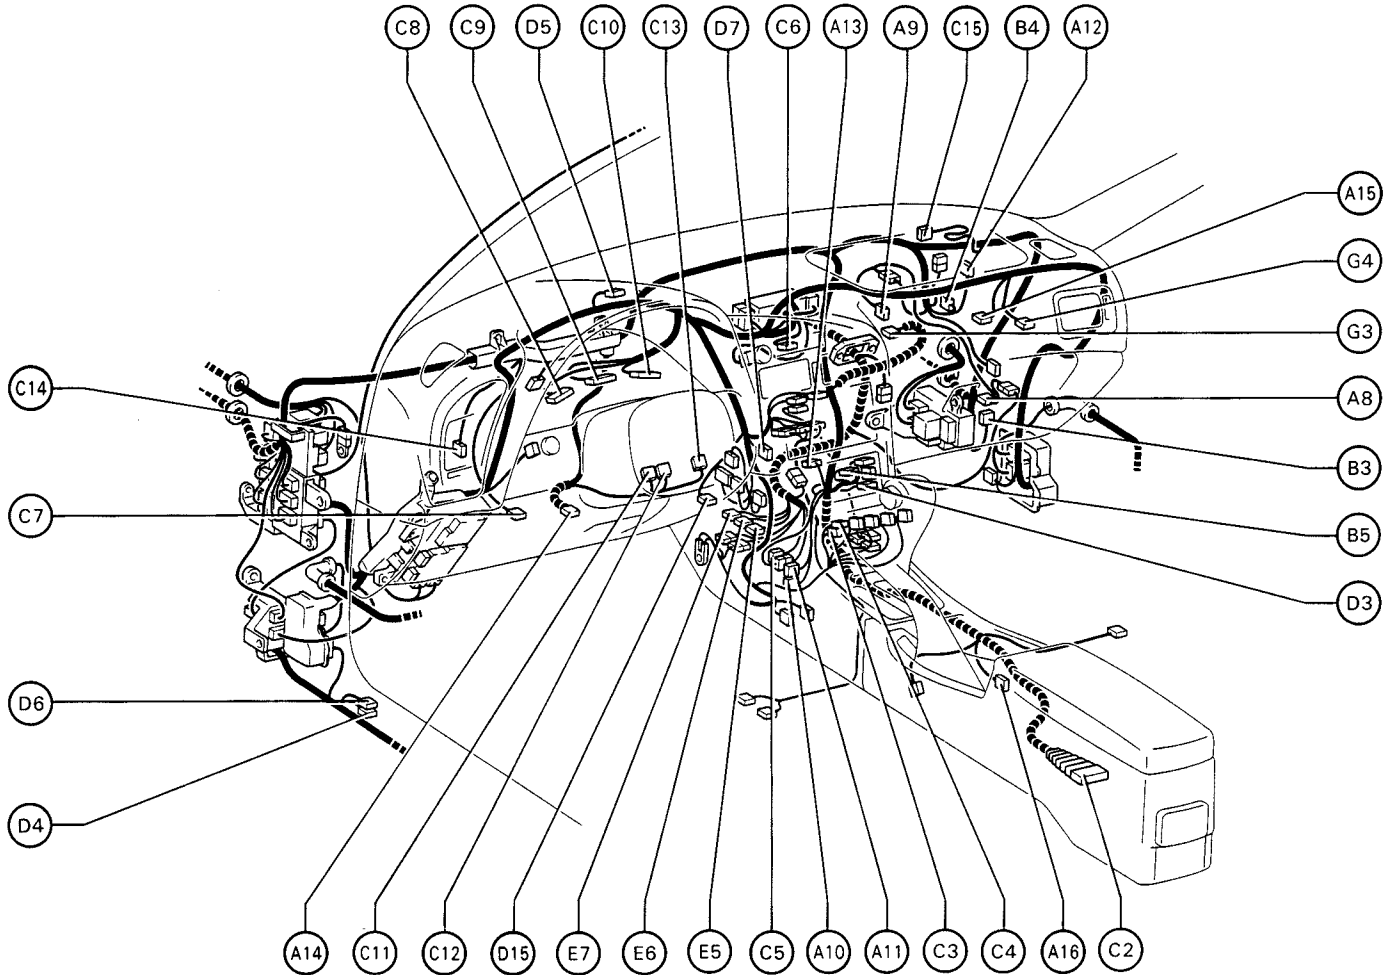

- A 8 A/C Amplifier
- A 9 A/C Thermistor
- A 10 ABS ECU
- A 11 ABS ECU
- A 12 Air Inlet Control Servo Motor
- A 13 Air Vent Mode Control Servo Motor
- A 14 Airbag Squib (Steering Wheel Pad)
- A 15 Airbag Squib (Front Passenger Airbag Assembly)
- A 16 Ashtray Illumination

- B 3 Blower Motor
- B 4 Blower Resistor
- B 5 Blower SW

- C 2 Center Airbag Sensor Assembly
- C 3 Cigarette Lighter
- C 4 Cigarette Lighter Illumination
- C 5 Circuit Opening Relay
- C 6 Clock
- C 7 Clutch Start SW
- C 8 Combination Meter

- C 9 Combination Meter
- C 10 Combination Meter
- C 11 Combination SW
- C 12 Combination SW
- C 13 Combination SW
- C 14 Cruise Control Clutch SW
- C 15 Cruise Control ECU

- D 3 Daytime Running Light Relay (Main)
- D 4 Diode (Door Courtesy Light)
- D 5 Diode (Key Off Operation)
- D 6 Diode (Luggage Compartment Light)
- D 7 Door Lock Control Relay
- D 15 Data Link Connector 3

- E 5 Engine Control Module
- E 6 Engine Control Module
- E 7 Engine Control Module


- G 3 Glove Box Light
- G 4 Glove Box Light SW

Position of Parts in Instrument Panel

*1: Separate Type Amplifier

*2: Built-in Type Amplifier

*3: 7A-FE

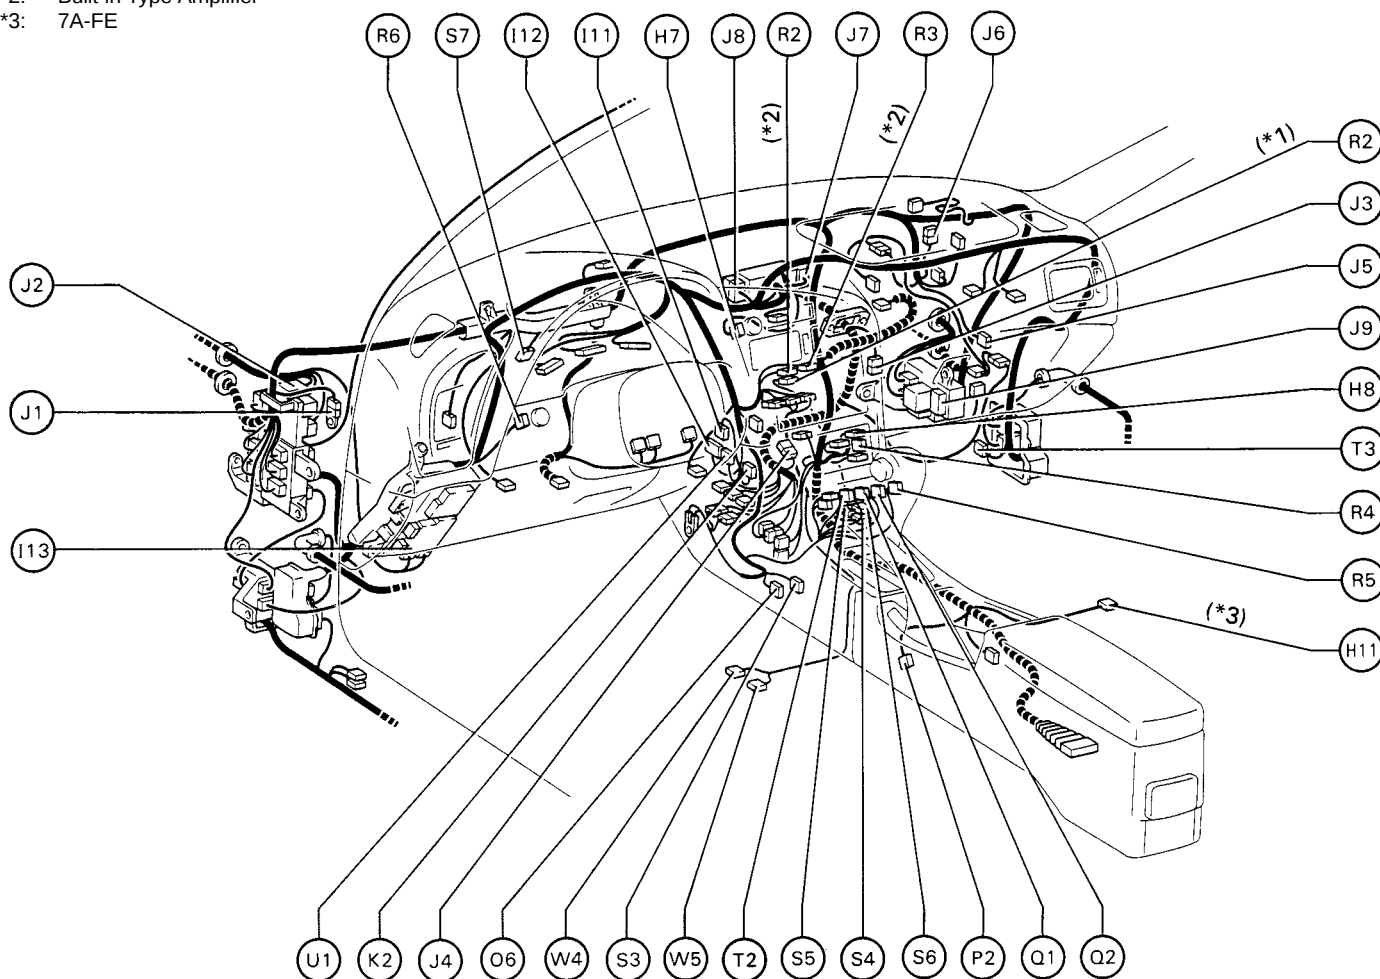

H 7 Hazard SW
H 8 Heater Control SW
H 11 Heated Oxygen Sensor (Bank 1 Sensor 2)

I 11 Ignition Key Cylinder Light
I 12 Ignition SW
I 13 Integration Relay

J 1 Junction Connector (Earth)
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector (Earth)

K 2 Key Interlock Solenoid

O 6 O/D Main SW

P 2 Parking Brake SW

Q 1 Quarter Power Window SW LH (Convertible)
Q 2 Quarter Power Window SW RH (Convertible)

R 2 Radio and Player
R 3 Radio and Player
R 4 Rear Window Defogger SW
R 5 Remote Control Mirror SW (w/o Power Window)
R 6 Rheostat

S 3 Shift Lock ECU
S 4 Stereo Component Amplifier
S 5 Stereo Component Amplifier
S 6 Stereo Component Amplifier
S 7 Stop Light SW

T 2 Top Stack Control SW (Convertible)
T 3 Top Stack Main Relay (Convertible)


U 1 Unlock Warning SW

W 4 Woofer Speaker Amplifier
W 5 Woofer Speaker Amplifier

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[L/B]

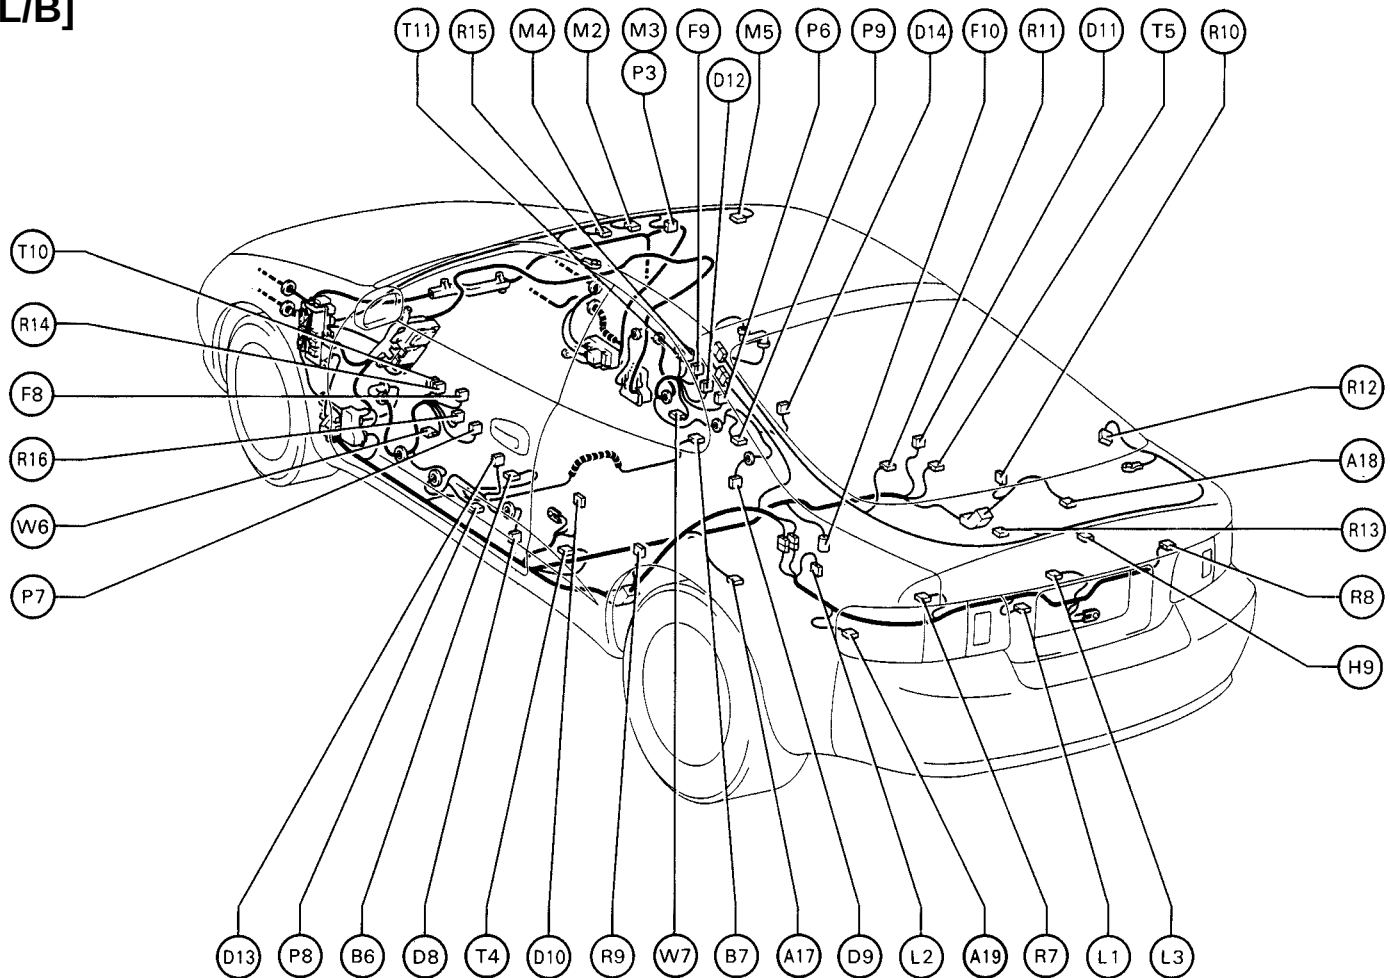

A 17 ABS Speed Sensor Rear LH
A 18 ABS Speed Sensor Rear RH
A 19 Auto Antenna Motor and Relay

B 6 Buckle SW LH
B 7 Buckle SW RH

D 8 Door Courtesy Light LH
D 9 Door Courtesy Light RH
D 10 Door Courtesy SW LH
D 11 Door Courtesy SW RH
D 12 Door Lock Control SW (Passenger's Side)
D 13 Door Lock Motor, Door Unlock Detection SW
and Door Key Lock and Unlock SW LH
D 14 Door Lock Motor, Door Unlock Detection SW
and Door Key Lock and Unlock SW RH

F 8 Front Door Speaker LH
F 9 Front Door Speaker RH
F 10 Fuel Sender and Pump

H 9 High Mounted Stop Light

L 1 License Plate Light
L 2 Luggage Compartment Light
L 3 Luggage Compartment Light SW

M 2 Moon Roof Control Relay
M 3 Moon Roof Control SW and Personal Light
(w/ Moon Roof)

M 4 Moon Roof Limit SW
M 5 Moon Roof Motor

P 3 Personal Light (w/o Moon Roof)
P 6 Power Window Control SW (Passenger's Side)
P 7 Power Window Master SW
P 8 Power Window Motor LH
P 9 Power Window Motor RH


R 7 Rear Combination Light LH
R 8 Rear Combination Light RH
R 9 Rear Speaker LH
R 10 Rear Speaker RH
R 11 Rear Window Defogger (+)
R 12 Rear Window Defogger (-)
R 13 Rear Wiper Motor and Relay
R 14 Remote Control Mirror LH
R 15 Remote Control Mirror RH
R 16 Remote Control Mirror SW (w/ Power Window)

T 4 Tension Reducer Solenoid LH
T 5 Tension Reducer Solenoid RH
T 10 Tweeter Speaker LH
T 11 Tweeter Speaker RH

W 6 Woofer Speaker LH
W 7 Woofer Speaker RH

Position of Parts in Body

[C/P]

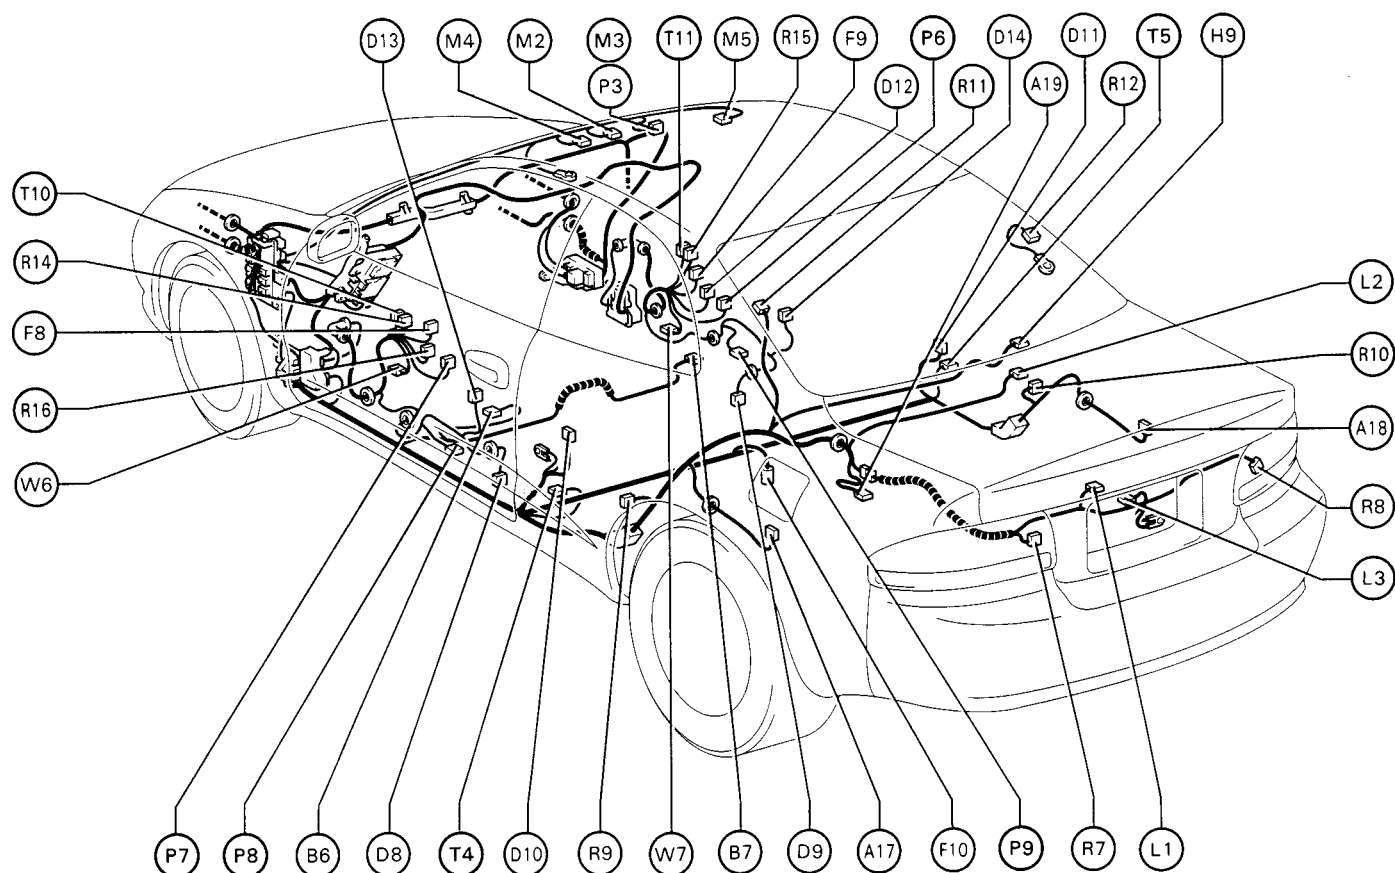

A 17 ABS Speed Sensor Rear LH
A 18 ABS Speed Sensor Rear RH
A 19 Auto Antenna Motor and Relay

B 6 Buckle SW LH
B 7 Buckle SW RH

D 8 Door Courtesy Light LH
D 9 Door Courtesy Light RH
D 10 Door Courtesy SW LH
D 11 Door Courtesy SW RH
D 12 Door Lock Control SW (Passenger's Side)
D 13 Door Lock Motor, Door Unlock Detection SW
and Door Key Lock and Unlock SW LH
D 14 Door Lock Motor, Door Unlock Detection SW
and Door Key Lock and Unlock SW RH

F 8 Front Door Speaker LH
F 9 Front Door Speaker RH
F 10 Fuel Sender and Pump

H 9 High Mounted Stop Light

L 1 License Plate Light
L 2 Luggage Compartment Light
L 3 Luggage Compartment Light SW

M 2 Moon Roof Control Relay
M 3 Moon Roof Control SW and Personal Light
(w/ Moon Roof)

M 4 Moon Roof Limit SW
M 5 Moon Roof Motor

P 3 Personal Light (w/o Moon Roof)
P 6 Power Window Control SW (Passenger's Side)
P 7 Power Window Master SW
P 8 Power Window Motor LH
P 9 Power Window Motor RH

R 7 Rear Combination Light LH
R 8 Rear Combination Light RH
R 9 Rear Speaker LH
R 10 Rear Speaker RH
R 11 Rear Window Defogger (+)
R 12 Rear Window Defogger (-)
R 14 Remote Control Mirror LH
R 15 Remote Control Mirror RH
R 16 Remote Control Mirror SW (w/ Power Window)


T 4 Tension Reducer Solenoid LH
T 5 Tension Reducer Solenoid RH
T 10 Tweeter Speaker LH
T 11 Tweeter Speaker RH

W 6 Woofer Speaker LH
W 7 Woofer Speaker RH

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[Convertible]

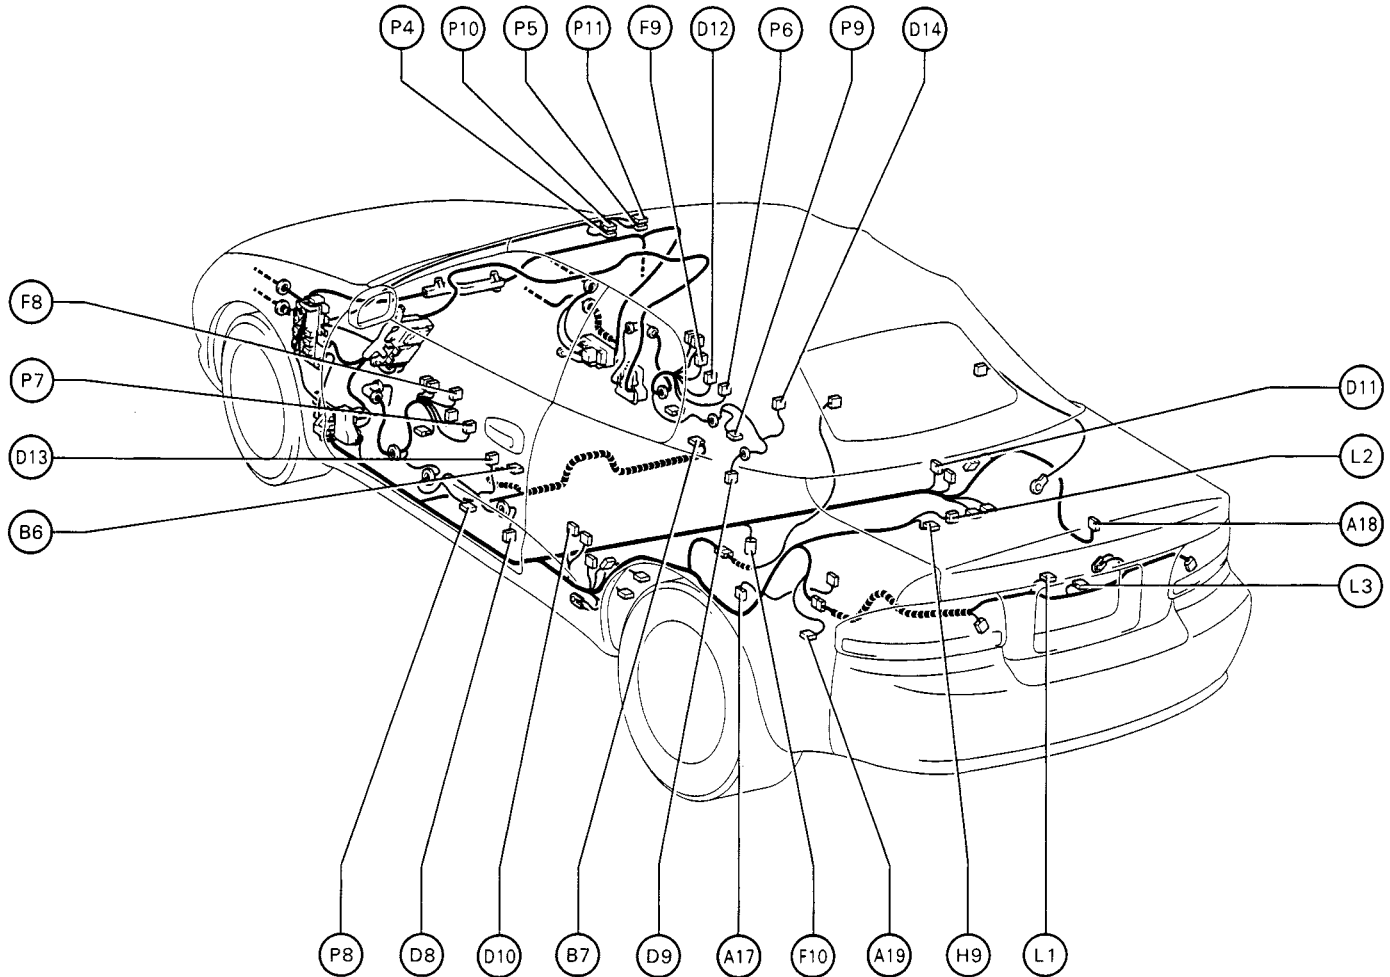

A 17 ABS Speed Sensor Rear LH
A 18 ABS Speed Sensor Rear RH
A 19 Auto Antenna Motor and Relay

B 6 Buckle SW LH
B 7 Buckle SW RH

D 8 Door Courtesy Light LH
D 9 Door Courtesy Light RH
D 10 Door Courtesy SW LH
D 11 Door Courtesy SW RH
D 12 Door Lock Control SW (Passenger's Side)
D 13 Door Lock Motor, Door Unlock Detection SW
and Door Key Lock and Unlock SW LH
D 14 Door Lock Motor, Door Unlock Detection SW
and Door Key Lock and Unlock SW RH

F 8 Front Door Speaker LH
F 9 Front Door Speaker RH

F 10 Fuel Sender and Pump


H 9 High Mounted Stop Light

L 1 License Plate Light
L 2 Luggage Compartment Light
L 3 Luggage Compartment Light SW

P 4 Personal Light LH
P 5 Personal Light RH
P 6 Power Window Control SW (Passenger's Side)
P 7 Power Window Master SW
P 8 Power Window Motor LH
P 9 Power Window Motor RH
P 10 Personal Light LH
P 11 Personal Light RH

Position of Parts in Body

[Convertible]

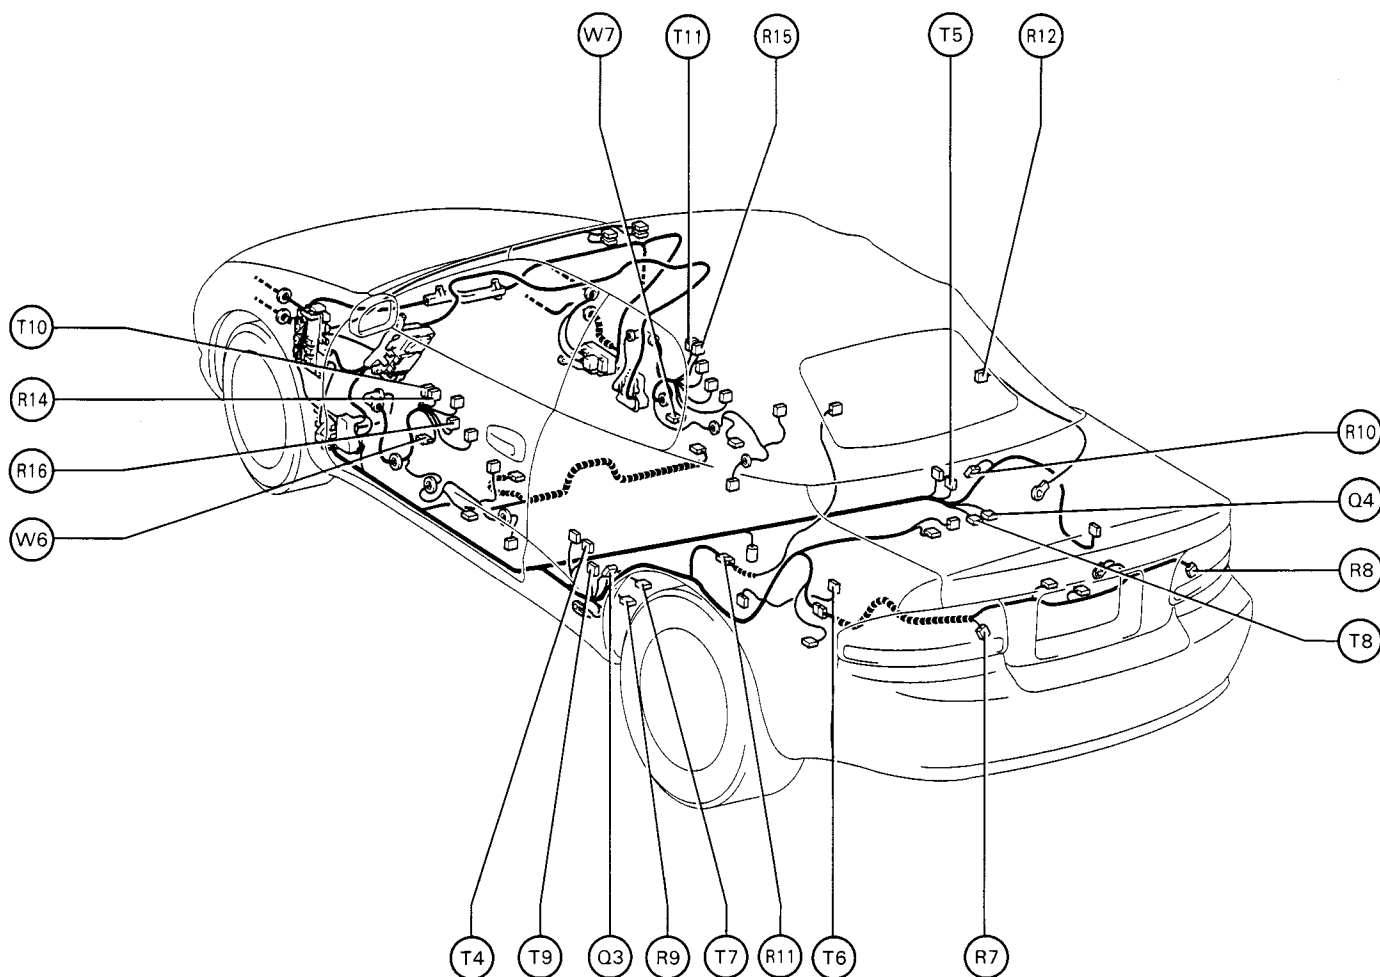

Q 3 Quarter Power Window Motor LH
Q 4 Quarter Power Window Motor RH

R 7 Rear Combination Light LH
R 8 Rear Combination Light RH
R 9 Rear Speaker LH
R 10 Rear Speaker RH
R 11 Rear Window Defogger (+)
R 12 Rear Window Defogger (-)
R 14 Remote Control Mirror LH
R 15 Remote Control Mirror RH
R 16 Remote Control Mirror SW (w/ Power Window)

T 4 Tension Reducer Solenoid LH
T 5 Tension Reducer Solenoid RH
T 6 Top Stack Bypass SW
T 7 Top Stack Motor LH
T 8 Top Stack Motor RH
T 9 Top Stack Relay
T 10 Tweeter Speaker LH
T 11 Tweeter Speaker RH

W 6 Woofer Speaker LH
W 7 Woofer Speaker RH