


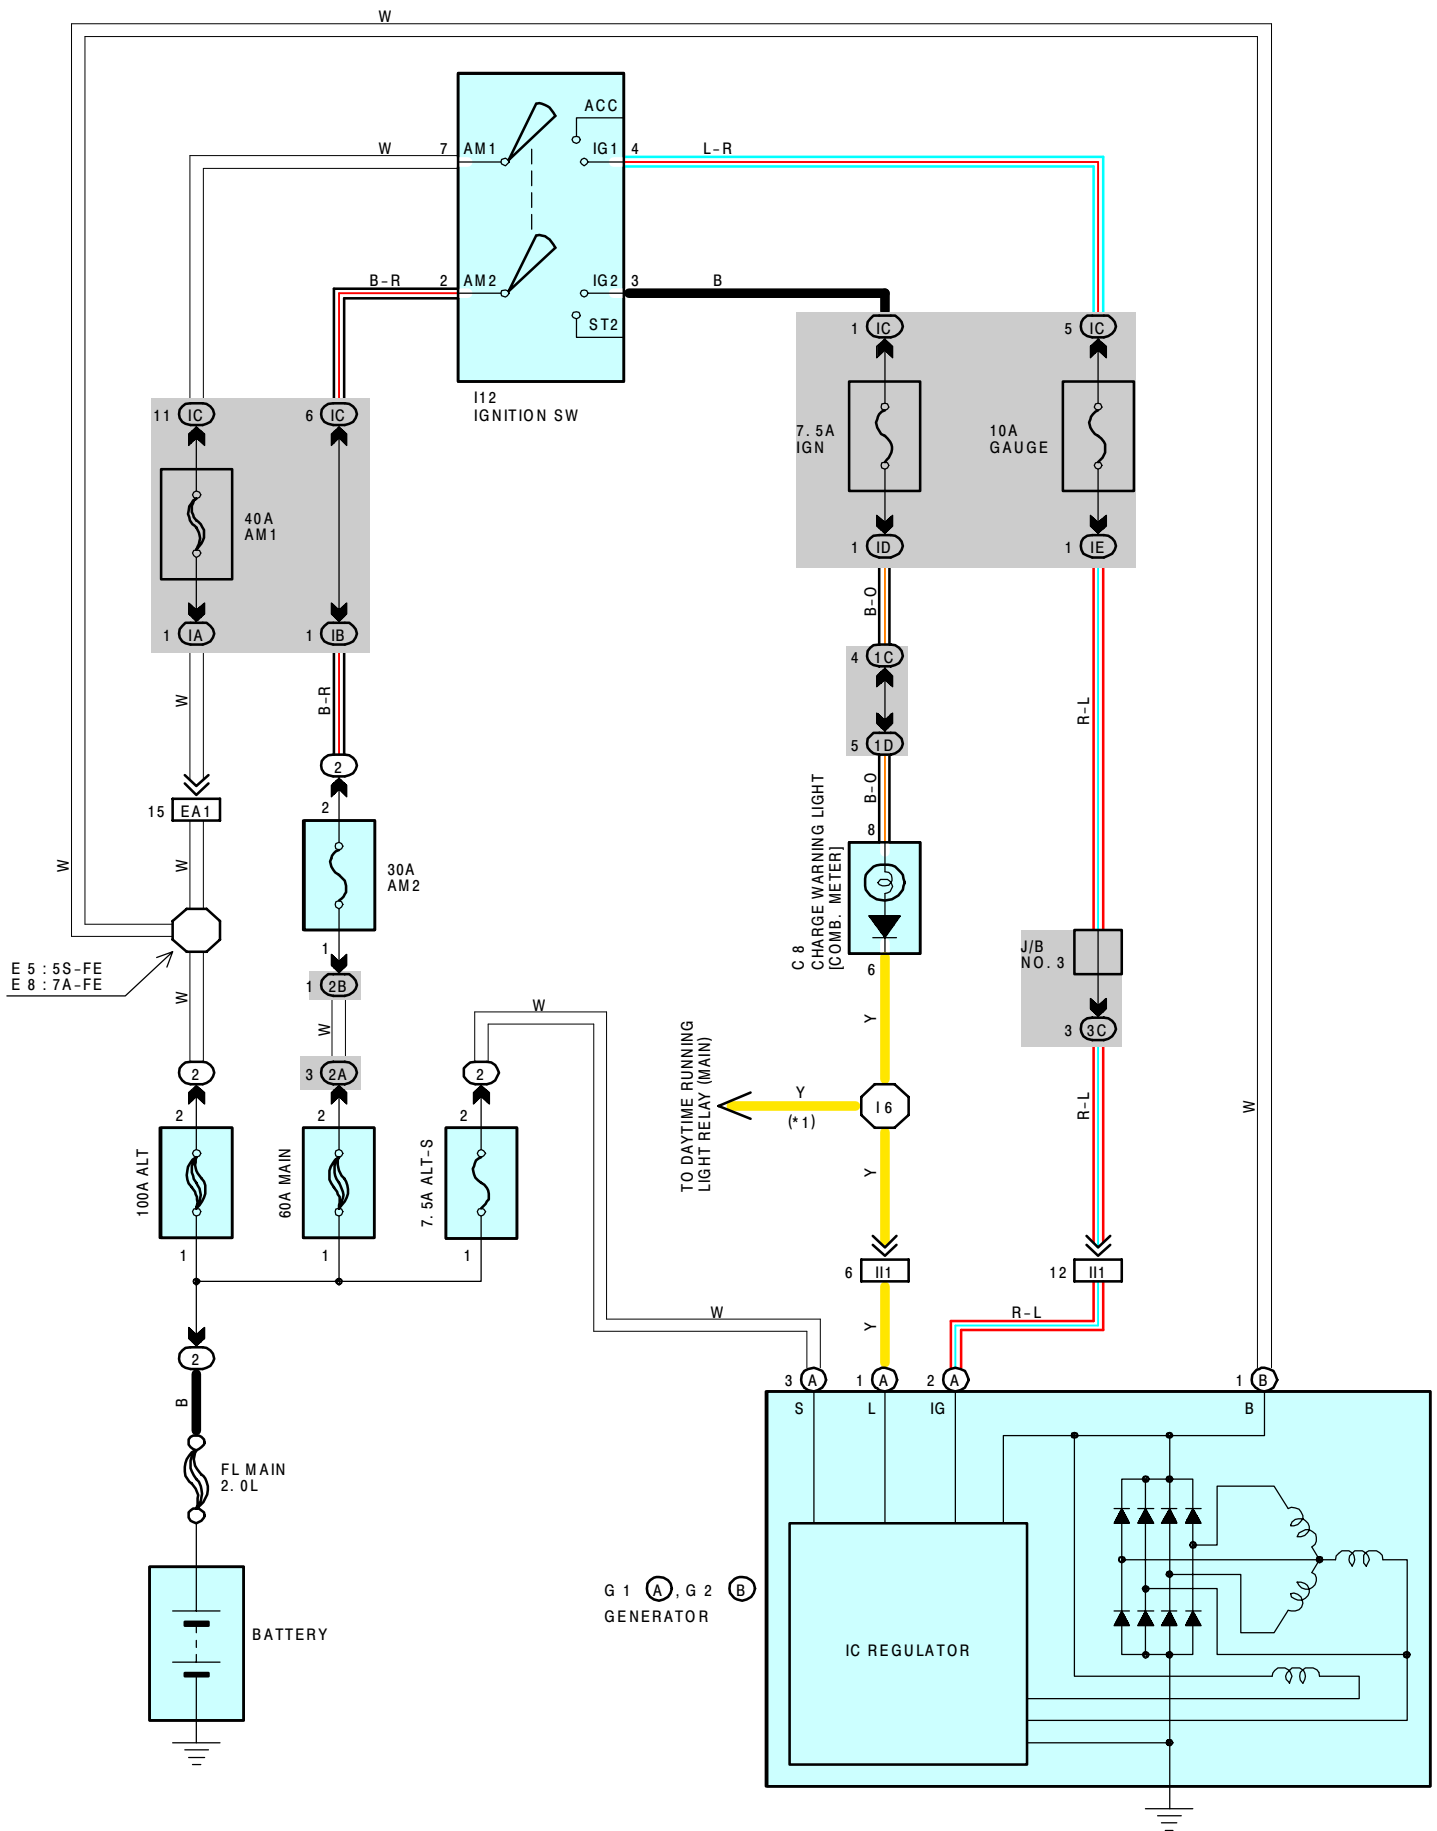

CHARGING



SERVICE HINTS

G 1 (A) GENERATOR

- (A) 3-GROUND : 13.9-15.1 VOLTS WITH THE ENGINE RUNNING AT 2000 RPM AND 25°C (77°F)
 13.5-14.3 VOLTS WITH THE ENGINE RUNNING AT 5000 RPM AND 115°C (239°F)
 (A) 1-GROUND : 0-4 VOLTS WITH THE IGNITION SW AT ON POSITION AND THE ENGINE NOT RUNNING

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 8	32	G 2	B	28 (5S-FE), 30 (7A-FE)	
G 1	A	I12	33		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	26	ENGINE COMPARTMENT LEFT

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
IA	20	ENGINE ROOM MAIN WIRE AND INPANE J/B (LEFT KICK PANEL)
IB		
IC		
ID	20	INSTRUMENT PANEL WIRE AND INPANE J/B (LEFT KICK PANEL)
IE		
IC	22	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT KICK PANEL)
ID		
2A	26	ENGINE ROOM MAIN WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT)
2B		
3C	24	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	38 (5S-FE) 40 (7A-FE)	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF R/B NO.2)
II1	44	ENGINE WIRE AND INSTRUMENT PANEL WIRE (NEAR THE ENGINE CONTROL MODULE)

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 5	38 (5S-FE)	ENGINE WIRE	I 6	44	INSTRUMENT WIRE
E 8	40 (7A-FE)				

