


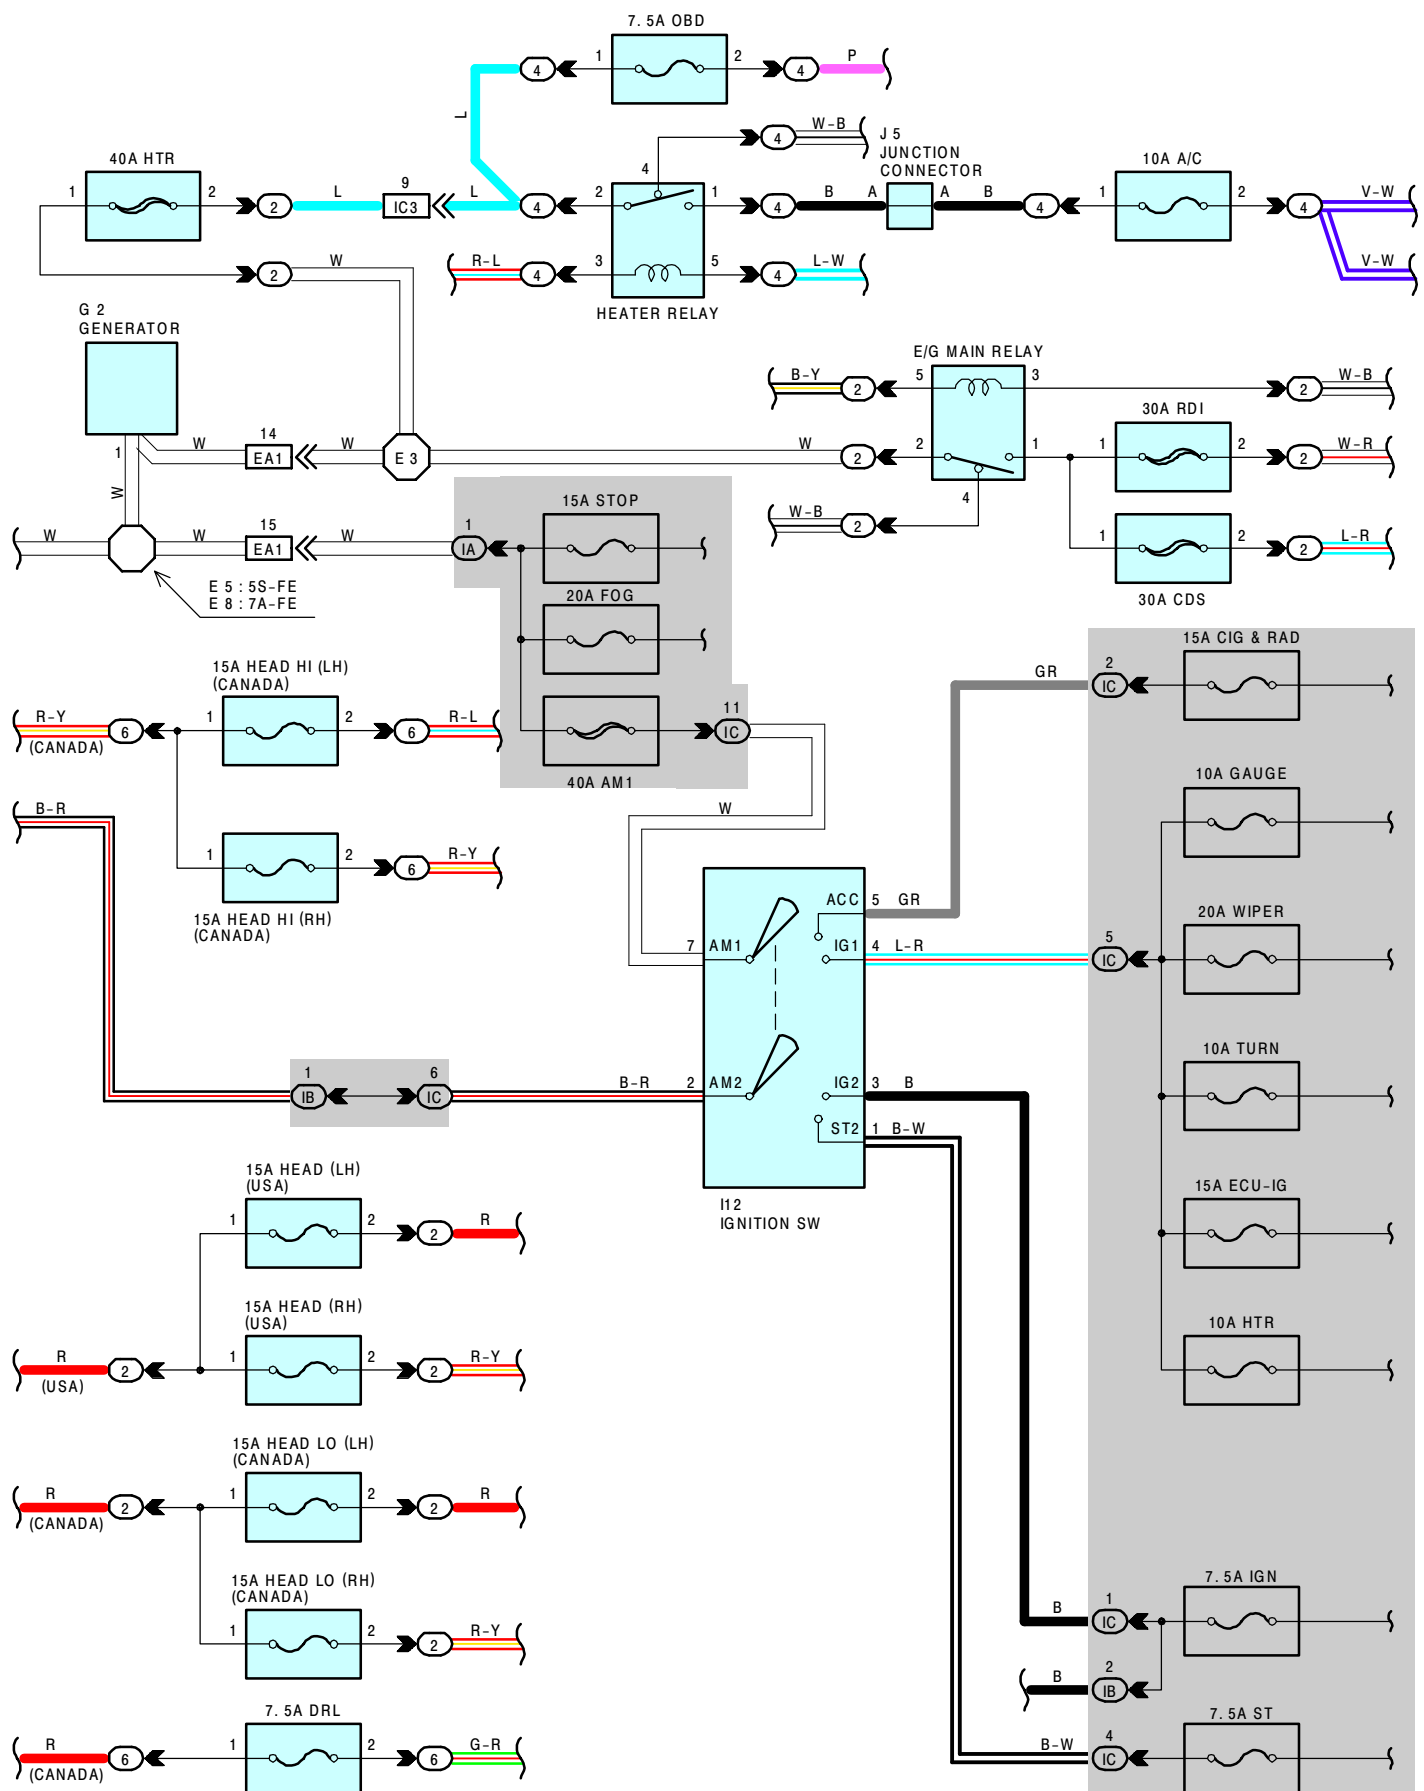





POWER SOURCE

SERVICE HINTS

HEAD RELAY (USA)

2-1 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION OR THE DIMMER SW AT **FLASH** POSITION

HEAD RELAY (CANADA)

2-1 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION OR THE DIMMER SW AT **FLASH** POSITION
CLOSED WITH THE ENGINE RUNNING AND THE PARKING BRAKE LEVER RELEASED (PARKING BRAKE SW OFF)

TAILLIGHT RELAY

5-3 : CLOSED WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

I12 IGNITION SW

7-5 : CLOSED WITH THE IGNITION KEY AT **ACC** OR **ON** POSITION

7-4 : CLOSED WITH THE IGNITION KEY AT **ON** OR **ST** POSITION

2-3 : CLOSED WITH THE IGNITION KEY AT **ON** OR **ST** POSITION

2-1 : CLOSED WITH THE IGNITION KEY AT **ST** POSITION

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
G 2	28 (5S-FE), 30 (7A-FE)	I12	33	J 5	33

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	26	ENGINE COMPARTMENT LEFT
4	25	RIGHT KICK PANEL
6	27	ENGINE COMPARTMENT FRONT LEFT

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
IA	20	ENGINE ROOM MAIN WIRE AND INPANE J/B (LEFT KICK PANEL)
IB		
IC	20	INSTRUMENT PANEL WIRE AND INPANE J/B (LEFT KICK PANEL)
2A	26	ENGINE ROOM MAIN WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT)
2B		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	38 (5S-FE) 40 (7A-FE)	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF R/B NO.2)
IC3	42	ENGINE ROOM MAIN WIRE AND COWL WIRE (INSIDE OF R/B NO.4)


: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	38 (5S-FE) 40 (7A-FE)	FRONT SIDE OF LEFT FENDER


: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 3	38 (5S-FE) 40 (7A-FE)	ENGINE ROOM MAIN WIRE	E 5	38 (5S-FE)	ENGINE WIRE
			E 8	44 (7A-FE)	

 
G 2



I12

 

J 5

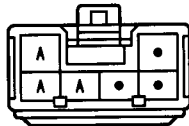

(HINT:SEE PAGE 7)

