



SERVICE HINTS

FOG LIGHT RELAY

(1) 3- (1) 5 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION, DIMMER SW AT **LOW** POSITION
AND THE FOG LIGHT SW AT **ON** POSITION

○ : PARTS LOCATION

| CODE | SEE PAGE | CODE | SEE PAGE | CODE | SEE PAGE |
|------------|--|------------|--|------|----------|
| C11 | 32 | F12 | 28 (5S-FE), 30 (7A-FE) | | |
| F11 | 28 (5S-FE), 30 (7A-FE) | J 1 | 33 | | |

○ : RELAY BLOCKS

| CODE | SEE PAGE | RELAY BLOCKS (RELAY BLOCK LOCATION) |
|----------|--------------------|-------------------------------------|
| 1 | 25 | LEFT KICK PANEL |
| 2 | 26 | ENGINE COMPARTMENT LEFT |

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| CODE | SEE PAGE | JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION) |
|-----------|--------------------|--|
| IA | 20 | ENGINE ROOM MAIN WIRE AND INPANE J/B (LEFT KICK PANEL) |
| IF | 20 | INSTRUMENT PANEL AND COWL WIRE (LEFT KICK PANEL) |

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------------|--------------------|--|
| IC2 | 42 | ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL) |
| ID1 | 42 | INSTRUMENT PANEL WIRE AND COWL WIRE (LEFT KICK PANEL) |

▽ : GROUND POINTS

| CODE | SEE PAGE | GROUND POINTS LOCATION |
|-----------|--|---------------------------|
| EB | 38 (5S-FE) 40 (7A-FE) | FRONT SIDE OF LEFT FENDER |
| ID | 42 | LEFT KICK PANEL |

○ : SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------------|--|---------------------------------|------------|--|---------------------------------|
| E 1 | 38 (5S-FE) 40 (7A-FE) | ENGINE ROOM MAIN WIRE | E 4 | 38 (5S-FE) 40 (7A-FE) | ENGINE ROOM MAIN WIRE |

