


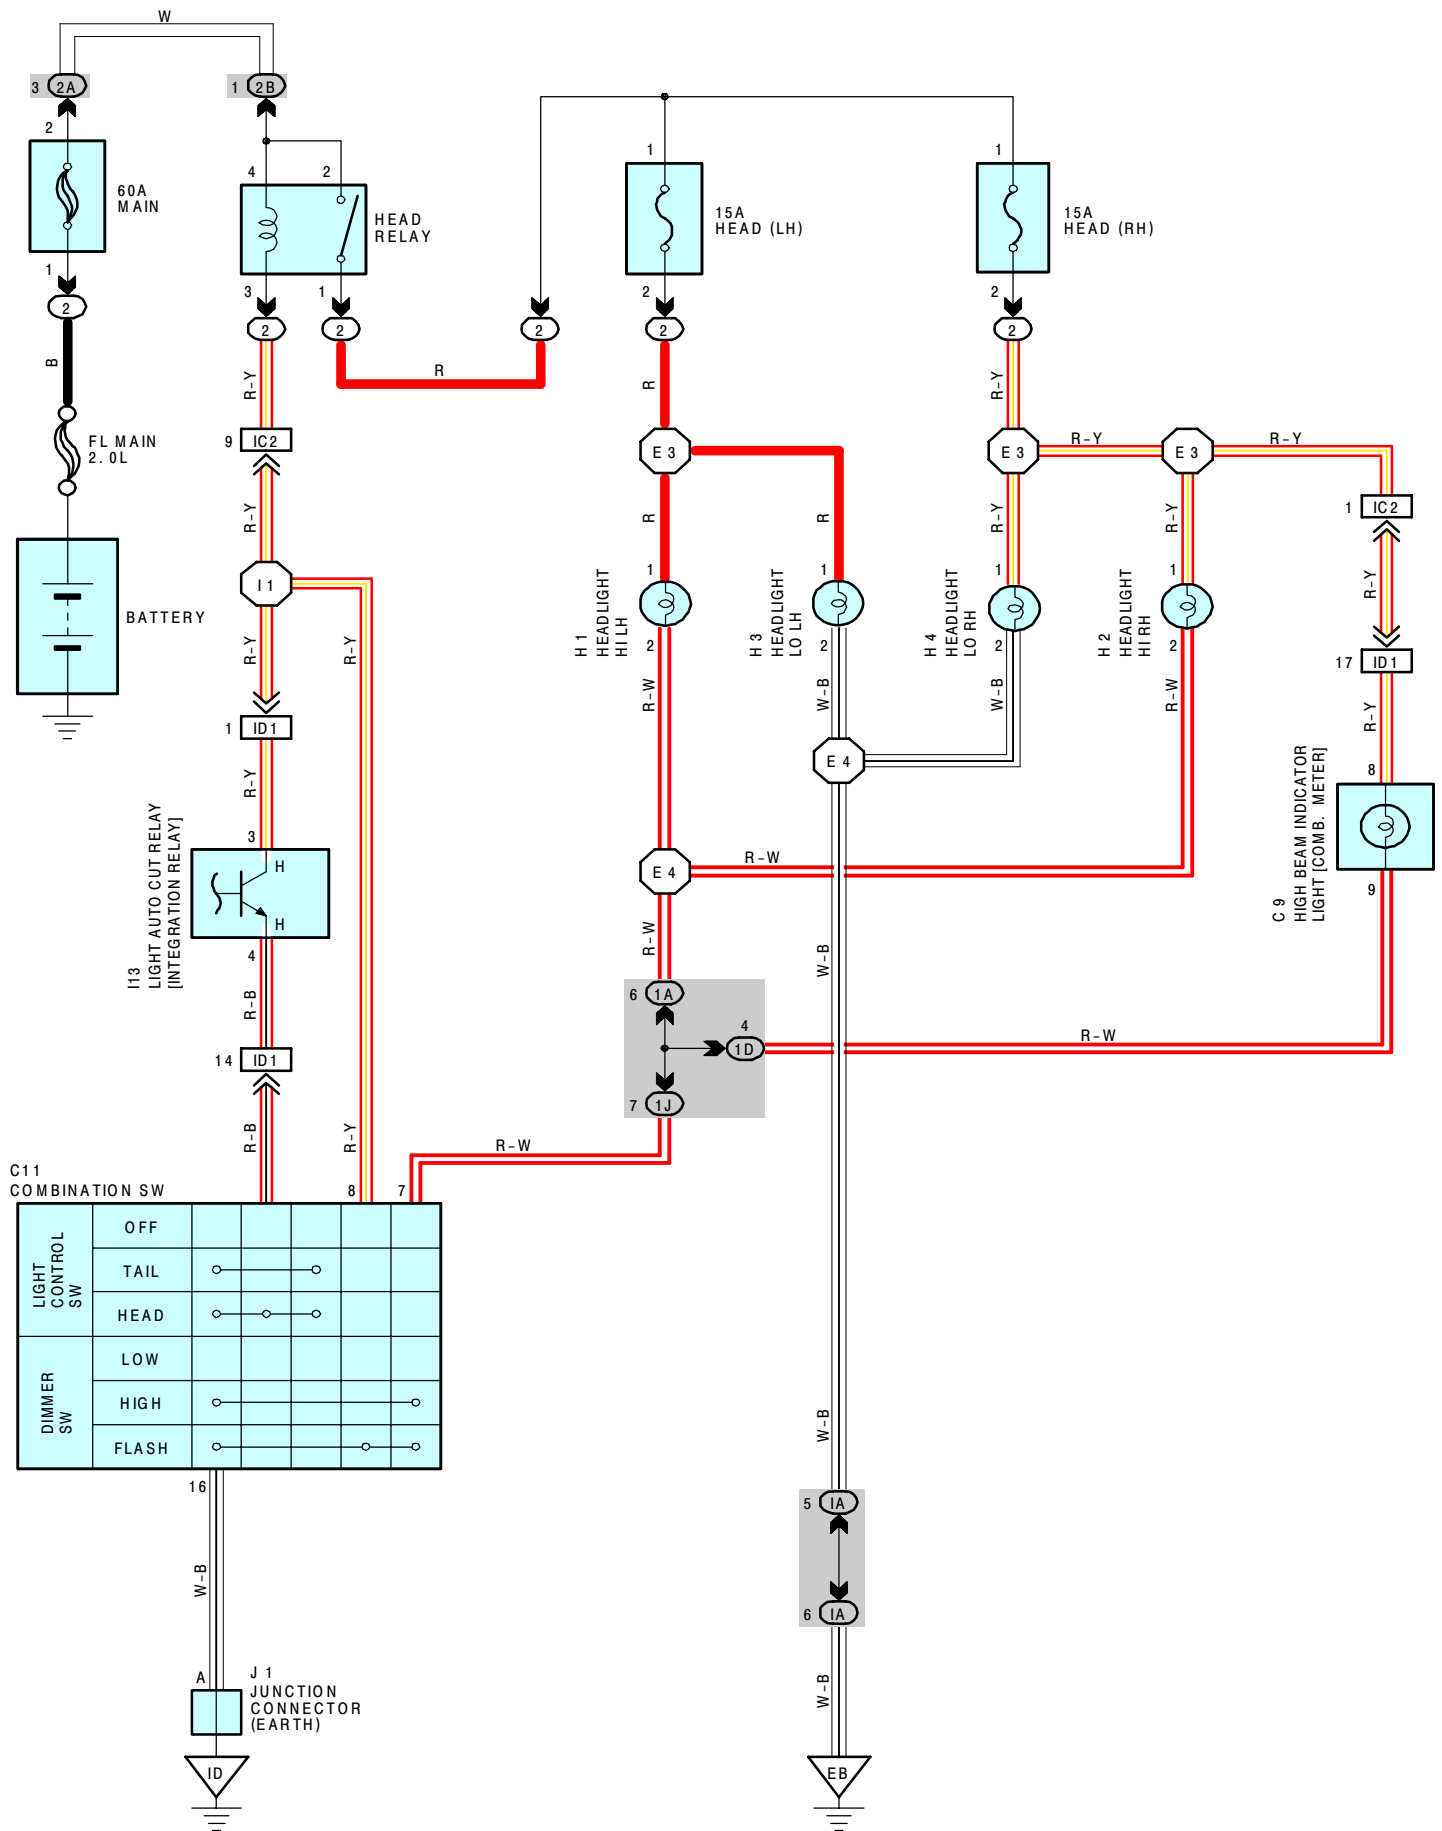

HEADLIGHT (USA)



SERVICE HINTS

HEAD RELAY

(2) 2- (2) 1 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION OR THE DIMMER SW AT **FLASH** POSITION

C11 LIGHT CONTROL SW [COMB. SW]

13-16 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION

C11 DIMMER SW [COMB. SW]

8-16 : CLOSED WITH THE DIMMER SW AT **FLASH** POSITION

7-16 : CLOSED WITH THE DIMMER SW AT **HIGH** OR **FLASH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 9	32	H 2	28 (5S-FE), 30 (7A-FE)	I13	33
C11	32	H 3	28 (5S-FE), 30 (7A-FE)	J 1	33
H 1	28 (5S-FE), 30 (7A-FE)	H 4	28 (5S-FE), 30 (7A-FE)		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	26	ENGINE COMPARTMENT LEFT

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	ENGINE ROOM MAIN WIRE AND INPANE J/B (LEFT KICK PANEL)
1A	22	ENGINE ROOM MAIN WIRE AND J/B NO.1 (LEFT KICK PANEL)
1D	22	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT KICK PANEL)
1J	22	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)
2A	26	ENGINE ROOM MAIN WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT)
2B		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC2	42	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
ID1	42	INSTRUMENT PANEL WIRE AND COWL WIRE (LEFT KICK PANEL)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	38 (5S-FE)	FRONT SIDE OF LEFT FENDER
	40 (7A-FE)	
ID	42	LEFT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E3	38 (5S-FE)	ENGINE ROOM MAIN WIRE	E 4	40 (7A-FE)	ENGINE ROOM MAIN WIRE
	40 (7A-FE)		I 1	44	COWL WIRE
E4	38 (5S-FE)				

C 9

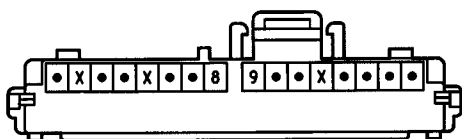

C11

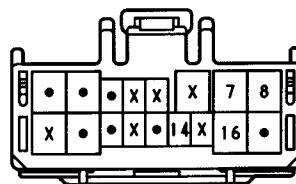

H 1 BLACK



H 2 BLACK



 
H 3 BROWN




H 4 BROWN



I13



J 1

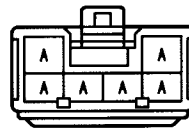

(HINT: SEE PAGE 7)