


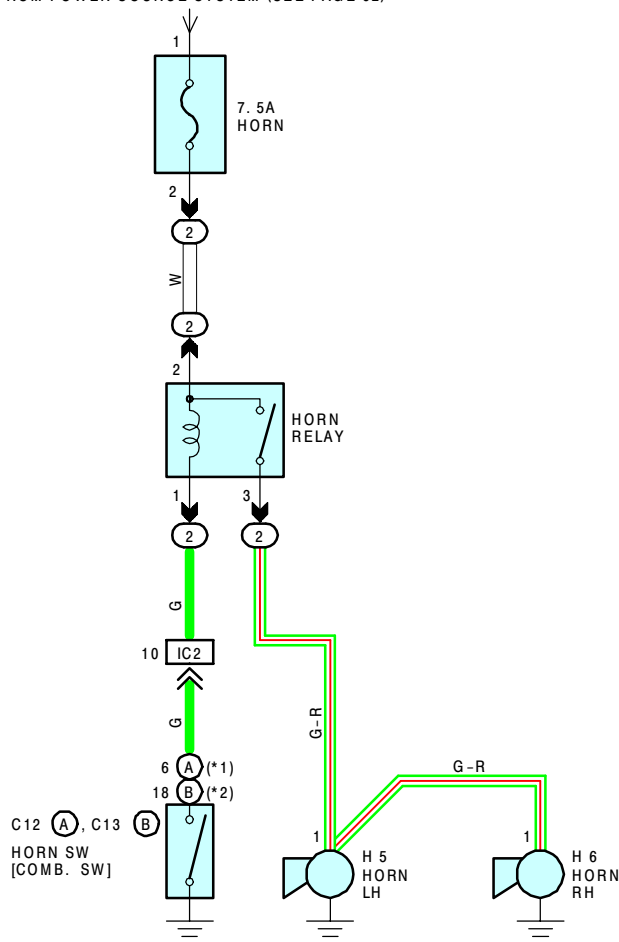

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

*1 : W/ CRUISE CONTROL
*2 : W/O CRUISE CONTROL



SERVICE HINTS

HORN RELAY

(2) 2- (2) 3 : CLOSED WITH THE HORN SW ON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C12	A 32	H5	28 (5S-FE) , 30 (7A-FE)		
C13	B 32	H6	28 (5S-FE) , 30 (7A-FE)		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	26	ENGINE COMPARTMENT LEFT

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC2	42	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)

(*1) C12 (A) BLACK

(*2) C13 (B) BLACK

H 5 BLACK

H 6 BLACK

