




# REMOTE CONTROL MIRROR (w/o POWER WINDOW)

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

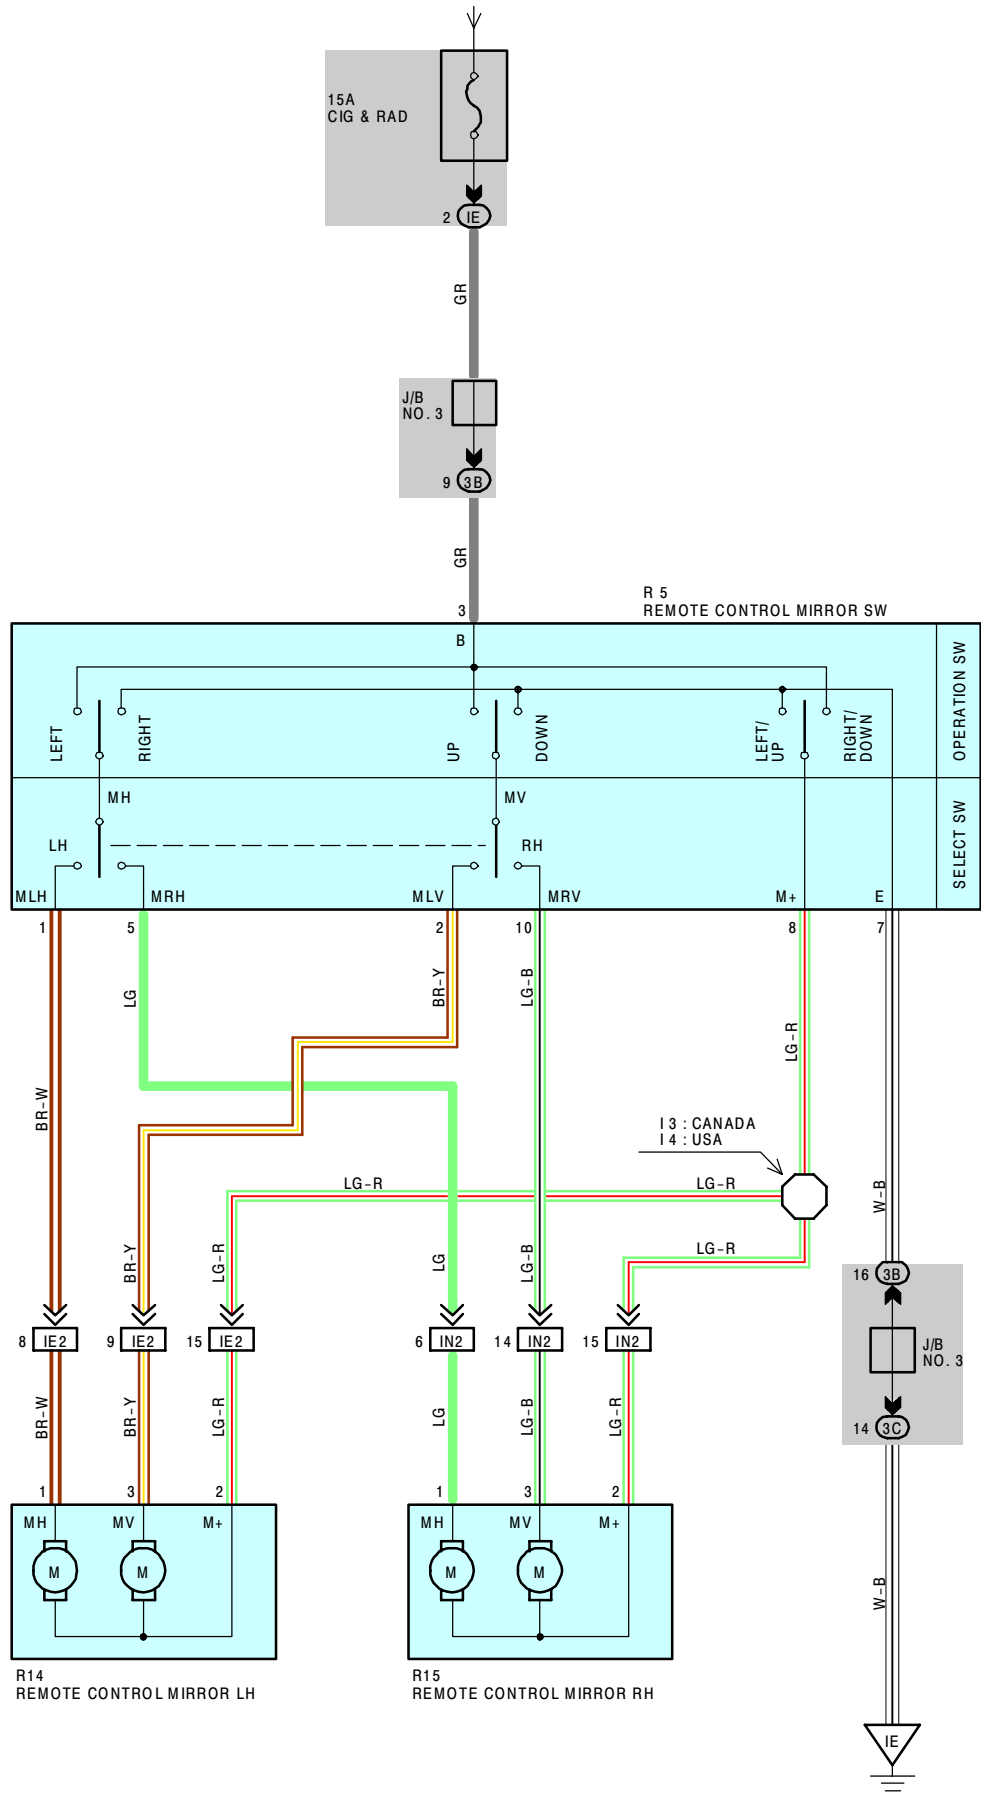

## SERVICE HINTS

### R 5 REMOTE CONTROL MIRROR SW

- 3-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ACC** OR **ON** POSITION  
 8-7 : CONTINUITY WITH THE OPERATION SW AT **UP** OR **LEFT** POSITION  
 1-7 : CONTINUITY WITH THE OPERATION SW AT **RIGHT** POSITION AND THE SELECT SW AT **LH** POSITION  
 2-7 : CONTINUITY WITH THE OPERATION SW AT **DOWN** POSITION AND THE SELECT SW AT **LH** POSITION  
 5-7 : CONTINUITY WITH THE OPERATION SW AT **RIGHT** POSITION AND THE SELECT SW AT **RH** POSITION  
 10-7 : CONTINUITY WITH THE OPERATION SW AT **DOWN** POSITION AND THE SELECT SW AT **RH** POSITION

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
R 5	33	R14	34 (L/B), 35 (C/P)	R15	34 (L/B), 35 (C/P)

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
IE	20	INSTRUMENT PANEL WIRE AND INPANE J/B (LEFT KICK PANEL)
3B	24	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)
3C		

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE2	42	FRONT DOOR LH WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
IN2	44	FRONT DOOR RH WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)

 
### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	42	INSTRUMENT PANEL BRACE LH


### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 3	44	INSTRUMENT PANEL WIRE	I 4	44	INSTRUMENT PANEL WIRE

R 5



R14

 

R15

