


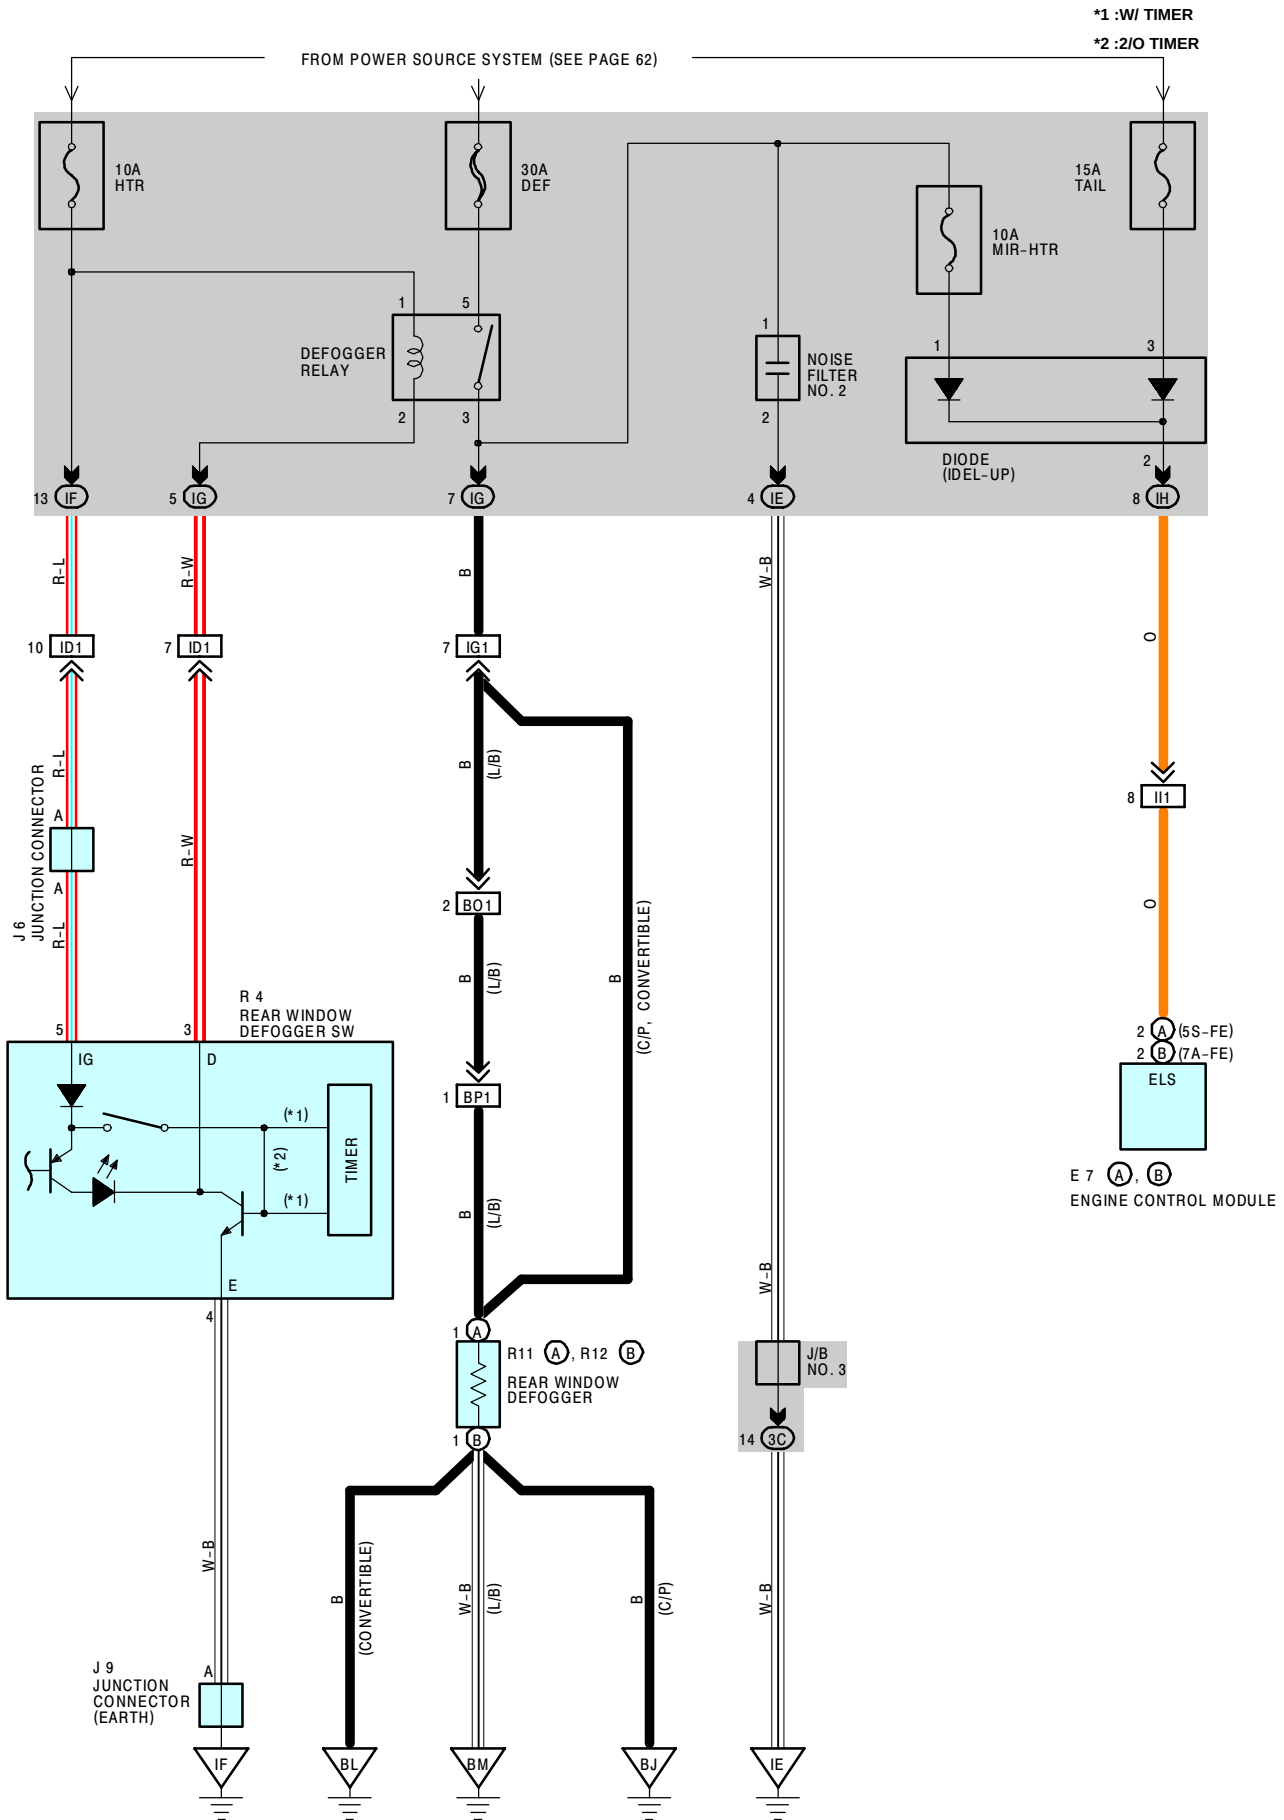

REAR WINDOW DEFOGGER



SERVICE HINTS

DEFOGGER RELAY

5-3 : CLOSED WITH THE IGNITION SW AT **ON** POSITION AND THE DEFOGGER SW ON

R 4 REAR WINDOW DEFOGGER

5-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION

4-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
E7	A	32 (5S-FE)	J9		33	R11	A	37 (CONVERTIBLE)
	B	32 (7A-FE)	R4		33		R12	B
J6		33	R11	A	34 (L/B), 35 (C/P)			

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
IE	20	INSTRUMENT PANEL WIRE AND INPANE J/B (LEFT KICK PANEL)
IF		
IG		
IH		
3C	24	INSTRUMENT PANEL WIRE AND J/B NO. 3 (BEHIND THE INSTRUMENT PANEL CENTER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID1	42	INSTRUMENT PANEL WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	42	INSTRUMENT PANEL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
II1	44	ENGINE WIRE AND INSTRUMENT WIRE (NEAR THE ENGINE CONTROL MODULE)
BO1	46 (L/B)	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (BACK DOOR UPPER LEFT)
BP1	46 (L/B)	BACK DOOR NO. 2 WIRE AND BACK DOOR NO. 1 WIRE (BACK DOOR UPPER LEFT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	42	INSTRUMENT PANEL BRACE LH
IF	42	R/B NO. 4 SET BOLT
BJ	48 (C/P)	RIGHT REAR PILLAR
BL	50 (CONVERTIBLE)	ROOM PARTITION PANEL
BM	46 (L/B)	BACK DOOR RIGHT

(5S-FE A/T) E 7 Ⓐ DARK GRAY

