




STOP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

*1 : L/B

*2 : C/P, CONVERTIBLE

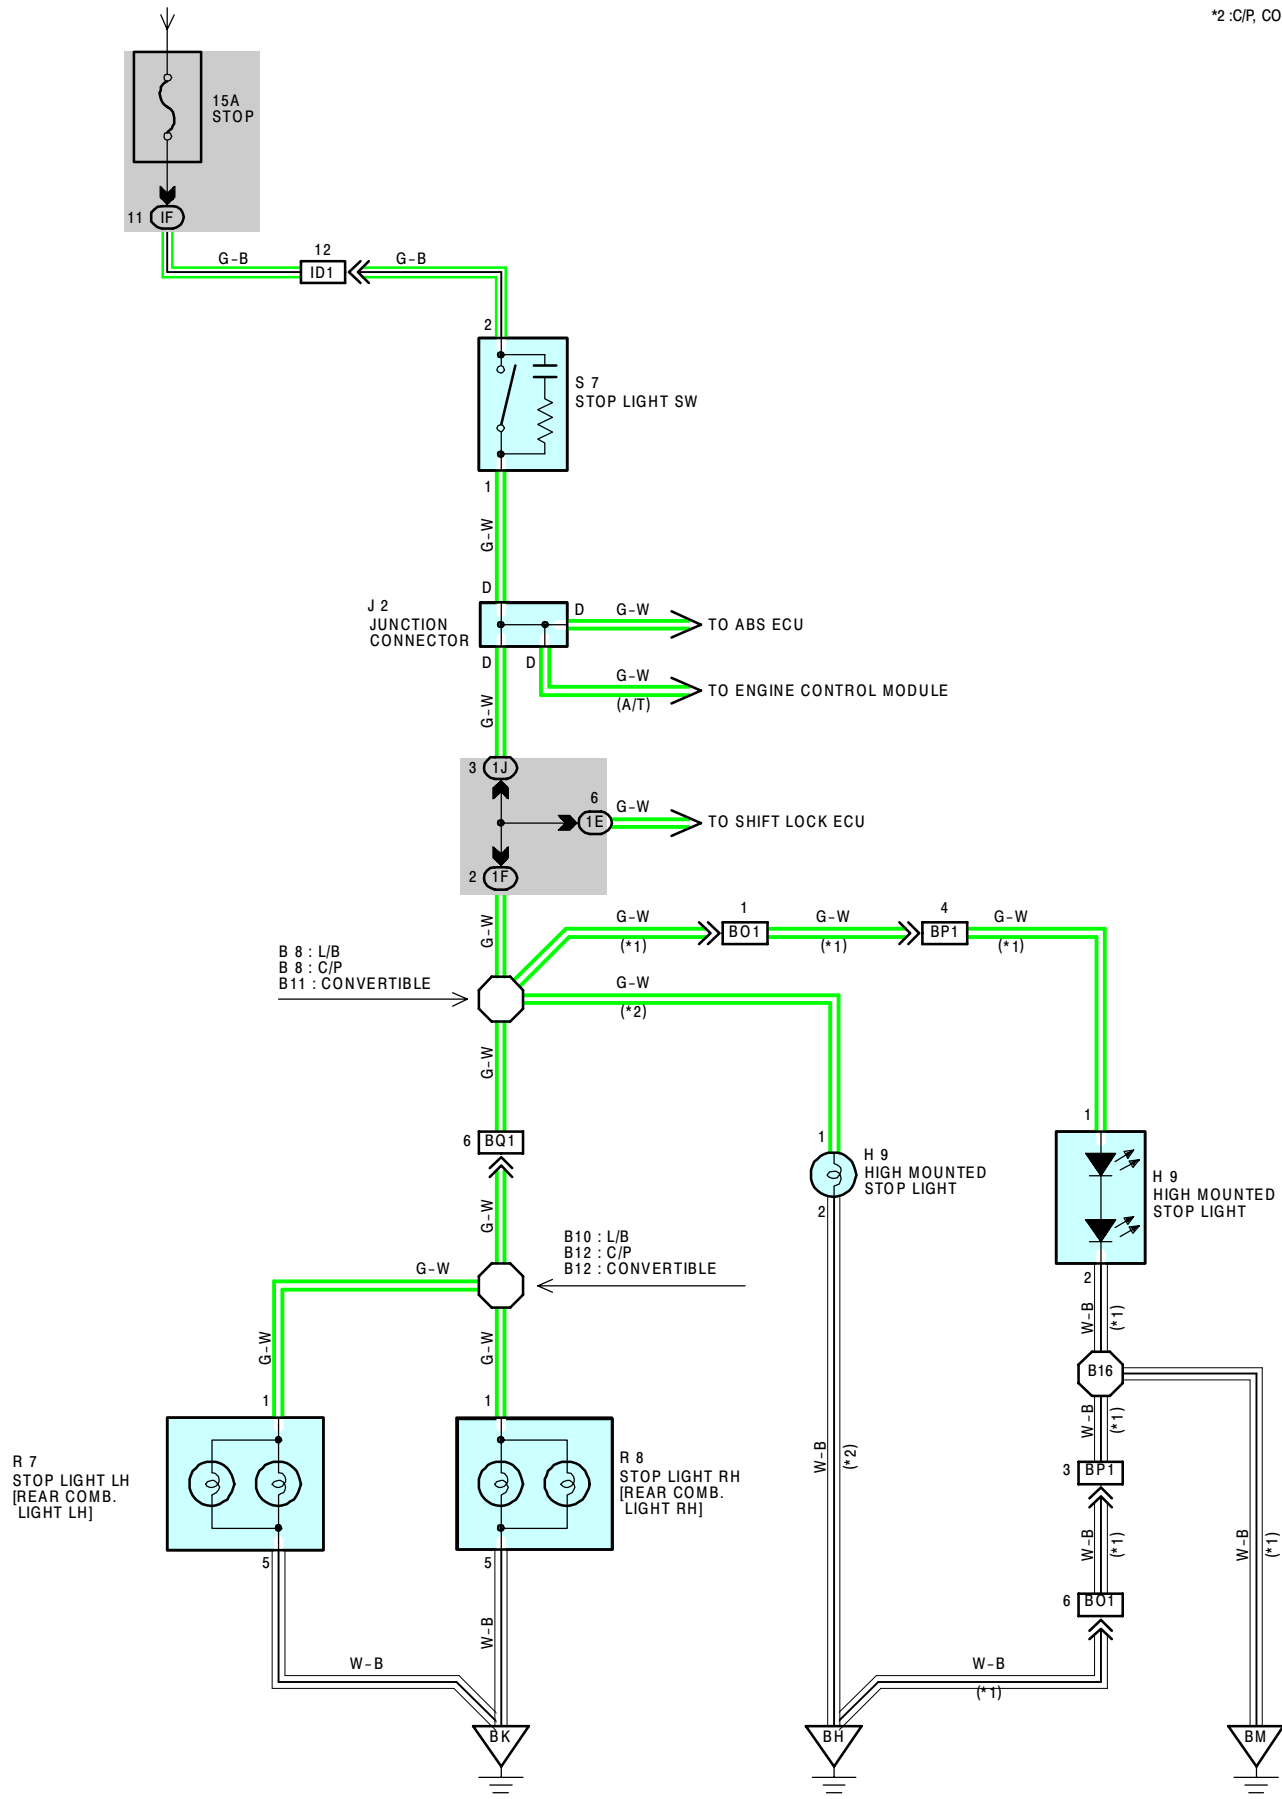

SERVICE HINTS

S 7 STOP LIGHT SW

2-1 : CLOSED WITH THE BRAKE PEDAL DEPRESSED

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
H 9	34 (L/B), 35 (C/P)	R 7	34 (L/B), 35 (C/P)	R 8	37 (CONVERTIBLE)
	36 (CONVERTIBLE)		37 (CONVERTIBLE)	S 7	33
J 2	33	R 8	34 (L/B), 35 (C/P)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
IF	20	INSTRUMENT PANEL WIRE AND INPANE J/B (LEFT KICK PANEL)
1E	22	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT KICK PANEL)
1F	22	FLOOR WIRE AND J/B NO.1 (LEFT KICK PANEL)
1J	22	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID1	42	INSTRUMENT PANEL WIRE AND COWL WIRE (LEFT KICK PANEL)
BO1	46 (L/B)	BACK DOOR NO.1 WIRE AND FLOOR WIRE (BACK DOOR UPPER LEFT)
BP1	46 (L/B)	BACK DOOR NO.2 WIRE AND BACK DOOR NO.1 WIRE (BACK DOOR UPPER LEFT)
BQ1	46 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE ROOM LEFT)
	48 (C/P) 50 (CONVERTIBLE)	

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BH	46 (L/B)	UNDER THE LEFT CENTER PILLAR
	48 (C/P)	
	50 (CONVERTIBLE)	
BK	46 (L/B)	BACK DOOR CENTER
	48 (C/P)	
	50 (CONVERTIBLE)	
BM	46 (L/B)	BACK DOOR RIGHT

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 8	46 (L/B)	FLOOR WIRE	B12	48 (C/P) 50 (CONVERTIBLE)	LUGGAGE ROOM WIRE
	48 (C/P)				
B10	46 (L/B)	LUGGAGE ROOM WIRE	B16	46 (L/B)	BACK DOOR NO.2 WIRE
B11	50 (CONVERTIBLE)	FLOOR WIRE			

(L/B) H 9




(C/P) H 9



(CONVERTIBLE) H 9




J 2

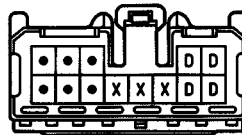


(HINT:SEE PAGE 7)

 
R 7



R 8

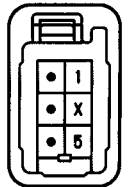

(W/ CRUISE CONTROL) S 7

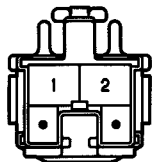

(W/O CRUISE CONTROL) S 7

