




TAILLIGHT

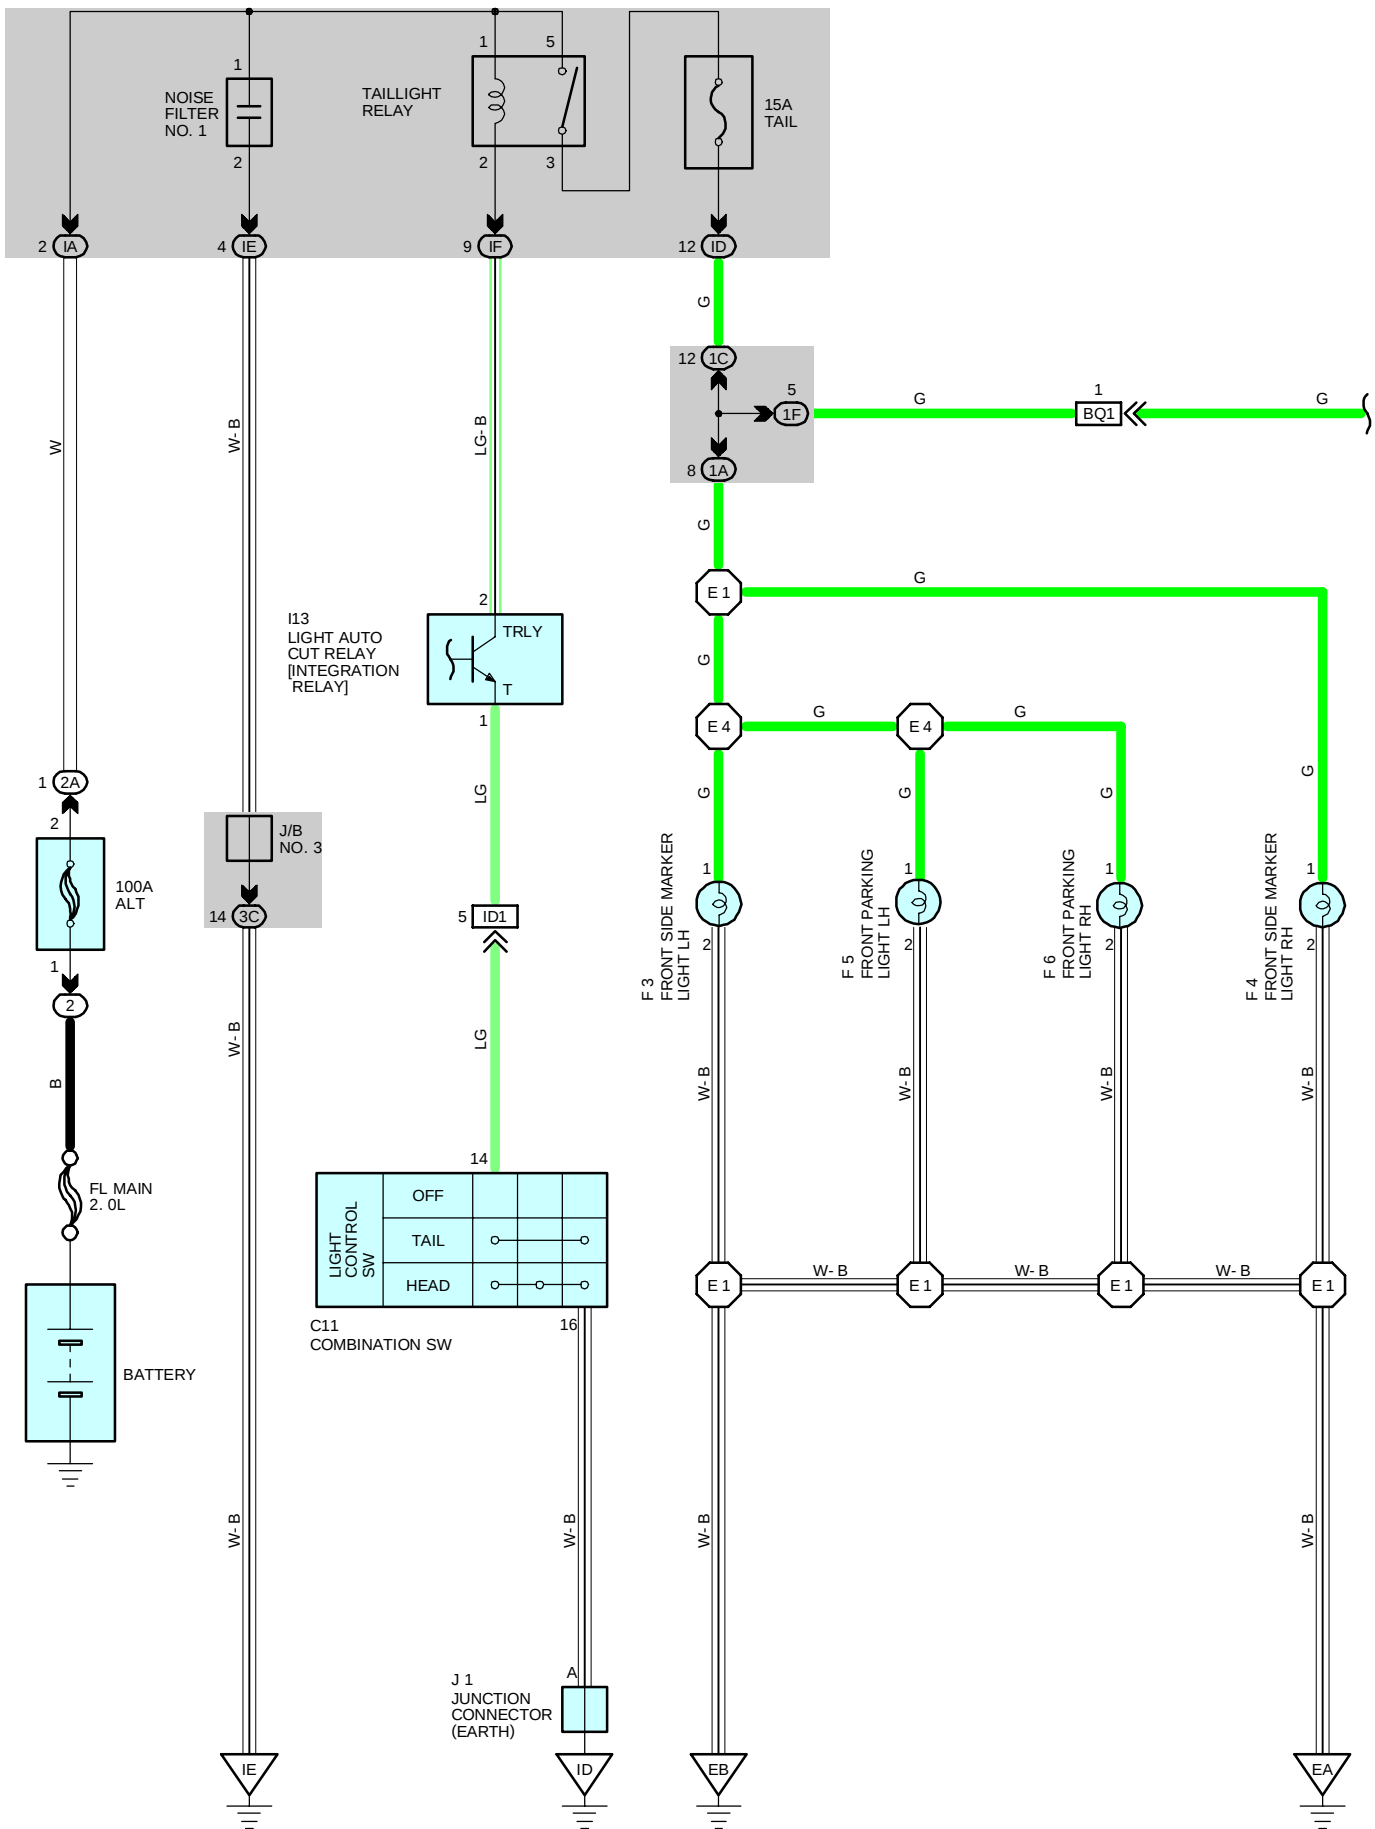





TAILLIGHT

SERVICE HINTS

TAILLIGHT RELAY

5-3 : CLOSED WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C11	32	I13	33	R7	37 (CONVERTIBLE)
F3	28 (5S-FE), 30 (7A-FE)	J1	33	R8	34 (L/B), (35 (C/P)
F4	28 (5S-FE), 30 (7A-FE)	L1	34 (L/B), (35 (C/P)		37 (CONVERTIBLE)
F5	28 (5S-FE), 30 (7A-FE)		36 (CONVERTIBLE)		
F6	28 (5S-FE), 30 (7A-FE)	R7	34 (L/B), 35 (C/P)		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	26	ENGINE COMPARTMENT LEFT

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
IA	20	ENGINE ROOM MAIN WIRE AND INPANE J/B (LEFT KICK PANEL)
ID	20	INSTRUMENT PANEL WIRE AND INPANE J/B (LEFT KICK PANEL)
IE		
IF		
1A	22	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1C	22	INSTRUMENT PANEL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1F	22	FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2A	26	ENGINE ROOM MAIN WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT)
3C	24	INSTRUMENT PANEL WIRE AND J/B NO. 3 (BEHIND THE INSTRUMENT PANEL CENTER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID1	42 (C/P)	INSTRUMENT PANEL WIRE AND COWL WIRE (LEFT KICK PANEL)
BQ1	46 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE ROOM LEFT)
	48 (C/P)	
	50 (CONVERTIBLE)	

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	38 (5S-FE)	FRONT SIDE OF RIGHT FENDER
	40 (7A-FE)	
EB	38 (5S-FE)	FRONT SIDE OF LEFT FENDER
	40 (7A-FE)	
ID	42	LEFT KICK PANEL
IE	42	INSTRUMENT PANEL BRACE LH
BK	46 (L/B)	BACK DOOR CENTER
	48 (C/P)	
	50 (CONVERTIBLE)	

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E1	38 (5S-FE)	ENGINE ROOM MAIN WIRE	B10	46 (L/B)	LUGGAGE ROOM WIRE
	40 (7A-FE)		B12	48 (C/P)	
E4	38 (5S-FE)			50 (CONVERTIBLE)	
	40 (7A-FE)				

