




FROM POWER SOURCE SYSTEM (SEE PAGE 62)

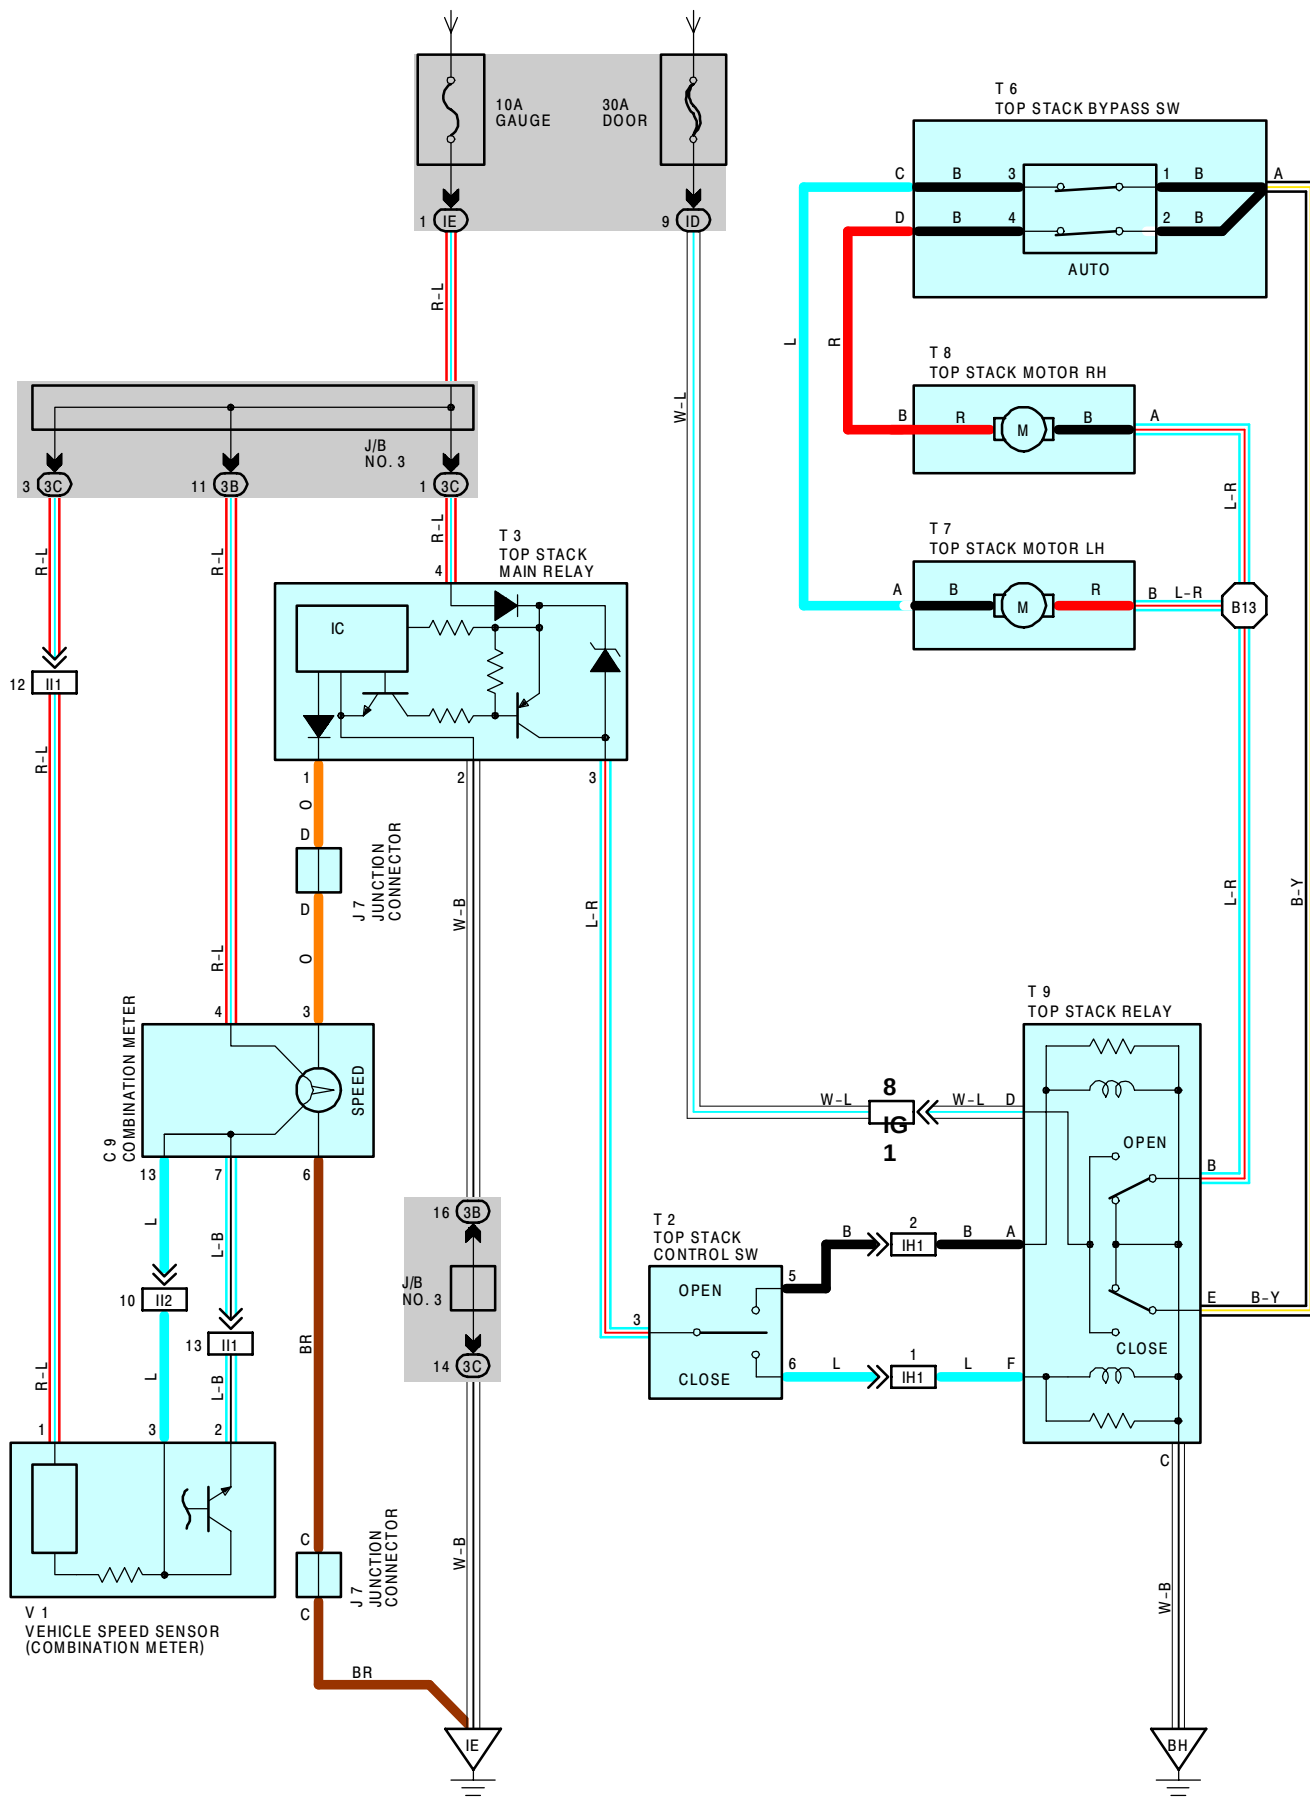

SERVICE HINTS

T 2 TOP STACK CONTROL SW

- 3-5 : CLOSED WITH THE TOP STACK SW AT **OPEN** POSITION
- 3-6 : CLOSED WITH THE TOP STACK SW AT **CLOSE** POSITION

T 3 TOP STACK MAIN RELAY

- 4-GROUND : APPROX. **12** VOLTS WITH THE IGNITION SW AT **ON** POSITION
- 1-GROUND : **4** PULSE WITH **1** ROTATION OF ROTOR SHAFT
- 2-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 9	32	T 3	33	T 8	37
J 7	33	T 6	37	T 9	37
T 2	33	T 7	37	V 1	29 (5S-FE)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
ID	20	INSTRUMENT PANEL AND FLOOR WIRE (LEFT KICK PANEL)
IE		
3B	24	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)
3C		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG1	42	INSTRUMENT PANEL WIRE AND FLOOR WIRE WIRE (LEFT KICK PANEL)
IH1	42	FLOOR WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
II1	44	ENGINE WIRE AND INSTRUMENT PANEL WIRE (NEAR THE ENGINE CONTROL MODULE)
II2		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	42	INSTRUMENT PANEL BRACE LH
BH	50 (CONVERTIBLE)	UNDER THE LEFT CENTER PILLAR

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B13	50 (CONVERTIBLE)	FLOOR WIRE			

