


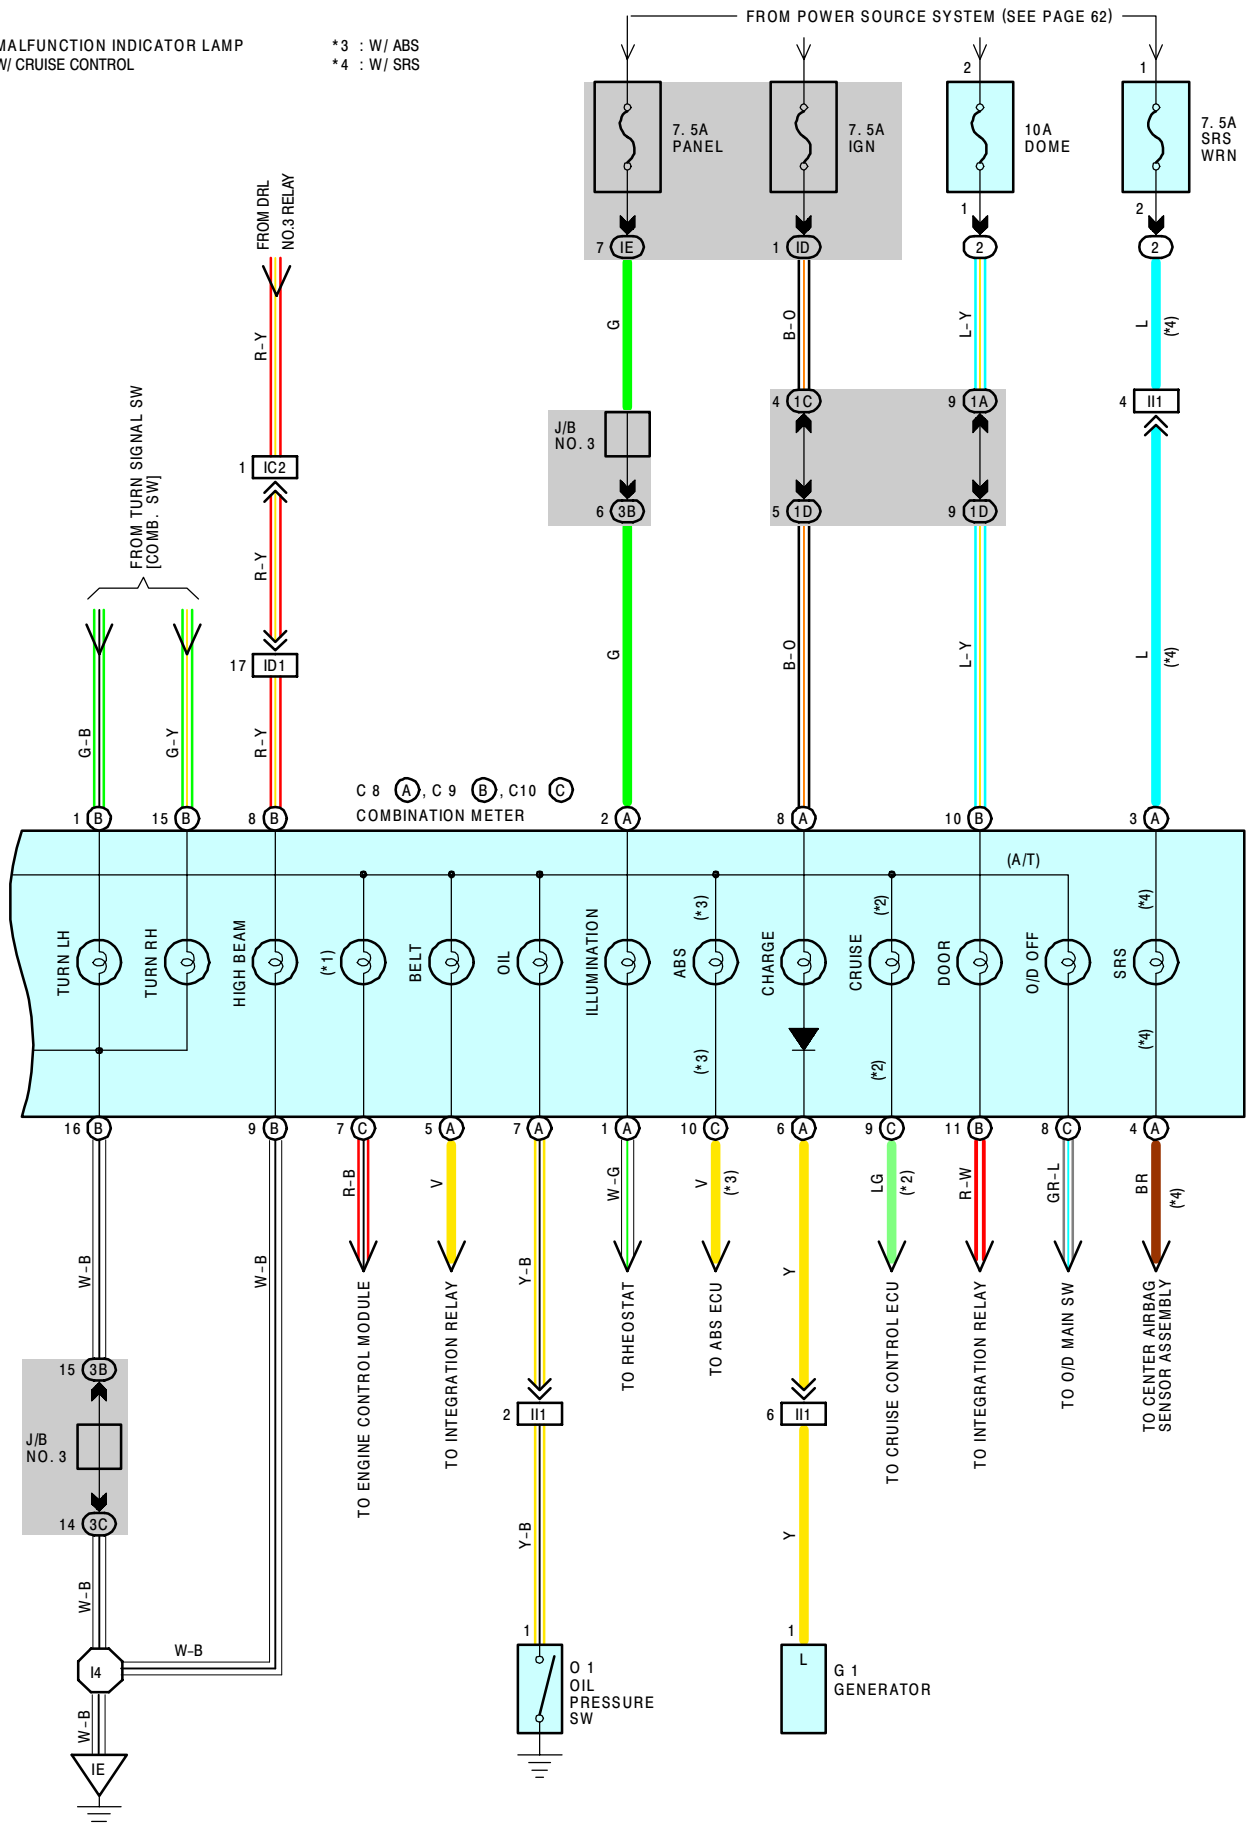

*1 : MALFUNCTION INDICATOR LAMP
 *2 : W/ CRUISE CONTROL

*3 : W/ ABS
 *4 : W/ SRS





COMBINATION METER (CANADA)

SERVICE HINTS

B 2 BRAKE FLUID LEVEL WARNING SW

1-2: CLOSED WITH THE FLOAT DOWN

P 2 PARKING BRAKE SW

1-GROUND : CLOSED WITH THE PARKING BRAKE LEVER PULLED UP

O 1 OIL PRESSURE SW

1-GROUND : OPENED WITH THE OIL PRESSURE ABOVE APPROX. 0.2 KG/CM² (2.8 PSI, 19.6 KPA)

W 2 WATER TEMP. SENDER

1-GROUND : APPROX. 160-240 Ω (50°C, 122°F)
APPROX. 17.1-20.4 Ω (120°C, 248°F)

F10 FUEL SENDER

1-2 : APPROX. 3 Ω AT FUEL FULL
APPROX. 110 Ω AT FUEL EMPTY

C 8 (A), C 9 (B), C10 (C) COMBINATION METER

(A) 8, (B) 4-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT ON POSITION

(B) 6, (B) 9, (B) 16, (C) 4 -GROUND : ALWAYS CONTINUITY

(A) 3, (B) 10-GROUND : ALWAYS APPROX. 12 VOLTS

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B2	28 (5S-FE) 30 (7A-FE)	D3	32	P1	29 (5S-FE) 31 (7A-FE)
C7	32	F10	34 (L/B)	P2	33
C8	A 32	G1	28 (5S-FE) 30 (7A-FE)	V1	29 (5S-FE) 31 (7A-FE)
C9	B 32	J7	33	W2	29 (5S-FE) 31 (7A-FE)
C10	C 32	O1	29 (5S-FE) 31 (7A-FE)		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	26	R/B NO. 2 (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
ID		
IE	20	INSTRUMENT PANEL WIRE AND INPANE J/B (LEFT KICK PANEL)
IF		
1A	22	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1C		
1D	22	INSTRUMENT PANEL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1J	22	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)
3B		
3C	24	INSTRUMENT PANEL WIRE AND J/B NO. 3 (BEHIND THE INSTRUMENT PANEL CENTER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC2	42	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
ID1	42	INSTRUMENT PANEL WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	42	INSTRUMENT PANEL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
II1		
II2	44	ENGINE WIRE AND INSTRUMENT PANEL WIRE (NEAR THE ENGINE CONTROL MODULE)
IJ1	44	ENGINE WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	38 (5S-FE) 40 (7A-FE)	FRONT SIDE OF LEFT FENDER
EC	38 (5S-FE) 40 (7A-FE)	INTAKE MANIFOLD
IE	42	INSTRUMENT PANEL BRACE LH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I4	44	INSTRUMENT PANEL WIRE			


B 2 GRAY




C 7




C 8 (A) BLUE

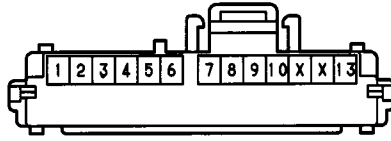


C 9 (B)

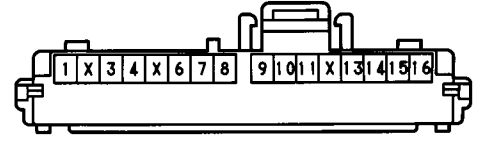

C10 (C) GRAY

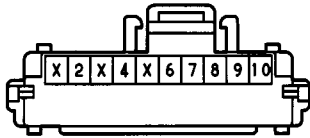


D 3 GRAY

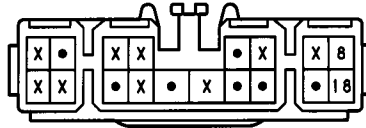


F10 DARK GRAY



G 1 BLACK

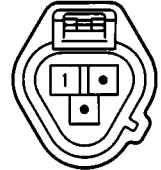


J 7

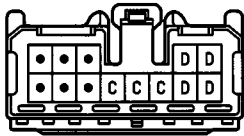


(HINT: SEE PAGE 7)

O 1 BLACK

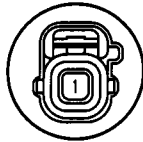

P 1 GRAY

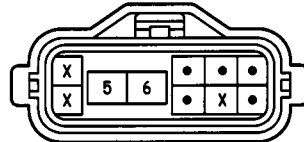

P 2 BLACK



V 1 BLACK



W 2 GRAY

