




ELECTRIC TENSION REDUCER

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

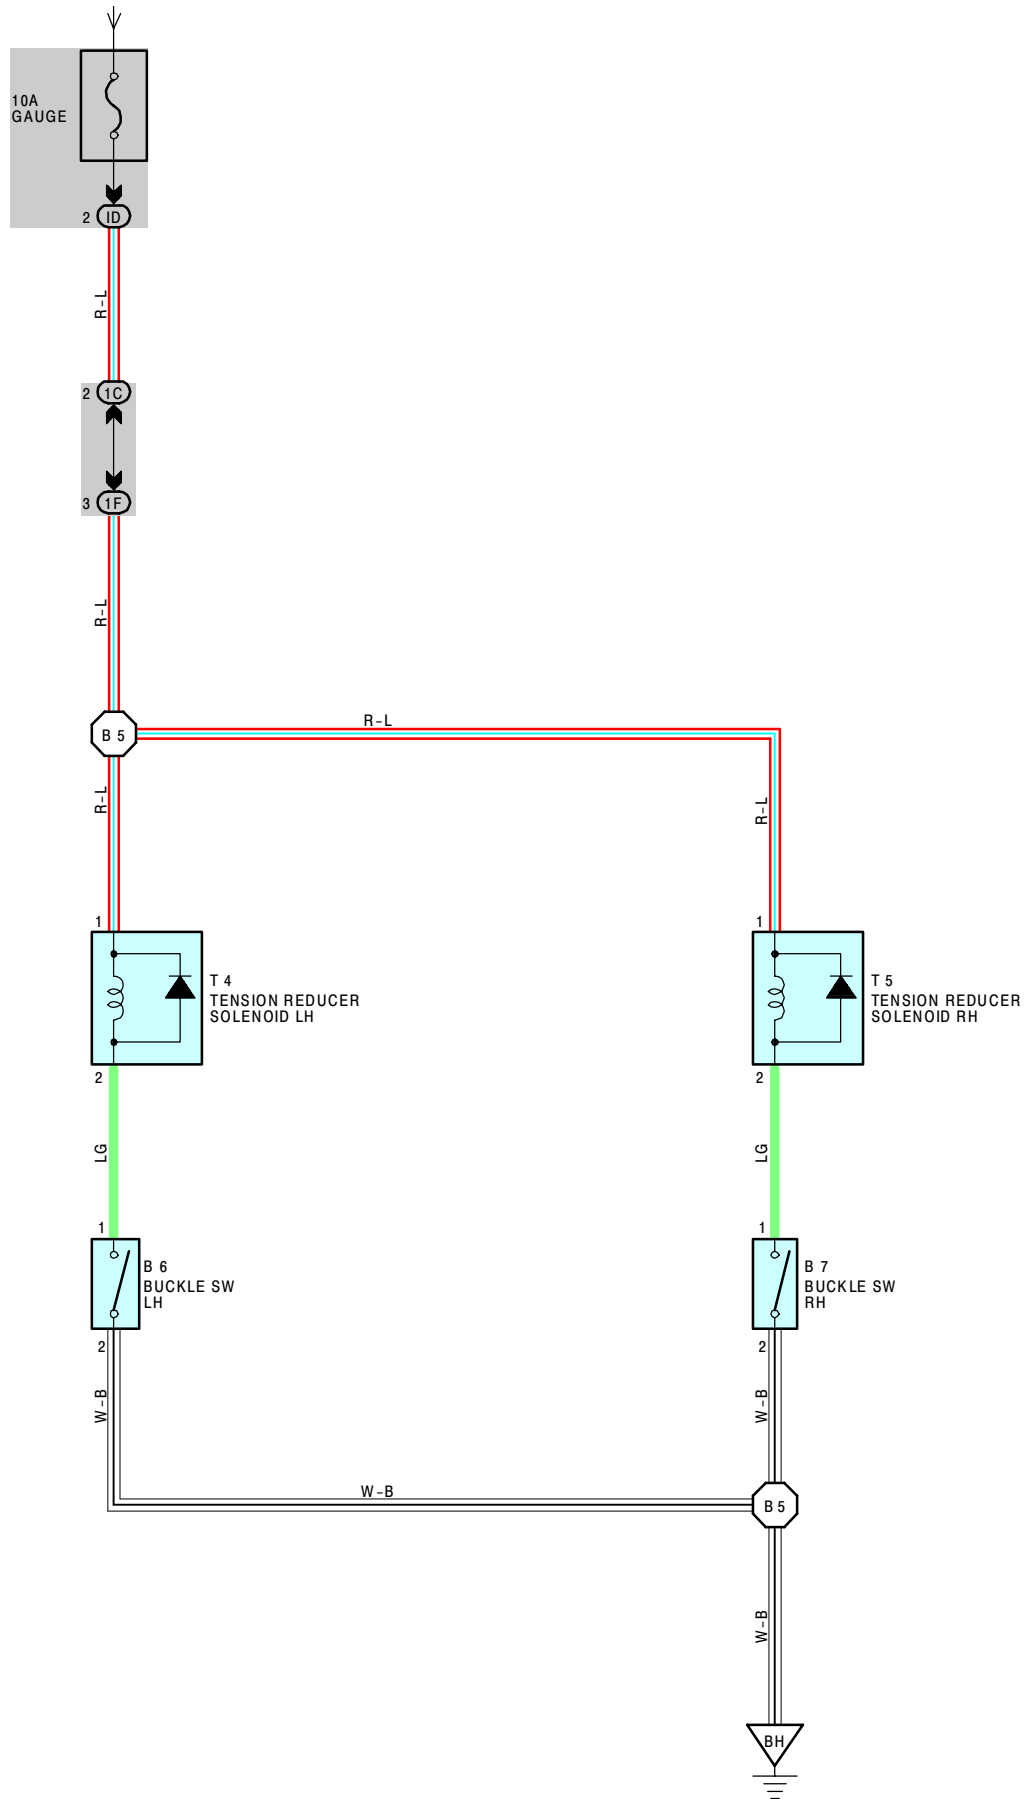

SERVICE HINTS

B 6 BUCKLE SW LH

1-2 : CLOSED WITH THE DRIVER'S SEAT BELT IN USE

B 7 BUCKLE SW RH

1-2 : CLOSED WITH THE PASSENGER'S SEAT BELT IN USE

T 4, T 5 TENSION REDUCER SOLENOID LH, RH

1-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 6	34 (L/B), 35 (C/P)	B 7	36 (CONVERTIBLE)	T 5	34 (L/B), 35 (C/P)
	36 (CONVERTIBLE)	T 4	34 (L/B), 35 (C/P)		37 (CONVERTIBLE)
B 7	34 (L/B), 35 (C/P)	T 4	37 (CONVERTIBLE)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
ID	20	INSTRUMENT PANEL WIRE AND INPANE J/B (LEFT KICK PANEL)
1C	22	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT KICK PANEL)
1F	22	FLOOR WIRE AND J/B NO.1 (LEFT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BH	46 (L/B)	UNDER THE LEFT CENTER PILLAR
	48 (C/P)	
	50 (CONVERTIBLE)	


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 5	46 (L/B)	FLOOR WIRE	B 5	50 (CONVERTIBLE)	FLOOR WIRE
	48 (L/B)				

B 6



 B 7



T 4



T 5

