



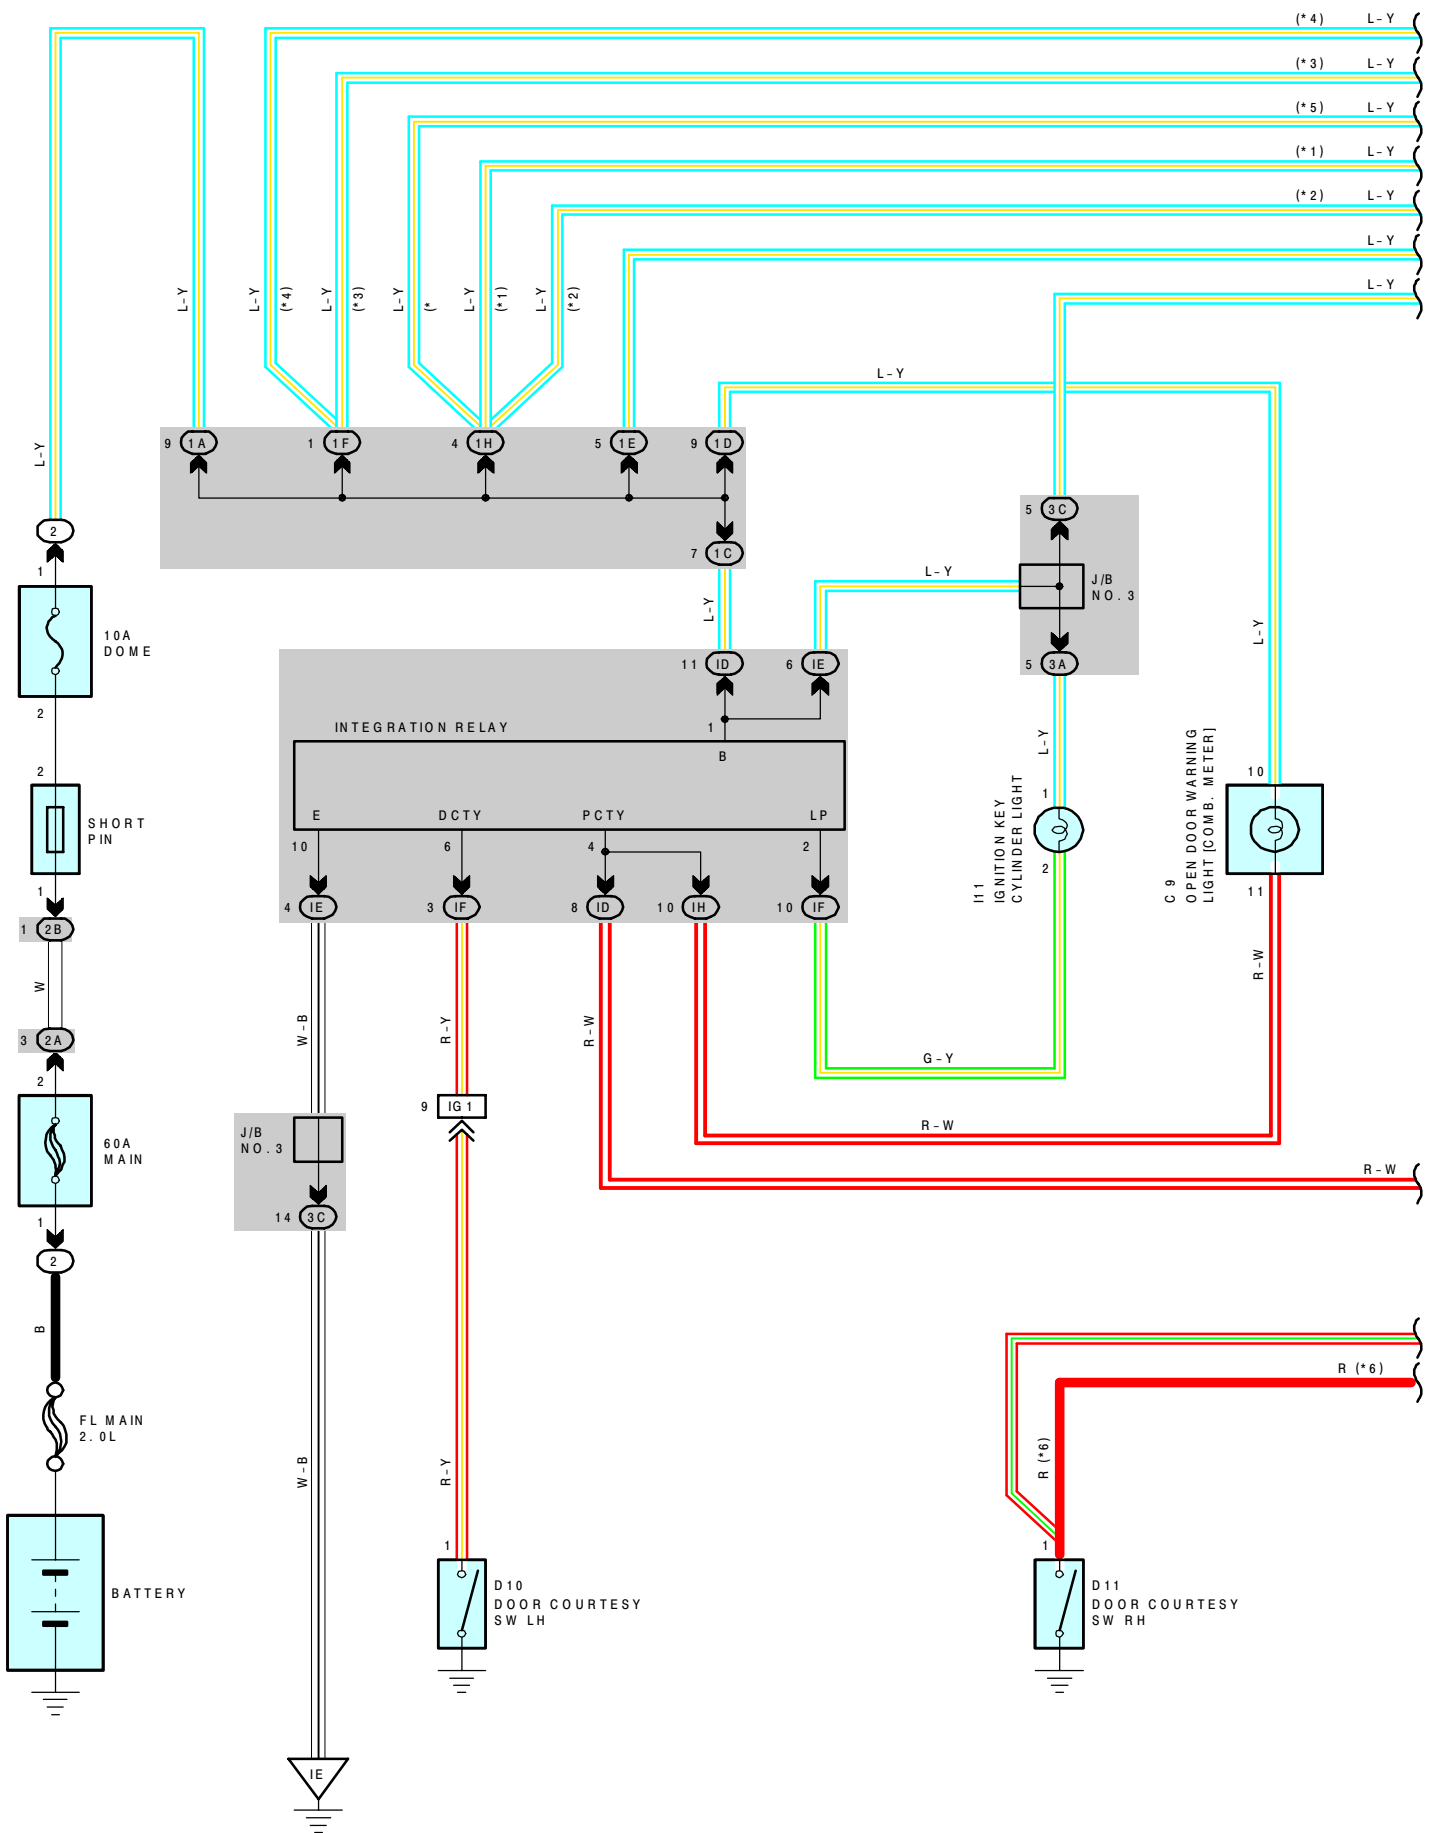

INTERIOR LIGHT



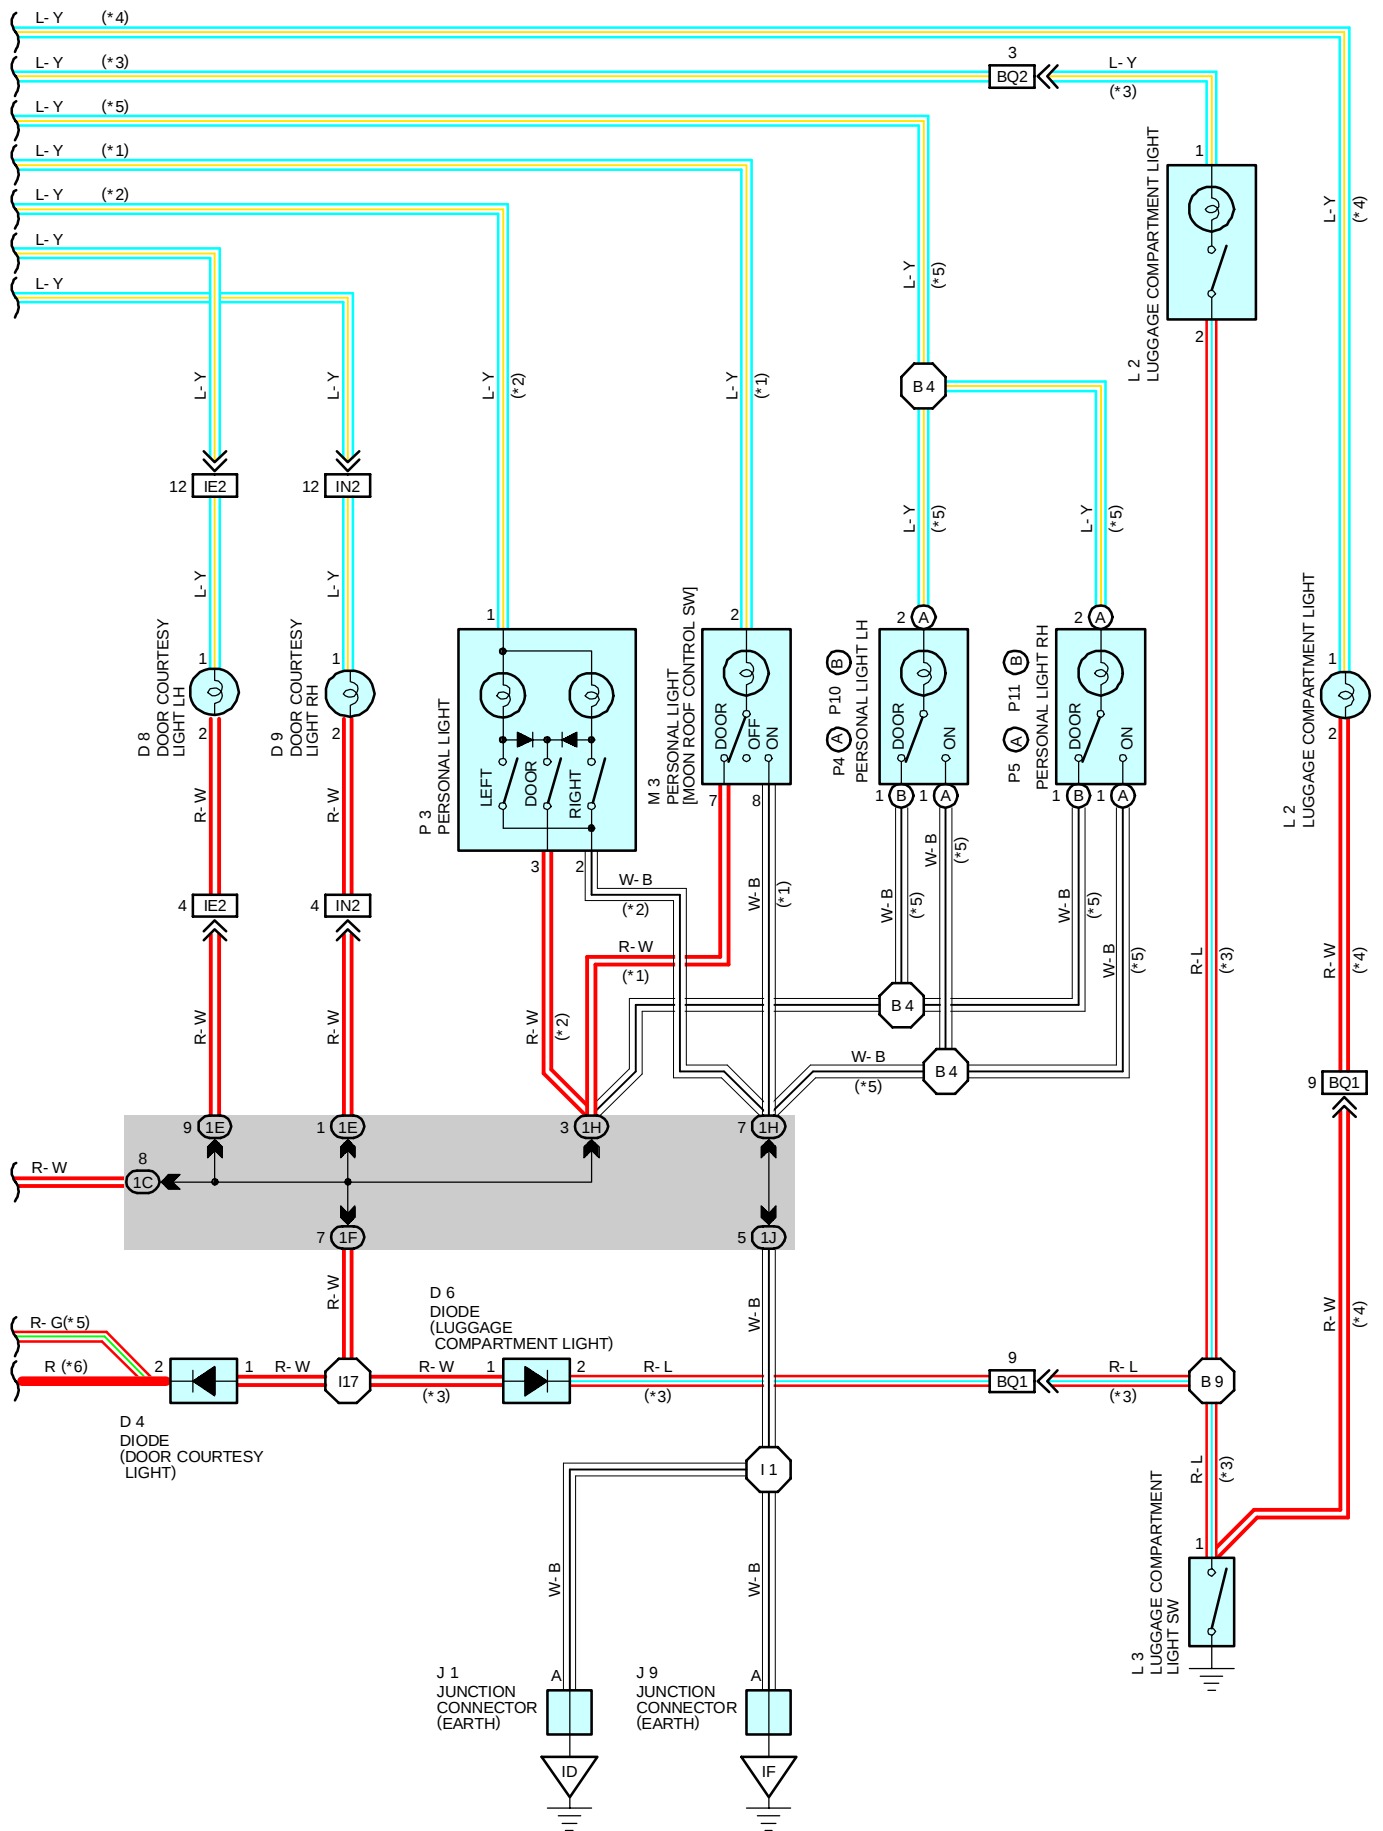



INTERIOR LIGHT

SERVICE HINTS

INTEGRATION RELAY

- 1-GROUND : ALWAYS APPROX. **12** VOLTS
- 6-GROUND : CONTINUITY WITH THE LH DOOR OPEN
- 4-GROUND : CONTINUITY WITH THE RH DOOR OPEN

D10, D11 DOOR COURTESY SW LH, RH

- 1-GROUND : CLOSED WITH THE DOOR OPEN

L 3 LUGGAGE COMPARTMENT LIGHT SW

- 1-GROUND : CLOSED WITH THE LUGGAGE COMPARTMENT DOOR OPEN

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 9	32	D10	36 (CONVERTIBLE)	L 3	34 (L/B), 35 (C/P)
D 4	32	D11	34 (L/B), 35 (C/P)		36 (CONVERTIBLE)
D 6	32		36 (CONVERTIBLE)	M 3	34 (L/B), 35 (C/P)
D 8	34 (L/B), 35 (C/P)	I11	33	P 3 34 (L/B), 35 (C/P)	
	36 (CONVERTIBLE)	J 1	33	P 4	A 36 (CONVERTIBLE)
D 9	34 (L/B), 35 (C/P)	J 9	33	P 5	A 36 (CONVERTIBLE)
	36 (CONVERTIBLE)	L 2	34 (L/B), 35 (C/P)	P10	B 36 (CONVERTIBLE)
D10	34 (L/B), 35 (C/P)		36 (CONVERTIBLE)	P11	B 36 (CONVERTIBLE)

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	26	ENGINE COMPARTMENT LEFT

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
ID	20	INSTRUMENT PANEL WIRE AND INPANE J/B (LEFT KICK PANEL)
IE		
IF		
IH		
1A	22	ENGINE ROOM MAIN WIRE AND J/B NO.1 (LEFT KICK PANEL)
1C	22	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT KICK PANEL)
1D		
1E		
1F		
1H	22	ROOF WIRE AND J/B NO.1 (LEFT KICK PANEL)
1J	22	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)
2A	26	ENGINE ROOM MAIN WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT)
2B		
3A	24	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)
3C		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE2	42	FRONT DOOR LH WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
IG1	42	INSTRUMENT PANEL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IN2	44	FRONT DOOR RH WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
BQ1	46 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE ROOM LEFT)
	48 (C/P)	
	50 (CONVERTIBLE)	
BQ2	46 (L/B)	

: GROUND POINTS


CODE	SEE PAGE	GROUND POINTS LOCATION
ID	42	LEFT KICK PANEL
IE	42	INSTRUMENT PANEL BRACE LH
IF	42	R/B NO.4 SET BOLT



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 1	44	COWL WIRE	B 4	50 (CONVERTIBLE)	ROOF WIRE
I 17	44	FLOOR WIRE	B 9	46 (L/B)	LUGGAGE ROOM WIRE

C 9

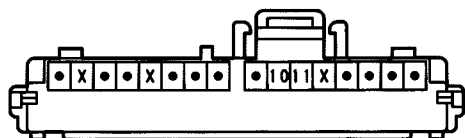

D 4



D 6



D 8 GRAY



D 9 GRAY



D10




D11



I11




J 1

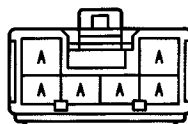

(HINT:SEE PAGE 7)

 J 9




(HINT:SEE PAGE 7)

(*3) L 2



 (*5) L 2




(C/P) L 2




L 3 GRAY



 (*1) M 3




(*2) P 3

 

P 4 (A)



 P 5 (A)



P10 (B)



P11 (B)



*1 : W/ MOON ROOF *4 : C/P, CONVERTIBLE
*2 : W/O MOON ROOF *5 : CONVERTIBLE
*3 : L/B