



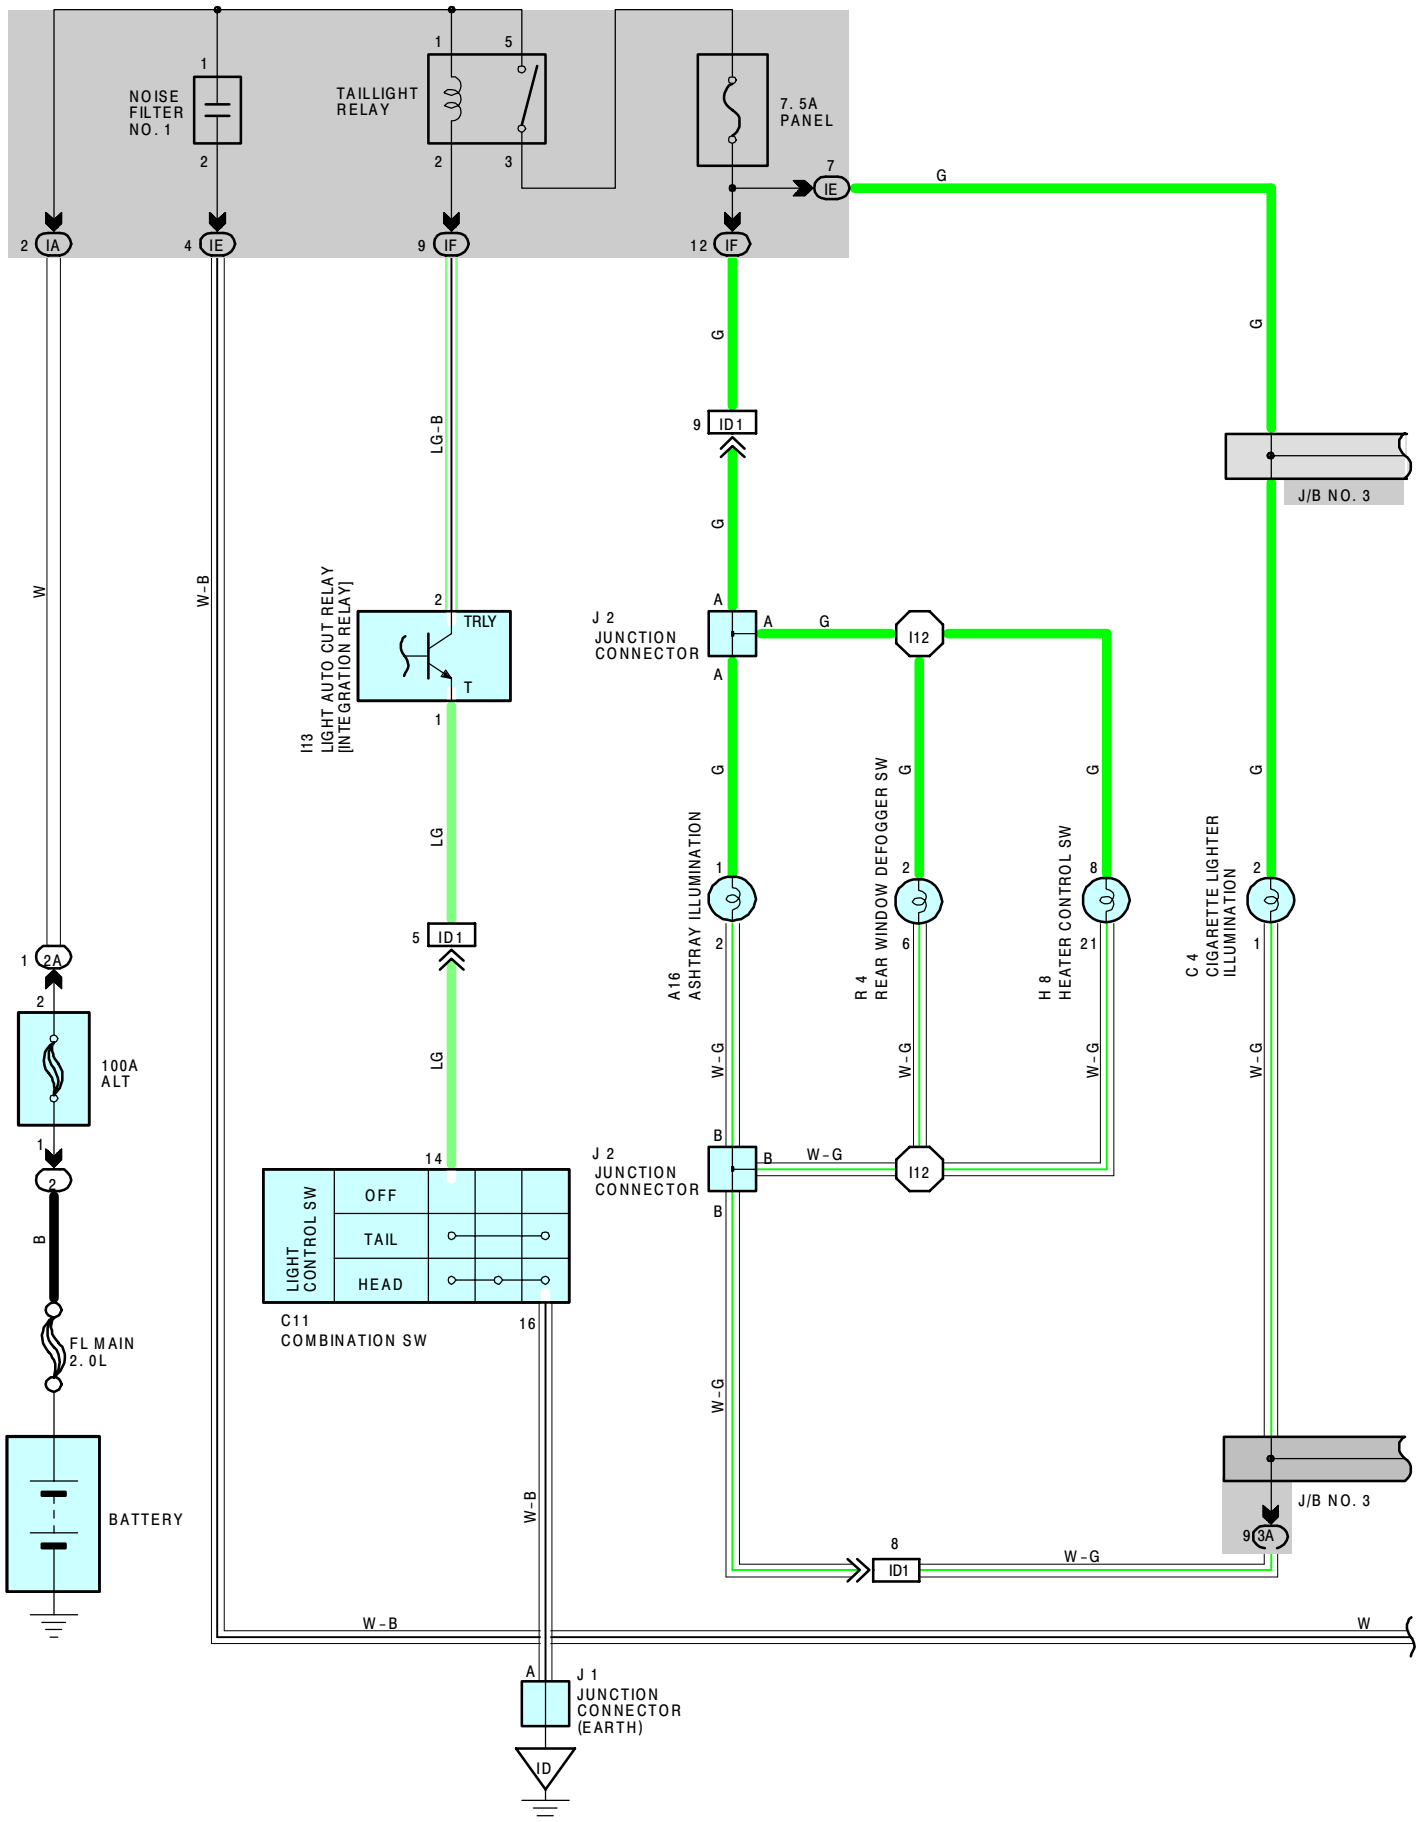

ILLUMINATION

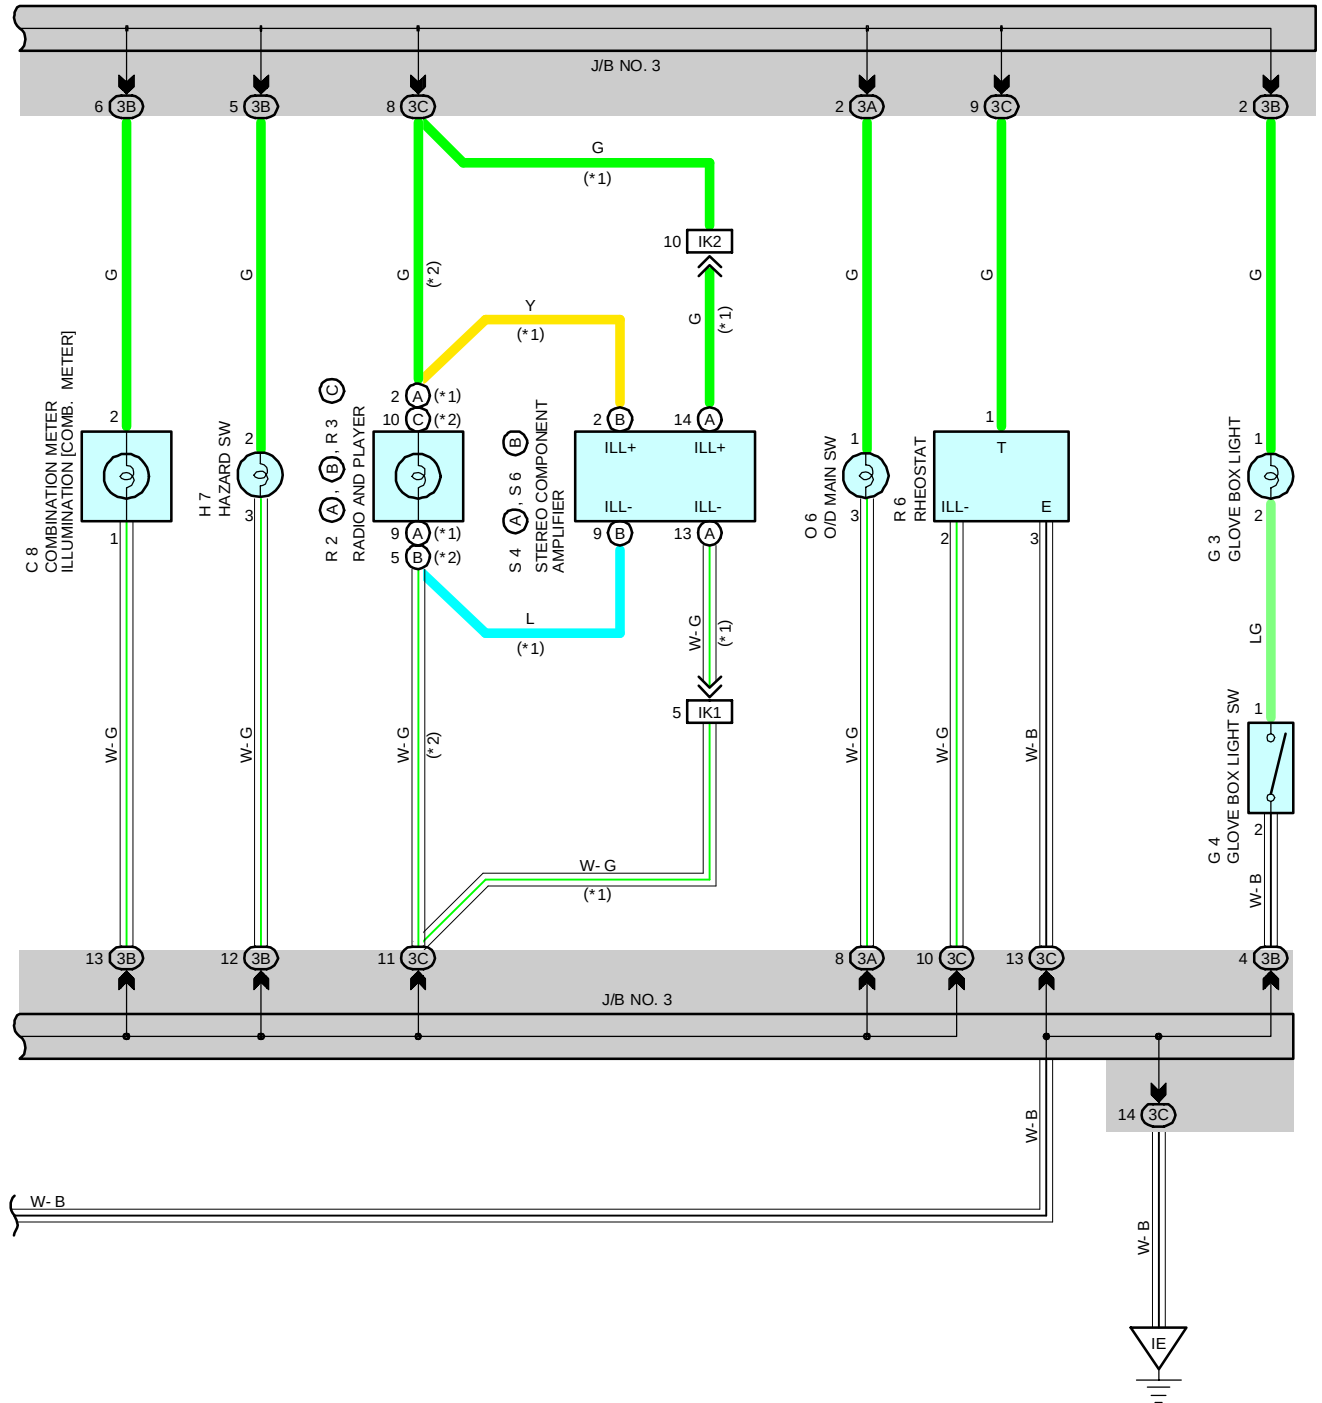

*1 : SEPARATE TYPE AMPLIFIER
 *2 : BUILT-IN TYPE AMPLIFIER





ILLUMINATION

SERVICE HINTS

TAILLIGHT RELAY

5-3 : CLOSED WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

C11 LIGHT CONTROL SW [COMB. SW]

14-16 : CLOSED WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A16	32	H 8	33	R 3	C 33
C 4	32	I13	33	R 4	33
C 8	32	J 1	33	R 6	33
C11	32	J 2	33	S 4	A 33
G 3	32	O 6	33	S 6	B 33
G 4	32	R 2	A 33		
H 7	33		B 33		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	26	ENGINE COMPARTMENT LEFT

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
IA	20	ENGINE ROOM MAIN WIRE AND INPANE J/B (LEFT KICK PANEL)
IE	20	INSTRUMENT PANEL WIRE AND INPANE J/B (LEFT KICK PANEL)
IF		
2A	26	ENGINE ROOM MAIN WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT)
3A	24	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)
3B		
3C		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID1	42	INSTRUMENT PANEL WIRE AND COWL WIRE (LEFT KICK PANEL)
IK1	44	INSTRUMENT PANEL WIRE AND FLOOR NO.3 WIRE (BEHIND THE RADIO AND PLAYER)
IK2		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	42	LEFT KICK PANEL
IE	42	INSTRUMENT PANEL BRACE LH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I12	44	COWL WIRE			

*1 : SEPARATE TYPE AMPLIFIER

*2 : BUILT-IN TYPE AMPLIFIER


A16




C 4



C 8 BLUE

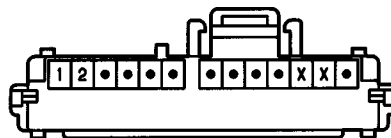

C11

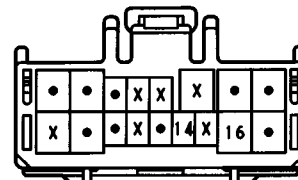

G 3



 
G 4 BLACK



H 7 BLACK




H 8 ORANGE



I13




J 1

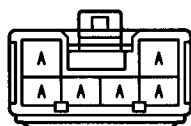

(HINT:SEE PAGE 7)

J 2

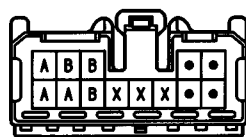


(HINT:SEE PAGE 7)

O 6 BLUE




(*1) R 2 (A)

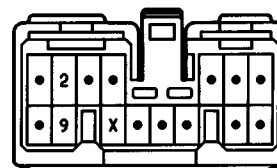

(*2) R 2 (B) BLUE



 R 3 (C) BLUE




R 4



R 6 BLACK



S 4 (A)

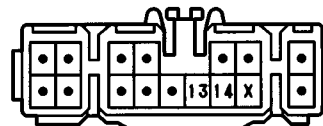

S 6 (B) BLUE

