
REAR WINDOW DEFOGGER

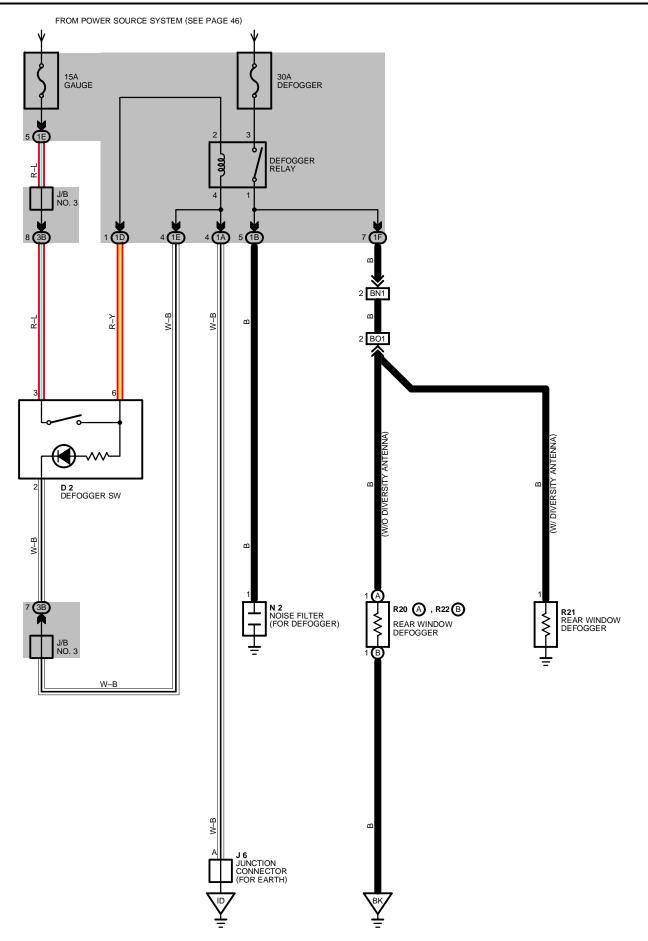

SERVICE HINTS

DEFOGGER RELAY

1-3 : CLOSED WITH IGNITION SW ON AND DEFOGGER SW ON

D 2 DEFOGGER SW

- 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON POSITION
- 2-GROUND: ALWAYS CONTINUITY

O : PARTS LOCATION

•							
CODE	SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
D 2	26	N 2		26	R21		27
J 6	26	R20	А	27	R22	В	27

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)	
1A			
1B	- 18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)	
1D			
1E			
1F	18	FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)	
3B	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)	

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)	
BN1	34	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LEFT SIDE OF PACKAGE TRAY TRIM)	
B01	34	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)	

7 : GROUND POINTS

_	•		
	CODE	SEE PAGE	GROUND POINTS LOCATION
	ID	30	LEFT KICK PANEL
	BK	34	BACK DOOR RIGHT

D 2 BLACK

J 6

N 2



R21





(HINT : SEE PAGE 7)



